


enLOGIC by nVent

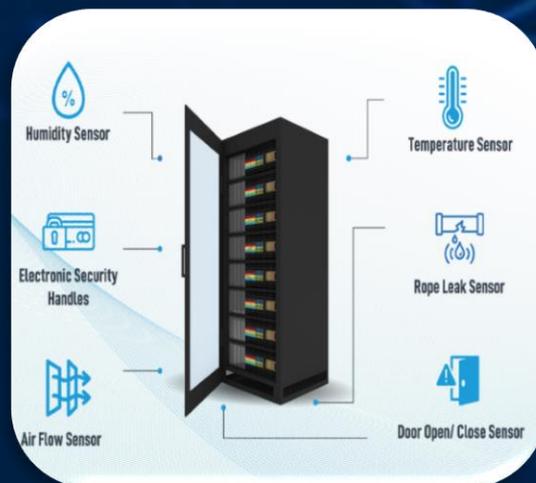

Advantage & Secure

Power Distribution Units

USER MANUAL VERSION 1.0

Table of Contents

Safety Instruction

General Safety Instructions	8
Installation and Operation Safety Instructions.....	8
Safety Instructions – Disclaimer.....	9
Safety Symbols.....	10
Safety Information for Operators	11
Product Labels and Standards	12
References and Architecture Specifications.....	13
Related Documents	13
Electromagnetic Compatibility.....	13
CE / UKCA Compliance.....	13
General Installation.....	14
Unpacking	14
Initial Operation	14
UL 2900 Certified by UL CAP.....	15
Product & Documents.....	16
Regions Supported.....	17

Products & Components

Product Description.....	19
Single-Phase Models.....	20
Three-Phase Models	20
iPDU & its Components.....	21
Product Components Network.....	22
Displays.....	23
Interfaces	23
Reset Button.....	24
Advanced Network Management Controller (NMC) Network Security.....	25
Encryption	25
Remote Authentication	25
Login & Password Policy	26
Certificates	26
Firmware and Conf file Encryption	26



Firmware File	26
Chain of Trust Firmware Signature.....	27
Secure Boot.....	27
Conf File.....	27
Other Vulnerabilities:	27
Network Security Hardening Guide.....	28
Recommendations.....	28
Disable all unused protocols	28
Use custom network ports where applicable	28
Disable HTTP and enable HTTPS for web support	28
Disable older versions of TLS.....	28
Disable FTPS.....	28
Disable SNMPv1 and enable SNMPv3	29
Configure SNMPv3 to use AES/SHA.....	29
Change the admin User account password	29
Enable Strong Passwords	29
Default Ports.....	30
Seven Segment LED Display.....	31
OLED Display and Network Management Controller (NMC).....	32
OLED Navigation.....	32
Main Menu Selections	33
Setup Menu	33
Network Submenu.....	34
Device Submenu	35
Screen Submenu	36
Language Submenu.....	36
USB Submenu	37
Units Submenu	38
Alarms Menu.....	38
Power Menu.....	39
Device Submenu	39



Phase Submenu 40

Breaker Submenu..... 40

Outlet Submenu 41

Sensors Menu 42

 NMC Hot Swap..... 43

Installation 43

 Installing the new NMC..... 44

Outlet Units..... 45

 Combo Outlets 45

 Combo Outlet 45

 Apollo Outlet..... 46

 Apollo Outlet..... 46

 Self- Locking Combo Outlet 47

 Self-Locking Cable & Non-Locking Cable..... 48

Getting Started

Mounting PDU in Server Cabinet 50

Connecting to Power Source..... 51

Connecting PDU to Network 51

Connecting with Serial Connection 52

Creating Unique Pinout Connection 53


Connecting Sensors (Optional) 54

Connecting Asset Management Module 56



Web User Interface

Web User Interface (UI)	58
Introduction to Web UI.....	58
Navigating through the Web UI	61
Dashboard.....	64
Total Load	64
Total Energy	65
Total Sensors.....	65
Total PDUs	66
Identification	67
Control and Manage	68
View Logs.....	69
View Data Logs.....	70
Network Settings.....	71
System Management	77
SNMP Management	79
Email Setup	82
Event Notifications.....	84
Trap Receiver	85
Defining Thresholds.....	87
Power Thresholds.....	87
Input Phases.....	89
Circuit Breaker	91
Circuit Breaker List	92
Control Management	93
Rack Access Control	95
Handle and Compatible Card Types.....	96
Smart Rack Control	97
User Settings	101
Add Users.....	102
Modify.....	102

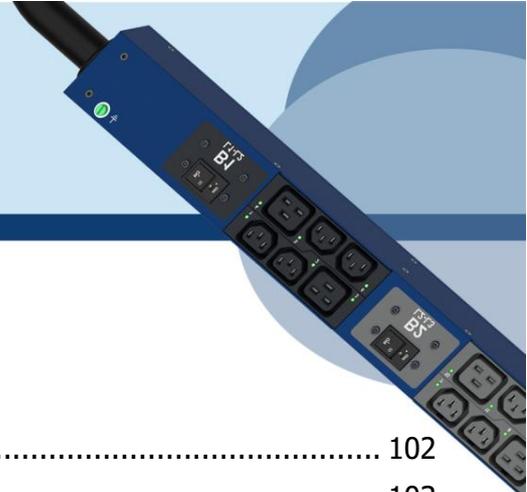

Delete:	102
LDAP Server Settings	103
Radius Configuration	105
Roles.....	105
Session Management.....	107
Password Policy	108
SNMP	109
Working with MIB Browser	109
Loading the MIB file	110
Redfish.....	111
Redfish URLs Supported with GET Method.....	119
The Command Line Interface (CLI).....	122
Logging in with HyperTerminal	122
CLI Commands and Prompts	123
CLI Options	123
CLI Commands Table.....	126
FTPS	140
Sensors	141
Sensor Overview	141
Temperature and Humidity Sensor Installation Instructions EA9102, EA9103, and EA9105	142
Sensor Input Hub Installation Instructions.....	143
EA9106	143
Door Switch Sensor Installation Instructions.....	144
EA9109	144
Top Door Mounting Option.....	144
Door Mounting Option	145
Dry Contact Cable Installation Instructions	146
EA9110	146
Spot Fluid Leak Sensor Installation Instructions	146
EA9111	146
Rope Fluid Leak Sensor Installation Instructions	147



EA9112 147

Detecting Sensors 148

Configuring Sensors 148

Viewing and Managing Sensor Information..... 149

To View Connected Sensors 149

Edit External Sensor Threshold 150

Toggle Temperature Units between Celsius & Fahrenheit 150

Monitoring the External Sensor..... 152

Daisy Chain and RNA–Redundant Network Access.....153

Daisy-Chain Functionality 153

Daisy-Chain Setup 153

RNA (Redundant Network Access) Functionality 154

How it Works 155

RNA Setup 156

To Connect PDUs for RNA Setup..... 156

To Configure RNA Mode in the CLI..... 156

Daisy Chain and RNA Commands in CLI 157

Firmware Update Procedures..... 158

USB Method..... 158

Web Interface Method 159

Questions and Answers (FAQs)..... 160



Statutory Information




Safety Instruction

General Safety Instructions

- This Power Distribution Unit (PDU) unit is intended to provide power to the IT equipment only. Do not connect the secondary power units to the outlets of the PDU.
- It is recommended not to operate the system with Internet from a public network, but with an internal network protected externally with firewalls.
- When remote accesses are deployed, select a secure access path, such as VPN (Virtual Private Network) or HTTPS.
- Ensure that the current Enlogic firmware is installed on all Enlogic iPDUs.
- Restrict access authorizations to networks and systems to only persons that need an authorization and disable unused user accounts.
- This product generates, uses, and radiates radio frequency energy, which can cause harmful interference to radio communications if not installed and used in accordance with the instruction manual. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Installation and Operation Safety Instructions

- Assembly and installation of the PDU may only be performed by experienced, trained, and authorized personnel.
- Please observe the valid regulations for electrical installation in the country in which the PDU is installed and operated, and the national regulations for accident prevention. Please also observe any internal company regulations, such as work, operating and safety regulations.
- Operating the system in direct contact with water, aggressive materials or inflammable gases and vapors is prohibited.
- The PDU must not be opened. It does not contain any parts that need servicing.
- Internal parts of the PDU can get extremely hot during operation. Be cautious before handling.

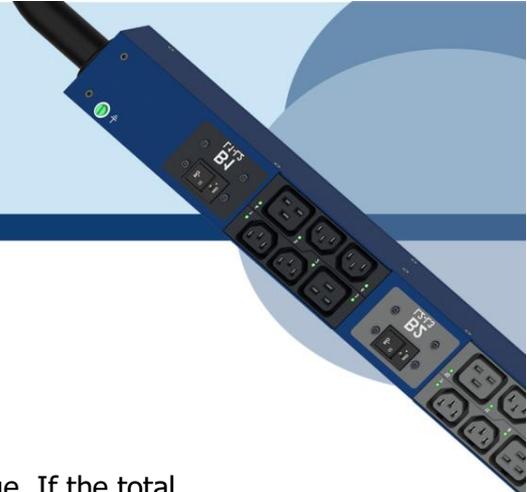

- There is a risk of electrical shock from the ground conductor leakage. If the total leakage current exceeds 3.5 mA or if leakage current of the connected load is unknown, connect the ground terminal of the PDU to a dependable ground/earth connection.
- This equipment must be connected to an electrical supply with protected ground outlets and a branch circuit breaker with the same current rating as the equipment. Test all outlets for proper polarity and grounding. Failure to comply with this requirement can result in severe injury.
- Use only original Enlogic accessories or products recommended by Enlogic along with the Enlogic iPDU.
- Changes and modifications to this equipment can affect the warranty. Enlogic is not responsible for damage to this product, resulting from accident, disaster, or misuse.

Safety Instructions – Disclaimer

Enlogic by nVent accepts no liability for any errors in this documentation. To the maximum extent permissible by law, any liability for damage, direct or indirect, arising from the supply or use of this documentation is excluded.

Enlogic by nVent retains the right to modify this document, including the liability disclaimer, at any time without notice and accepts no liability for any consequences of such alterations.



Safety Symbols

In these original operating instructions, warning notices point out residual risks that cannot be avoided by constructive means when installing or operating the Enlogic iPDU. The warning notices are classified according to severity of the damage occurring and its statistic occurrence.

DANGER

Symbol	<p>Brief description of the danger The signal word DANGER indicates an immediate danger. Non-observance will result in severe injuries or death.</p>
--------	---

WARNING

Symbol	<p>Brief description of the danger The signal word WARNING indicates a danger. Non-observance can lead to severe injury or death.</p>
--------	--

CAUTION

Symbol	<p>Brief description of the danger The signal word CAUTION indicates a danger. Non-observance can lead to injuries.</p>
--------	--

ATTENTION

	<p>Brief description The signal word ATTENTION indicates damages to equipment. Non-observance can lead to damage to the device.</p>
--	--

	<p>Important Information</p>
---	-------------------------------------



Safety Information for Operators

Only trained specialists are authorized to carry out assembly, commissioning, completion, maintenance, and service of the Enlogic iPDU. The nationally applicable health and safety regulations must be adhered as well.

WARNING



Risk of injury due to insufficient personal protective equipment

If you use wrong / no protective equipment at all, serious injuries are possible.

- Wear protective equipment adapted to the work processes.
- Check the protective equipment before each use to ensure that it is intact!
- Use only approved protective equipment.



Product Labels and Standards

This equipment has been evaluated and found to comply with the limits for a Class A digital device, pursuant to part 15 of the **FCC** Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.



This product is CE compliant, and UL tested. An appropriate declaration of conformity has been issued and can be supplied on request.

The Power Cable of this product must be used exclusively for the respective PDU only.



References and Architecture Specifications

Related Documents

This product meets the requirements of the following specifications:

Electromagnetic Compatibility

The requirements of the following EMC standards for electrical equipment are fulfilled and verified via an independent EMC test laboratory.

- EN 61326-1 class B group 1 Basic Immunity
- EN 61000-3-3 Limitation of voltage changes, voltage fluctuations and flicker
- EN 61000-3-2 Limits for harmonic current emissions

CE / UKCA Compliance

- LVD 2014/35/EU Low-Voltage Directive
- EMC 2014/30/EU Electromagnetic Compatibility Directive
- RoHS 2011/65/EU RoHS Directive-2

Products fulfilling those requirements are marked with a CE/UKCA label.

For Declarations of Conformity of this product please visit www.enlogic.com



General Installation

Unpacking

ATTENTION

When opening the shipping carton, use caution to avoid damaging the system.

Consider the following when unpacking and storing the system:

- Leave the system packed until it is needed for immediate installation.
- After unpacking the system, save and store the packaging material in case the system must be returned.

If the packaging is damaged and system damage is present, report to the shipper and analyze the damage.

Initial Operation

WARNING



Risk of injury and accidents due to insufficiently qualified personnel!

The installation may only be carried out by qualified personnel who are authorized to do so according to the valid safety regulations, e.g., by authorized specialized companies or authorized departments of the company.

- Ensure that the system has not been damaged during transport, storage, or assembly.



UL 2900 Certified by UL CAP

Enlogic iPDUs have been certified by Underwriter Laboratories through the UL Cybersecurity Assurance Program (UL CAP) against the presence of vulnerabilities, malware and security-relevant software weaknesses for cybersecurity assured products.

UL2900 certification specifies the methods by which a product is evaluated and tested for the presence of vulnerabilities, software weaknesses and malware. It has been adopted as an American National Standards Institute (ANSI) standard. The standard includes requirements and methods to evaluate and test network-connectable products, including:

- Software developer requirements and risk management process for the product.
- Evaluation and test methods for the presence of vulnerabilities, software weaknesses, and malware.
- Security risk control requirements for the architecture and design of a product.

As the world becomes more sustainable and electrified and global demand for data continues to grow, we will continue to develop innovative solutions to connect, protect and manage heat in critical systems for our data solutions customers. From energy-efficient cooling solutions to keeping operations safe from cyber threats, we are ready to meet our customers' ever-changing needs.





Product & Documents

This unit is delivered in a cardboard box and contains:

- PDU & NMC
- PLUGS & WIRES
- QUICK START GUIDE
- SAFETY INFORMATION SHEET
- WARRANTY CARD

Check the unit for any damage that may have occurred during transport. Any damage and other faults, e.g., incomplete delivery, should be reported immediately, in writing, to the shipping company and to Enlogic Systems LLC.

Use the information provided in the enclosed warranty card to register your product online at www.enlogic.com





A screenshot of the Enlogic product registration website. The header shows 'CISGLOBAL enLOGIC by nVent' and navigation links for 'PRODUCTS', 'RESOURCES & SUPPORT', and 'FIND THE PARTNER'. The main content area features a large 'REGISTER THE PRODUCT' button. Below this, a breadcrumb trail reads 'Home > Product Registration'. A text prompt states: 'To register your Enlogic product under the standard 5 year warranty, submit the following information below'. A registration form is displayed with the following fields: 'First Name', 'Last Name', 'Email', and 'SKU and Serial Numbers'. A 'SUBMIT' button is located at the bottom right of the form.



Regions Supported

Follow all local and national codes, when installing the PDU. The PDU should be connected to a dedicated circuit protected by a branch circuit breaker matching the PDU input plug-type for your region:

Regions	PDU Input Plug Type	Input Rating
Europe, International	IEC60320 C20 Inlet (Removable Power Cord)	16A SINGLE PHASE
	CEE 7/4, CEE 7/5, CEE 7/7 Plugs	16A SINGLE PHASE
	IEC60309 316P6 or 316P6W	16A SINGLE PHASE
	IEC60309 332P6 or 332P6W	32A SINGLE PHASE
	IEC60309 363P6 or 363P6W	32A SINGLE PHASE
	IEC60309 516P6 or 516P6W	16A THREE PHASE
	IEC60309 532P6 or 532P6W	32A THREE PHASE
	IEC60309 563P6 or 563P6W	63A THREE PHASE
	3-pin (2P+G)	20A SINGLE PHASE
Australia	3-pin (2P+G)	32A SINGLE PHASE
	5-pin (3P+N+G)	20A THREE PHASE
	5-pin (3P+N+G)	32A THREE PHASE
	IEC60320 C20 Inlet (Removable Power Cord)	20A SINGLE PHASE
	NEMA 5-20P or NEMA L5-20P	20A SINGLE PHASE
	NEMA 6-20P or NEMA L6-20P	20A SINGLE PHASE
	NEMA 6-30P or NEMA L6-30P	30A SINGLE PHASE
	NEMA 5-30P or NEMA L5-30P	30A SINGLE PHASE
North America/Japan	IEC60309 330P9 or 330P9W	30A SINGLE PHASE
	CS8265C	50A SINGLE PHASE
	NEMA L21-20P or NEMA L15-20P	20A THREE PHASE
	NEMA L21-30P or NEMA L15-30P	30A THREE PHASE
	CS8365C	50A THREE PHASE
	IEC60309 460P9 or 460P9W	60A THREE PHASE
	IEC60309 520P6 or 520P6W	20A THREE PHASE
	IEC60309 530P6 or 530P6W or NEMA L22-30P	30A THREE PHASE

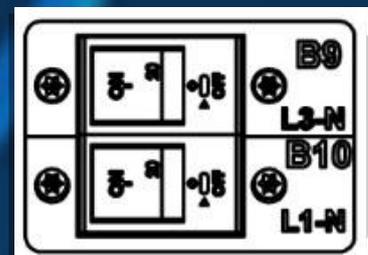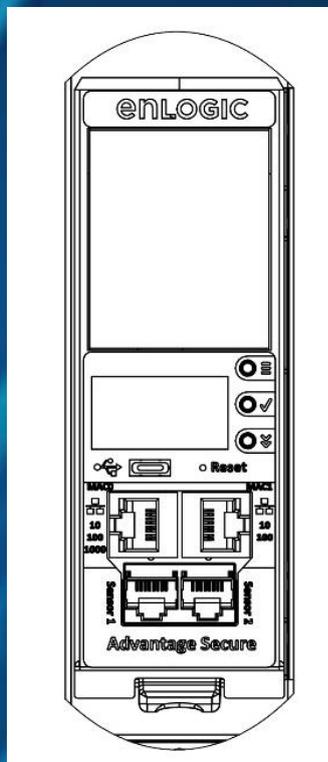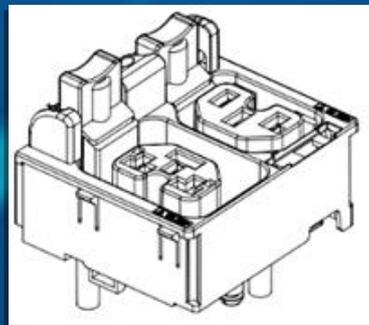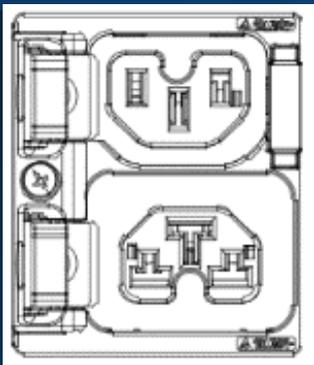

Product & Components



Product Description

The AdvantEdge Secure PDU from Enlogic is a sleek and space saving unit with low profile circuit breakers, color-coded receptacles and different types of power outlets which can be customized according to the user needs and IT requirements.

The PDU provides efficient and reliable power distribution capabilities, ensuring maximum uptime of IT equipment through intelligent features such as:

- Full featured network management and alerting capabilities supporting HTTP, HTTPS, SSH, SNMP, and email.
 - Strong encryption, passwords, and advanced authorization options including local permissions, LDAP, and Active Directory.
 - Daisy Chain up to 64 Rack PDUs and supports a maximum of 10 environmental sensors each.
 - Power Sharing feature that allows the data of the PDU to be recorded even during a Power Failure.
- The power distribution systems offered by the AdvantEdge Secure from Enlogic are as follows:

Product Series	Inlet Power Measurement (Metered)	Outlet Power Measurement	Switchable Outlet
EN1000 Series	✓		
EN2000 Series	✓		✓
EN5000 Series	✓	✓	
EN6000 Series	✓	✓	✓
EZ1000 Series	✓		



Single-Phase Models


All Single-Phase models support hydraulic-magnetic breakers that are color coded to the corresponding outlets.

Three-Phase Models

- In standard, 415 V Three-Phase (Wye) configurations, the color of each circuit breaker and outlet corresponds to the appropriate input phase. The PDU is labelled to indicate the input phase associated with each circuit breaker and outlets.
- In North America 208 V Three-phase (delta) configurations, the color of the circuit breaker corresponds to the line connections and includes a label of the two connected input-phases, (i.e., L1-L2, L2-L3, or L3-L1).
- All Three-Phase models rated above 20 A and 16 A, will also use an outlet indicator LED in color Green.




iPDU & its Components

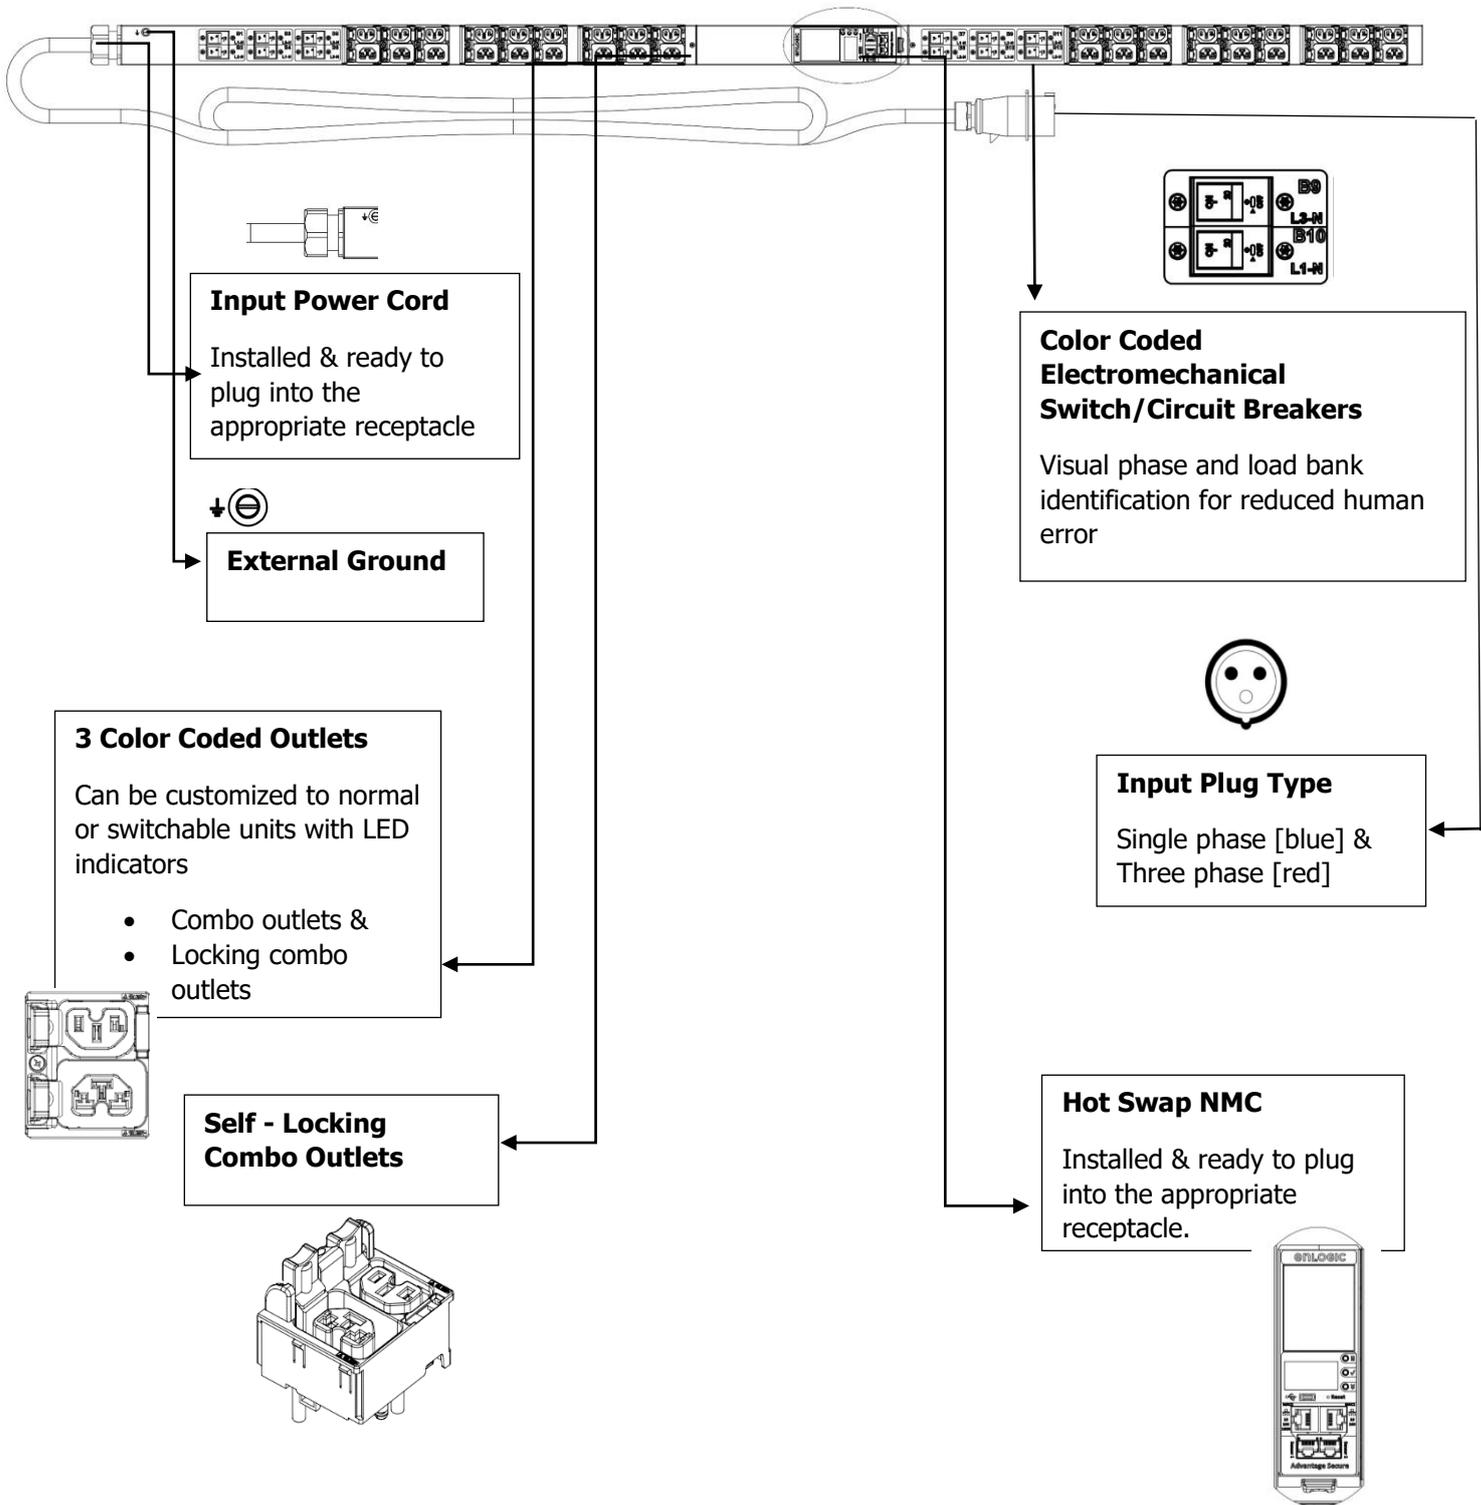



Product Components Network

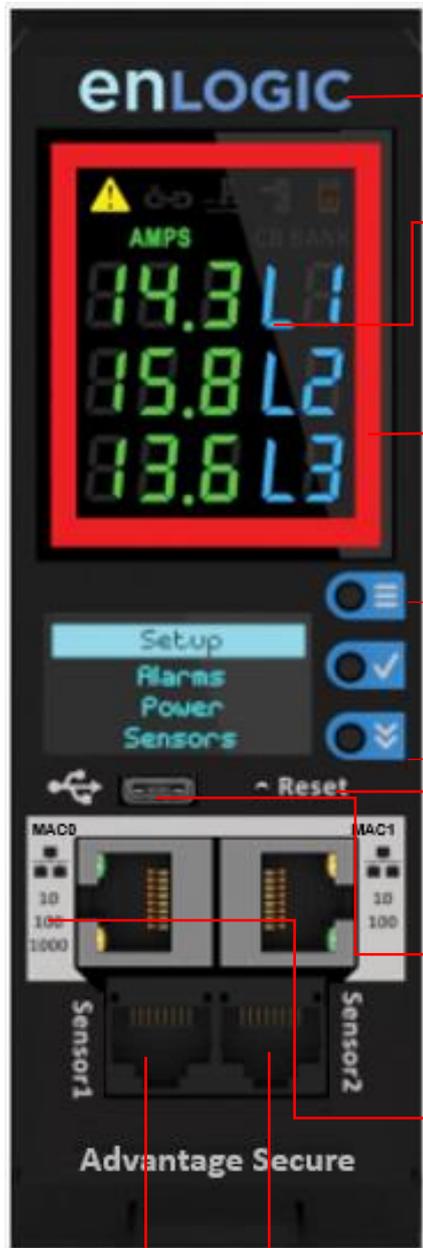

BRANDING LABEL

LED Screen displays Critical Alarms Alerts
 Graphical Alarm Icon, PDU Alarm, Cascade Error, Temperature Alarm, Circuit Breaker Alarm, Display [AMPS, CB Bank, Largest In Class, High Definitions Metering Display]

Source Color Coding - User Selected Option



User Interactive Display/ OLED Screen with Navigation Buttons [Menu, Selection & Scroll]
 Main menu options Setup, Alarms, Power & Sensors displays on the landing page.

Upper button navigates to the previous page
Middle button navigates to sub menu or data
Lower button used to scroll through the options.

Reset Push Button – Short Press to initiate Reset Functionality (rst)
 Long Press to Default settings (def)

USB C Port Connector – FW Upgrades, Connectivity & Future Expansion

Ethernet Ports – Also used for Power Share Functionality
MAC0 - (10/100/1000) – GIGABIT ETHERNET PORT
MAC1 - (10/100) – ETHERNET PORT FOR Redundancy & Ethernet cascading

Digital SENSOR Port 1 – Dual Function – Sensor or Serial Connectivity
Digital Sensor Port 2 – Sensor Connectivity
 [Supports up to 10 physical sensors with the help of sensor hub]



Displays

There are two displays on all standard AdvantEdge Secure models, as specified below:

- The Seven Segment LED display shows data in high visibility at Phase Level and CB Level.
 - LED Graphical Alarm Icons: PDU Alarm, Cascade Error Alarm, Temperature Alarm, Security Handle Alarm, and Circuit Breaker Alarm.
 - Display (AMPS, CB BANK): Largest In-class HD Metering Display.
- The OLED screen will display a status bar, when the PDU operating system is loading.
 - OLED display: Set up, Alarms, Power, Sensors (click menu, select, and scroll to operate).

Interfaces

There are five interfaces on all standard AdvantEdge Secure models, as specified below:

- USB-C: Fast Configuration, Fast upload of firmware and download log files.
- Ethernet Port 1 (10/100/1000): Primary network port / Power Share.
- Ethernet Port 2 (10/100): Daisy chain / Power Share / RNA / Network.
- Sensor-1: Primary Sensor Port / Serial Port –The Serial function is a user interface that enables the user to configure Features and update Firmware.
- Sensor-2: Secondary Sensor Port – This port also can connect the sensors.

Note – Overall, the sensor ports support connecting up to total 10 sensors with the help of the sensor hub.



Reset Button

Outcome	Action
NMC Reboot [RST]	Use a pin, press, and hold the recessed RESET key button for about 8 seconds, which will initiate the reset option without changing any configuration values. The OLED display will show the RST during this operation.
NMC Reboot [DEF] To set it to default settings if user does not know the password	Use a pin, press, and hold the RESET key button for about 20 seconds, which will initiate the DEF option in the LED display. This action initiates the NMC to reset to the factory default settings.
NMC Quick/Forced Restart	Use the pin, press, and hold the RESET key button along the scroll button simultaneously. This action initiates a quick/forced NMC restart.



Reset Key Button :
Use this recessed Pin hole for the Reset functionality.





Advanced Network Management Controller (NMC) Network Security

Enlogic iPDUs and in-line meters are equipped with:

- The latest network security protocols (secured by encryption algorithms).
- The latest support for remote authentication (Active Directory, LDAP & RADIUS) and
- Aggressive USER Login and Password Policies.

The Firmware updates are released on a quarterly basis, to ensure that Enlogic iPDUs will always provide the highest-level network security, which protects against attacks in high-risk environments.

Encryption

Communication Protocol	Supported Encryption
HTTP/HTTPS/REDFISH API	TLS 1.2 2048 key length supported
SNMPv2c/v3	SNMPv2c Encryption: Based on community string SNMPv3 Authentication: MD5, SHA, Privacy: AES128, AES192, AES256
SSH	TCP/IP SSL Support for user-defined ports Up to 16 SSH user sessions at the same time
FTP/FTPS	File Transport Protocol (FTP) File Transport Protocol Secure (FTPS) (TLS1.2 encryption)
Active Directory, Open LDAP, and RADIUS	Privilege assignment over Active Directory, LDAP, and RADIUS

Remote Authentication

Authentication Protocol	Supported
Active Directory	YES Supported
Open LDAP	YES Supported
RADIUS	YES Supported



Login & Password Policy

Security Tools	Supported
Strong Password	Supports alphanumeric and symbols
Minimum password length	Passwords must be greater than eight characters
Forced password change on first login	User must assign an 8~16-character password at first login
User blocking after failed attempts	User definable number of attempts
Password Aging Interval	1-to-365-days expiration, or set it to 'never expire'
User blocking after failed attempts	User defines number of allowed attempts
Automatic Idle Out	User definable idle out timer

Certificates

Enlogic iPDUs supports X.509 PEM digital certificates to create secure encrypted connections. The device is loaded with built-in default SSL certificate (1024 or 2048 key length), or the user can choose created SSL certificates. Key lengths supported are 1024 or 2048 bit.

Firmware and Conf file Encryption

Secure Encryption Design is adopted for files used to configure iPDU.

Firmware File

- enlogic.fw is a secured firmware file.
- The below mentioned attributes makes enlogic.fw secure:
 - Supports Secure Boot.
 - Supports Chain of Trust.
 - Support Firmware file signature.
 - Encrypted using AES256.

File	Encryption
Checksum	SHA256
Encryption Algorithm	AES256
Chain of Trust	AES192, AES256, RSA4096, SHA256
Signature Algorithm	ECDSA, SHA256



Chain of Trust Firmware Signature

Validation:

- File tampering is rejected from firmware to overcome Denial of Service (DoS).
- With strong algorithm check process, foreign file penetration into firmware application is avoided.

Secure Boot

Secure Boot makes sure that a device boots using only software that is trusted.

Conf File

- CONF File downloaded is encrypted using AES256.
- EEPROM version validation is added to make sure NMC gets exact conf file.

File	Encryption
Encryption	AES256
Checksum	SHA256

Other Vulnerabilities:

Following vulnerabilities are avoided in firmware:

- **WEBSERVER – Weak Ciphers**
 - Weak Ciphers are removed from TLS Support.
- **WEBSERVER – Privilege Escalation & Improper Authentication**
 - Unique Role and ID is assigned to each user.
- **WEBSERVER – Click Jacking**
 - X-Frame option request header is added.
- **UNUSED Ports**
 - All unused ports in firmware are closed.
 - Ports used for internal use will not be accepting any external requests.



Network Security Hardening Guide

This section provides recommendations for hardening the security of products that connects to the network using an Advanced Network Management Controller (NMC).

Recommendations

To ensure that the product has the latest security enhancements and features available, verify that it is running the latest firmware version. Visit the Enlogic website at: <https://Enlogic.com/firmware-software/firmware> to find the latest firmware for your device.

Disable all unused protocols

If a protocol is not in use, ensure it is disabled to reduce your threat surface. This applies to protocols such as HTTP, HTTPS, SSH, SMTP, FTP, FTPS, etc.

Use custom network ports where applicable

If a non-standard port is in use, the device may not be detected by scans, which verify only standard ports. This applies to protocols such as HTTP, HTTPS, SSH, SMTP, FTP, FTPS, etc.

Disable HTTP and enable HTTPS for web support

To use secure and encrypted web protocol, disable HTTP and enable HTTPS. By default, HTTP is disabled on Network Management Controller-enabled products.

Disable older versions of TLS

Transport Layer Security (TLS) is a cryptographic protocol that provides communication security over the internet. Ensure that older versions of TLS are disabled on your Network Management Controller-enabled device and use the latest version available. PDU latest firmware supports ONLY TLS 1.2

Disable FTPS

For secure, encrypted file transfer protocol, enable FTPS if it is disabled. When FTPS is not in use, disable it to help harden security on your device. By default, PDU firmware supports data communication over TLS1.2.

Note: If FTP login data is sent over plain text (not secured) from computer FTP client to the PDU FTPS server, the PDU authentication server will close the connection with error code 421.



Disable SNMPv1 and enable SNMPv3

For encrypted SNMP protocol, disable SNMPv1 if it is enabled and enable SNMPv3. It is recommended to use SNMPv3 as it is more secure than SNMPv1. By default, SNMPv1 is Enabled and SNMPv3 is disabled.

Note: When SNMPv1 is not in use, it is recommended to disable SNMPv1.

Configure SNMPv3 to use AES/SHA

Configure SNMPv3 to use the most secure algorithms, AES, and SHA, to provide encryption and authentication.

Change the admin User account password

After installation and initial configuration of your Network Management Controller-enabled device, immediately change the default admin user account password.

Note: You will be prompted to change the admin password at first login to the NMC.

Enable Strong Passwords

Enable this feature to ensure strong passwords are created. All passwords will be required to be a minimum length and contain special characters to make passwords harder to guess.



Default Ports

Following are the default ports the NMC supports. The list of enabled and disabled ports is also mentioned below:

Default Enabled Ports	
Port Number	Protocol
port 21	FTP over TLS1.2
port 22	SSH
port 443	HTTPS
port 8001	Cascade Function – Not accessible on Network
port 161	SNMP
Default Disabled Ports	
port 80	HTTP
port 162	SNMP Traps
port 514	SYSLOG
port 389	LDAP
port 25	SMTP



Seven Segment LED Display

The Seven Segment LED display shows data in high visibility at Phase Level and CB Level.

- **Phase Level**


In this level information about the Current Input at each respective line, L1, L2 and L3.

- **CB Level**

In this level information about the Current Input at each respective Circuit breaker, 1, 2 and 3.



Indicators and Alarms shown on the Seven Segment LED display

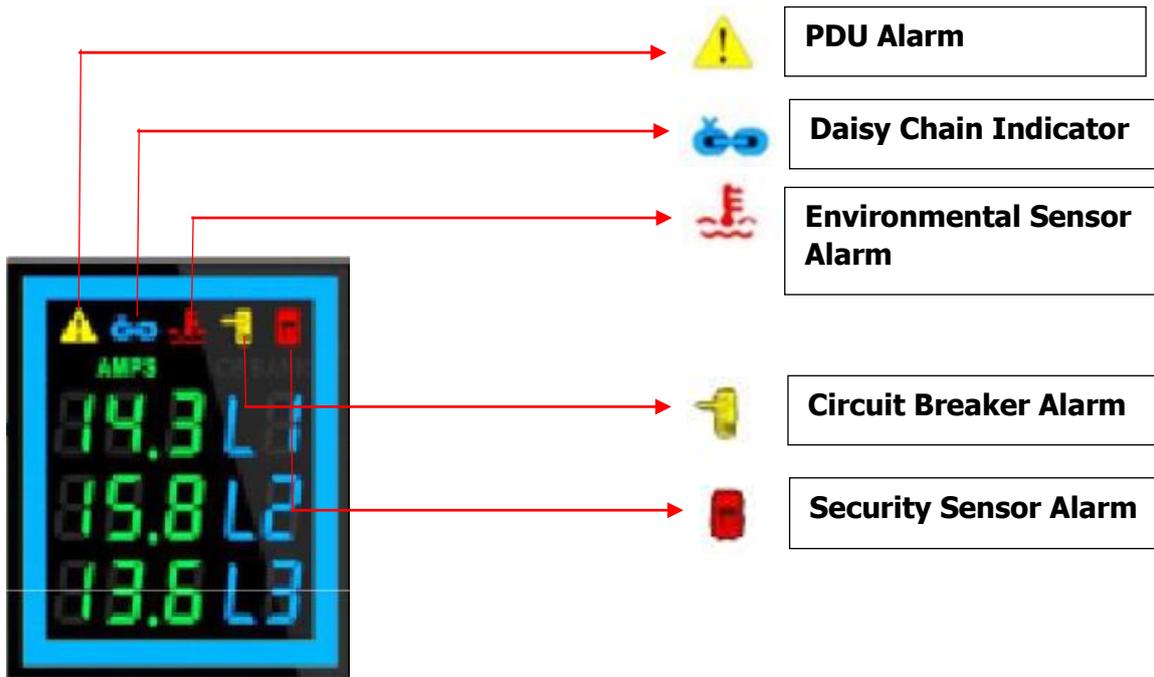


1. **PDU Alarm** - It shows the user when a Critical Alarms or Warning Alarms happens in a PDU.
2. **Daisy Chain Indicator** - It shows the user if the Daisy Chain is connected or not.
3. **Environmental Sensor Alarm** - It shows the user if there is an alarm related to the environmental sensors.
4. **Circuit Breaker Alarm** - It shows the user if there is an alarm related to the circuit breaker.
5. **Security Sensor Alarm** - It shows the user if there is an alarm related to the door sensors.




OLED Display and Network Management Controller (NMC)

The Onboard Display provides information about the PDU and connected devices. The Network Management Controller (NMC) of the PDU has a three-button. Use the buttons to change the screen display and retrieve specific data.

OLED Navigation

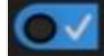-  → Press on the **Menu** button to access the OLED **Main Menu** or previous **Submenu**.
-  → Press on the **Scroll** button to navigate through the options.
-  → Press on the **Select** button to choose the option.

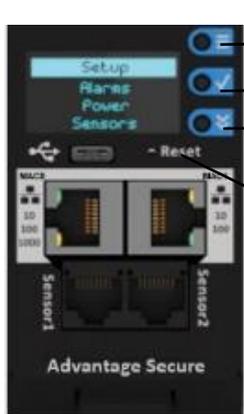

- Menu Button : Use this button as a **BACK** button to navigate to the previous menu screen.
- Select Button : Use this button to pick an option from the list.
- Scroll Button : Use this button to scroll to the next line.
- Reset Button : Use this Pin hole to reset the PDU.

Note: *The highlighted menu item is ready to be selected.*




The Network Controller Display has three modes:

1. **Menu mode:** (Network Controller Display main menu): When the PDU is powered up or when a button is pushed while in Standby Mode or Power Save mode.



2. **Standby mode:** This happens when a PDU is idle (no buttons pushed) for 2 minutes while in Menu mode. The following screen savers with the respective data comes into view.

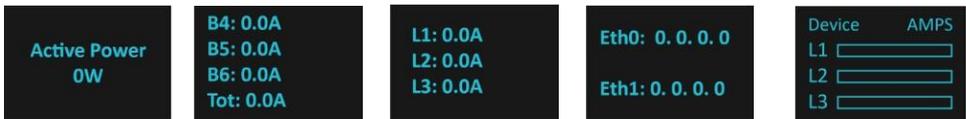

3. **Power Save mode:** The PDU enters Power Save mode when it has been in Standby mode for 30 minutes. The screen is switched off to save power. To exit Power Save mode, press any button on the display.

Main Menu Selections

The PDU menu selection hierarchy consists of Setup, Alarms, Power, and Sensors. On the main menu, scroll down to highlight **Setup**. Press **Select**. Scroll down to select a submenu and press **Select** to display the submenu options. Press **Menu** to return to the previous menu.



Setup Menu


The **Setup** menu provides user configuration options including Network, Device, Screen, Language, USB, and Units.





Network Submenu


The **Network** submenu allows you to view IP address IPv4 or IPv6. On the **Setup** menu, scroll down to Network. Press **Select** to enter the Network Submenu. Scroll down to highlight the selected option from the menu. Press **Select** to display the screens that display the IP address. Press **Menu** to return to the previous menu.

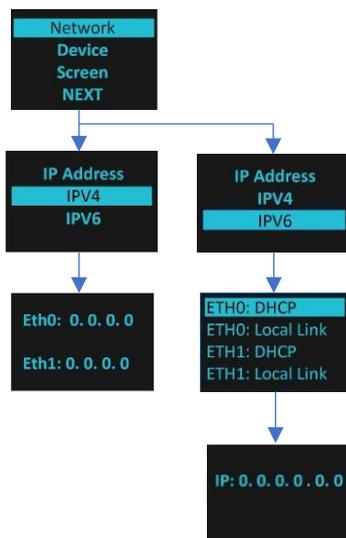



Device Submenu


The **Device** submenu provides the SKU number, Serial number, MAC address and Firmware version. On the **Setup** menu, scroll down to highlight **Device** submenu. Press **Select** to enter the **Device** Submenu. Scroll down to the item you wish to display, and press **Select**. Press **Menu** to return to the previous menu.

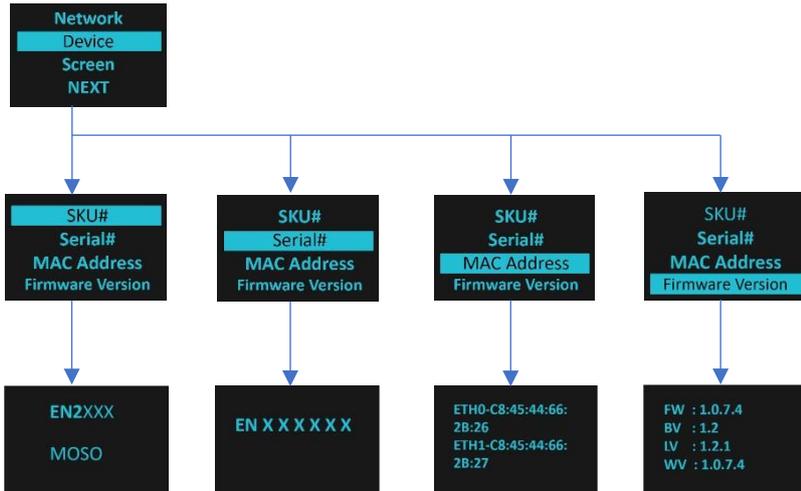




Screen Submenu

The **Screen** submenu allows you to customize settings for Contrast and Rotate. In the **Setup** menu, scroll down to highlight Screen. Press **Select** to select the submenu. Press **Menu** to return to the previous menu.

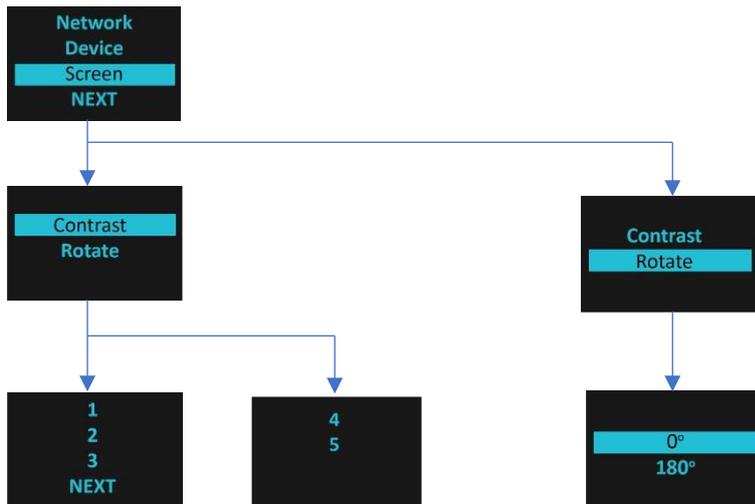

Language Submenu

The **Language** submenu allows you to select the language you need to use. On the Setup menu, scroll down to highlight Language. Press Select to display the screens to select the submenu. After you select the values, press Select to set the values as displayed on the screen. Press Menu to return to the previous menu.

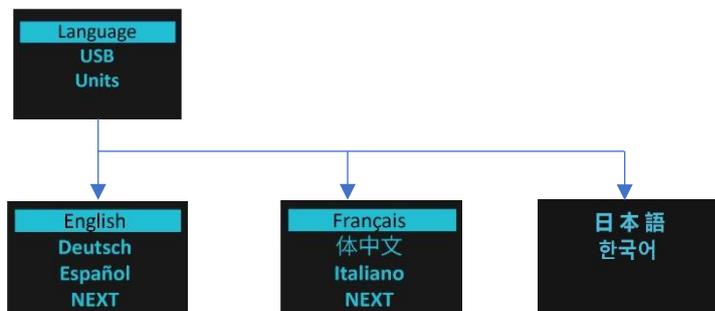




USB Submenu

The **USB** submenu allows you to upload firmware file, upload configuration file and download event log or data log.

On the **Setup** menu, scroll down to highlight USB. Press **Select** to enter the **USB** Submenu. The user can select the Operation and Mode to proceed further.

Note: If a USB drive is not present in the USB slot the PDU will enter normal operation.

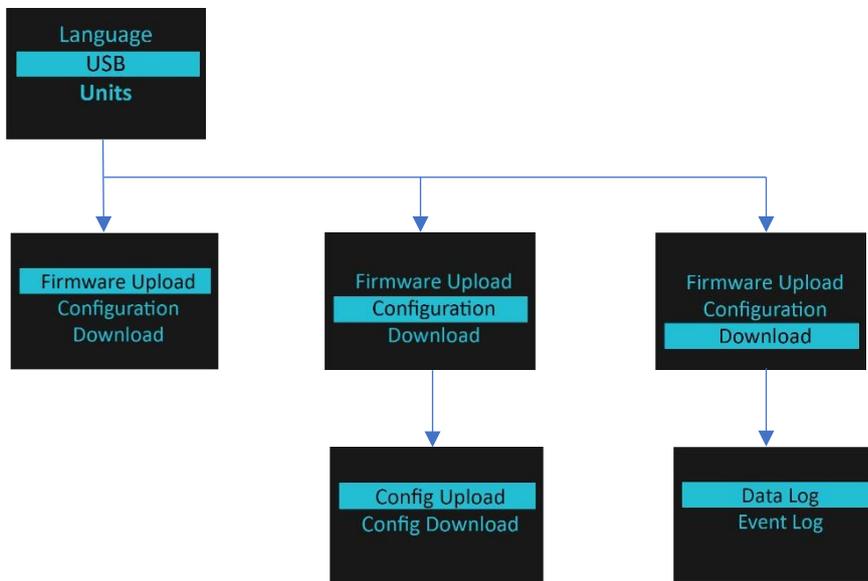




Units Submenu

The **Units** submenu displays the temperature units. On the **Setup** menu, scroll down to highlight **Units**. Press **Select** to enter the **Units** Submenu. After you select the values, press **Select** to set the values as displayed on the screen. Press **Menu** to return to the previous menu.

Note: This can only be done locally at the PDU and also using the WEBUI.

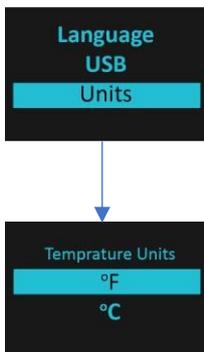

Alarms Menu


The **Alarms** menu displays active alarms for the PDU. On the **Main** Menu, scroll down to highlight **Alarms**. Press **Select** to display the **Alarm** Screen. When you finish your review, press **Menu** to return to the main menu.






Power Menu

The **Power** menu manages Device, Phase, Breaker, and Outlet. On the **Main** Menu, scroll down to highlight **Power**. Press **Select**. Scroll down to select a submenu and press **Select** to display the submenu options. Press **Menu** to return to the previous menu.

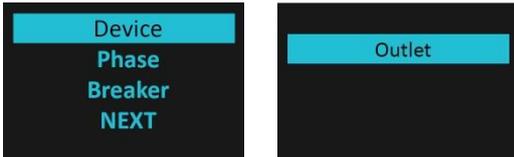

Device Submenu


The **Device** submenu is to Display Current, Voltage and Power. On the **Power** menu, scroll down to highlight **Device**. Press **Select** to display the power values for the entire PDU. Press **Menu** to return to the previous menu.

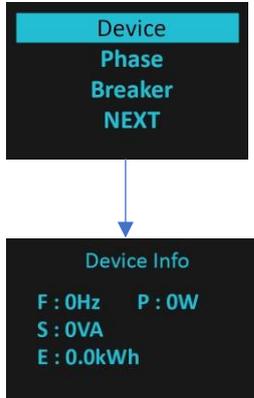




Phase Submenu

The **Phase** submenu is to display the status of 3-Phase. On the **Power** menu, scroll down to highlight Phase. Press **Select** to display the screens to set the values for the submenu. After you select the phase, press **Select** to display the values for that phase on the screen. Press **Menu** to return to the previous menu.

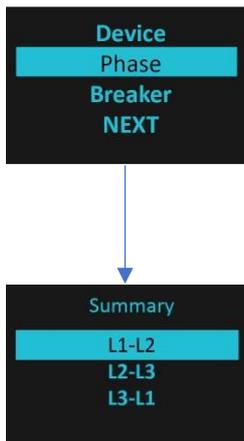

Breaker Submenu

The **Breaker** submenu is to display power values for the breakers. Press **Select** to display the values of the first breaker. To go to the next breaker, Select **Next**. Press **Menu** to return to the previous menu.

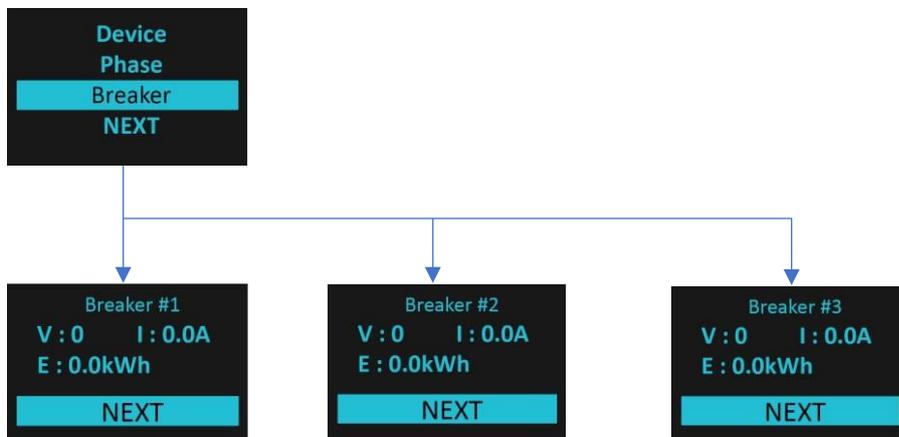




Outlet Submenu

The **Outlet** submenu is to display voltage, current and power from outlet number 1 to number n. On the **Power** menu, scroll down to highlight **Outlet**. Press **Select** to display values for the first outlet. To go to the next outlet, **Select** next. Press **Menu** to return to the previous menu.

Note: Custom outlet names noted in the Web GUI do not make changes to the local display. This is done to make it easier to map to outlet numbers which can locally be seen on the outlets themselves.

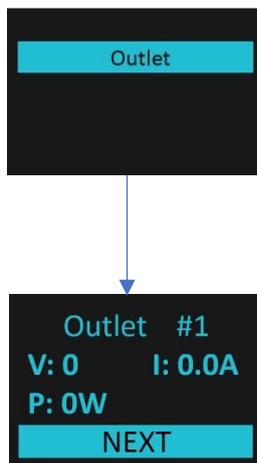




Sensors Menu

The Sensor menu is to display temperature, humidity, door switch, fluid leak etc. On the Main Menu, scroll down to highlight Sensor. Press Select. This will display the sensor data for the first sensor. To go to the next sensor, Select next. Press Menu to return to the previous menu.

Note: Maximum of ten sensors are configured per PDU.

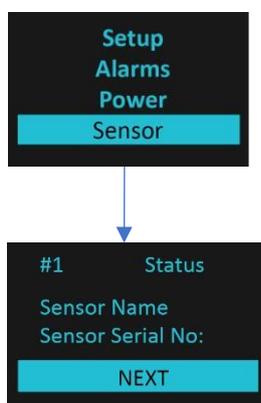



NMC Hot Swap

The Network Management Controller (NMC) for a vertical iPDU, is a hot-swappable unit.

Ribbon Cable





Installation

Disconnect the NMC

1. Write down the details of the ports and the RJ45 plugs connected, this will enable reconnecting them after installing the replacement NMC.

2. Remove all the connectors from the ports of the existing NMC (Ethernet, Serial, Sensor, etc.).

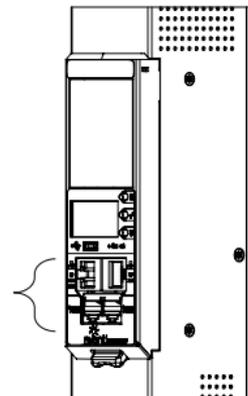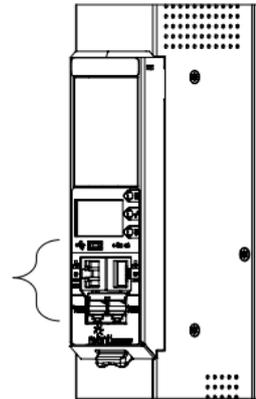




3. Push the bottom snap lock button **UP**. Gently pull the NMC to unmount, without disconnecting the Ribbon cable. The Ribbon cable can be extended only to a comfortable length, care should be taken to avoid any damages to the Ribbon cable.


Note - Do not disconnect the Ribbon cable from the PDU back board.

4. Only, in case of damages to the existing Ribbon cable, replace it with the new Ribbon cable provided in the box package. Then, detach the Ribbon cable from the PDU back board also and then re-plug it.

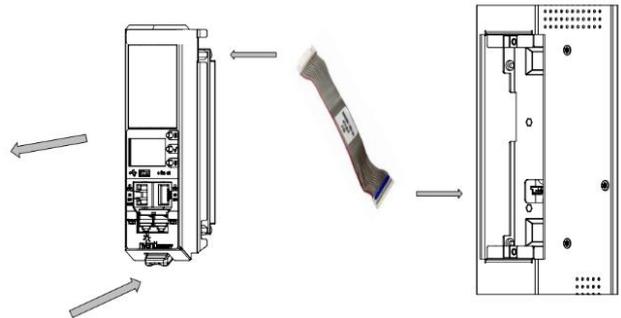

Installing the new NMC


5. Plug the Ribbon cable into the connecting socket on the top section of the replacement NMC. Gently fold the Ribbon cable. Mount the NMC back into the PDU chassis.

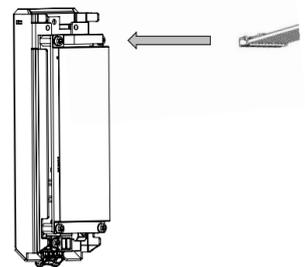

6. Align the NMC and connect the Ribbon cable back to the PDU back board. Now, slide the top flange to align in the slot. Push the bottom snap lock button **UP** and gently fix the NMC into the PDU chassis.

Note - Do not strain or kink any of the wires in the Ribbon cable.

7. Verify if replaced NMC is powered **ON**.
8. The replacement NMC is mounted on the PDU chassis.

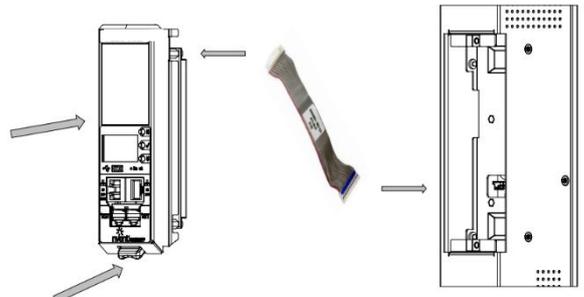




Outlet Units

Combo Outlets

The Advantage Secure PDU features a C13/C15 and C13/C15/C19 combination Outlet Port configuration, which increases the adaptability.

This helps the user to get the highest level of versatility allowing the connection of both ICE C14 and C16 plugs into the same C13/C15 (2-in-1) combination Outlet Port and ICE C14, C16 and C20 plugs into the same C13/ C15/C19 (3-in-1) combination Outlet Port.

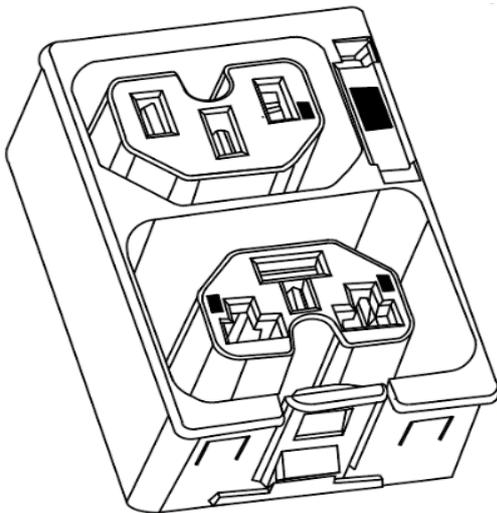

Combo Outlet

C13/C15 [2 in 1] Outlet

NAM & EAU 10 A / 250 V

C13/C15/C19 [3-in-1] Outlet


NAM & EAU 16 A / 250 V



Apollo Outlet

The Advantage Secure PDU features a C13 and C19 combination discreet Outlet Port configurations.

The specifications of the Outlet Unit are as follows:

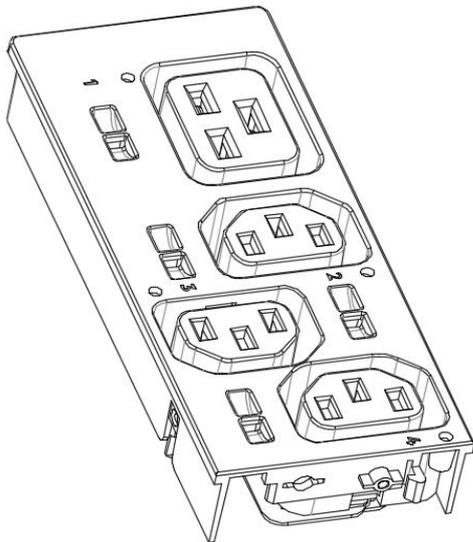

Apollo Outlet

C13 Outlet

NAM & EAU 10A / 250V

C19 Outlet


NAM & EAU 16A / 250V

- Degree of protection by enclosure according to IEC60529 is IP20.
- Mating plug inserting force is 70 N max.
- Mechanical operation cycles without load are 1000 cycles and with load is 500 cycles.
- Temperature range: 25 °C – 100 °C.
- Rated impulse voltage: 2.5 kV.



Self- Locking Combo Outlet

The Advantage Secure PDU features C13/C15 and C13/C15/C19 combination Locking Outlet Port configurations.

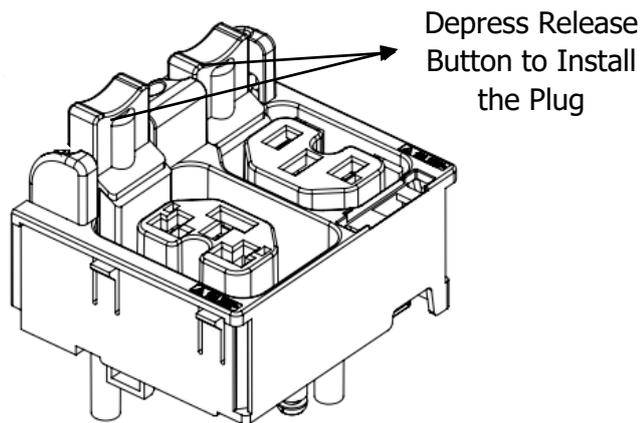

Locking Combo Outlet port features both the Combo Outlet C13/C15 [2 in 1] Outlet NAM & EAU 10 A / 250 V and C13/C15/C19 [3-in-1] Outlet NAM & EAU 16 A / 250 V with an additional locking port facility.

The specifications of these Locking Combo Outlet Units are :

- The release button must be fully pressed [depress it] prior to installing the plug.
- Both type of plugs with and without locking clips can be inserted.
- The plugs can be installed just by pushing into the outlets directly without depressing release button.
- To unlock, fully depress release button and remove plug.



Self-Locking Cable & Non-Locking Cable

The IEC plug connectors will securely lock into the combo outlets. Both connections require deliberate action in order to plug/release the locking/non-locking buttons.

The locking/non-locking power cord is an inventive step to avoid loose IEC power connections and accidentally unplugging the equipment. Enlogic's reliable and secure locking power cords ensures reduction of risk and protection of vital IT assets.





Getting Started



Mounting PDU in Server Cabinet

Enlogic iPDUs are built with tool-less mounting in most rack enclosure designs.

(If the standard mounting pegs or mounting bracket do not comply with your rack configuration, contact Enlogic support for assistance.) Installation of a bracket can require a screwdriver.

1. The Advantage Secure PDU comes with tool-less mounting pegs for ease and convenience.
2. Determine where the Advantage Secure PDU is mounted in the inside of the server cabinet.

Note: *If your rack does not require mounting brackets, skip step 4 and 5. If required, attach the mounting brackets to the server cabinet. The standard Enlogic mounting brackets are secured to the rack using a screwdriver.*



3. Attach the enclosed mounting brackets to the server cabinet using the screws.
4. Insert the pegs into the server rack mounting holes or into the mounting brackets and tighten the mounting pegs into place.

Note: *The distance between the mounting pegs varies depending on PDU models.*

5. Pull the power cord through the cabinet and tighten the mounting pegs. Proceed with connecting to a power source.



Connecting to Power Source

Before initiating the installation procedure, check the Branch Circuit Rating in the Safety Information section of this manual. Always follow local and national codes when installing the PDU. The PDU should be connected to a dedicated circuit protected by a branch circuit breaker that matches the PDU input-plug type.

Note: When connecting the Enlogic iPDU to a Power Source, make sure that you have enough length in the PDU power cord to reach the PDU power source.

1. Turn Off the feed circuit breaker.
2. Make sure that all circuit breakers on the Enlogic iPDU are set to ON.
3. Connect each Enlogic iPDU to an appropriately rated branch circuit.
4. Note: Refer to the label on the PDU for the input ratings.
5. Turn ON the feed circuit breaker.

The OLED screen will display a status bar, when the PDU operating system is loading. The LED code on the OLED screen will flash in light pink. After 3 seconds, the Main Menu (Setup, Alarms, Power, Sensors) will display on the LED screen. Switched PDUs in the EN2000 series or EN6000 series show a light corresponding to each outlet as it is powered up.

Connecting PDU to Network

The Enlogic range of PDUs are set to obtain an IP address via DHCP by default. Therefore, when an Enlogic iPDU is connected to a network for the first time, the PDU will automatically obtain an IP address. In case the PDU is placed within a static network environment, users can configure the PDU to a Static IP via connecting to the PDU by serial cable or uploading a configuration file via USB. The PDU automatically obtains an IP address via DHCP, when connected to a network. Login to the Web UI to configure the PDU and assign a static IP address (if required).

1. Connect a standard Ethernet patch cable to Ethernet Port1/Port2 on the Advantage Secure PDU.
2. Connect the other end of the Ethernet cable to the LAN.
3. Make sure that the Ethernet port on the PDU shows a solid green light on the left and a flashing yellow light on the right to indicate successful connectivity to the network. (Gigabit Router is used in this network connection.)
4. Use the menu buttons to look up the IP address of the device on the OLED display by selecting Setup > Network > IPv4 or IPv6 as applicable.
5. In a standard web browser, type the PDU IP address and proceed to configure the PDU.



Connecting with Serial Connection


Alternatively, you can configure the network settings using the command line interface (CLI) with a serial connection. Users can either connect serially using the optional Enlogic RJ45-DB9 Cable (SKU EA9119) or by creating a unique pinout as described below.

1. Connect the RJ45 end of the serial cable into the port sensor 1 on the PDU.
2. Connect the DB9 end of the cable into the communications (COM) port on your computer.
3. Note: You can need to use a DB9 serial to USB connection cable for this step to connect via USB, if a DB9 serial port is not available on your computer.
4. Open a communications program such as HyperTerminal or PUTTY. Select the COM port.



Set the communications port as follows:

- Bits per second: 115200
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

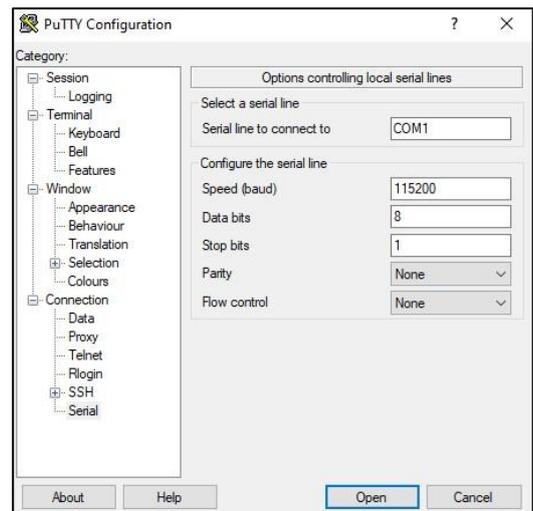

1. Use the default initial login indicated below.
Note: Username and Password are both case sensitive.
 - Username: admin
 - Password: 12345678
2. The EN2.0> prompt appears after you have logged in.
3. To configure network settings, Type the appropriate net commands in Command prompt and press **Enter** button. All commands are case sensitive. You can type "?" to access the commands.

- For the Net eth0 and eth1 IPv4 DHCP configuration, configure the below parameter.
- net tcpip eth0dhcp
- net tcpip eth1dhcp
- Enter "Y" to validate and reboot the network management card.
- For the static IPv4 configuration, configure the below parameters.
- net tcpip eth0static x.x.x.x (ipaddress) x.x.x.x (netmask) x.x.x.x (gateway) Example:
net tcpip eth0static 192.168.1.100 255.255.255.0 192.168.1.1
- Enter "Y" to validate and reboot the network management card.

OR


- net tcpip eth1static x.x.x.x (ipaddress) x.x.x.x (netmask) x.x.x.x (gateway) Example
net tcpip eth1static 192.168.1.100 255.255.255.0 192.168.1.1




Creating Unique Pinout Connection

Enlogic recommends purchasing our serial cable for use with the Advantage Secure iPDU. This ensures an accurate connection. However, to create your own pinout connection for the RJ45 to Serial cable, make the wired connections as shown:

Refer to the **Web UI** section and **Command Line Interface** section for more information about managing the PDU.

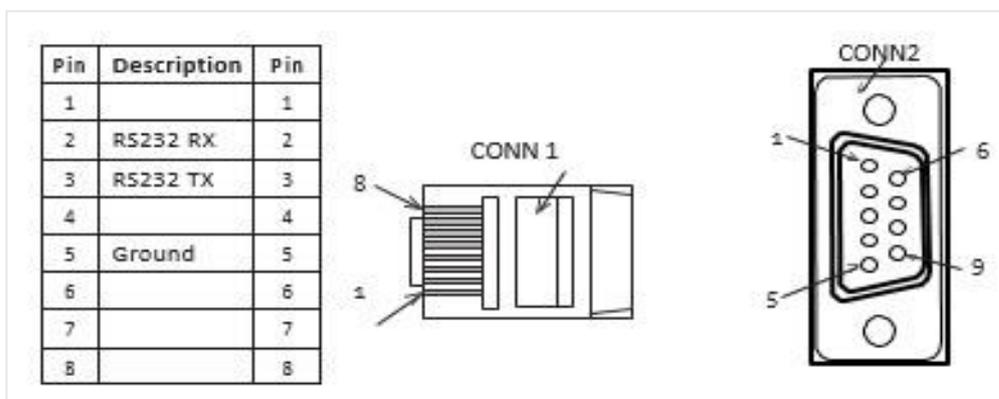


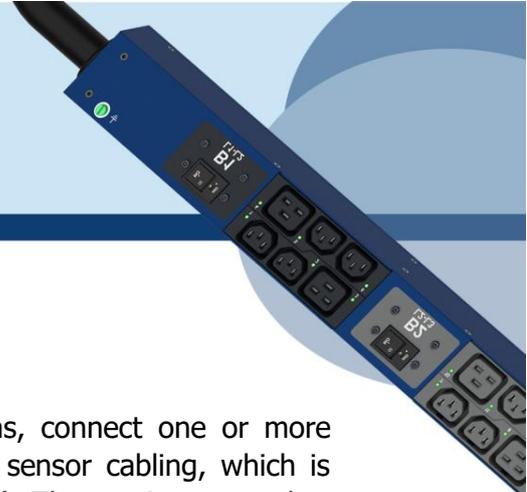

Connecting Sensors (Optional)

To enable the Advantage Secure device to detect Enlogic conditions, connect one or more sensors to the PDU sensor port 1 or 2. The maximum distance for sensor cabling, which is plugged into the device sensor port should not exceed 100 feet (30 m). The maximum number of sensor detection points should not exceed 10.

Refer to the table below to determine the sensor detection points for each sensor used. For example: If you are using the 3 Temperature sensor + 1 Humidity sensor, 4 sensor points are in use, so only 4 additional sensor points are available.

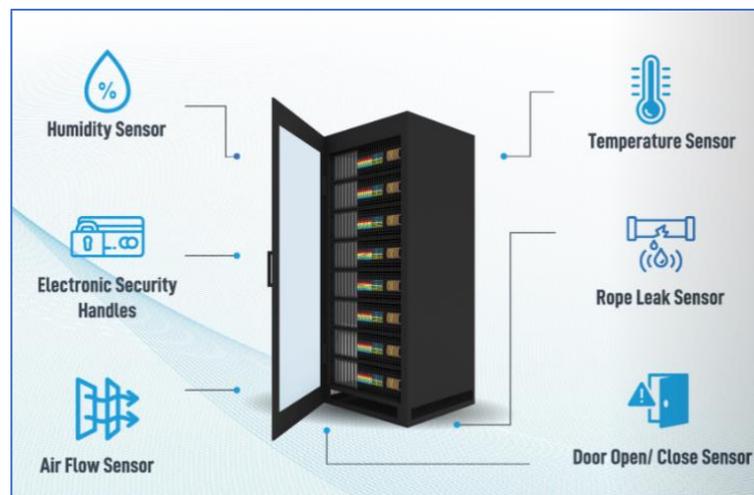



Accessories & Sensor Description	No of Sensor Points	Enlogic SKU
Temperature Sensor	1	EA9102
Temperature and Humidity Sensor	2	EA9103
(3) Temperature + (1) Humidity Sensor	4	EA9105
Sensor Input Hub (3 sensor inputs)	NA	EA9106
Door Switch Sensor	1	EA9109
Dry Contact Cable	1	EA9110
Spot Fluid Leak Sensor	1	EA9111
Rope Fluid Leak Sensor	1	EA9112
LED Light Strip Sensor	1	EA9125
RJ45-DB9 CABLE	1	EA9119
USB TO RS232 CABLE	1	EA9128
HID RACK ACCESS Kit	1	EA9130
E-Handle (RFID) – no keypad available	2	EA9551
<ul style="list-style-type: none"> E-Handle (with addition sensors of 3 Temperature + 1 Door) 	6	
E-Handle (RFID & User PIN authentication) – with keypad	2	EA950
<ul style="list-style-type: none"> E-Handle (with addition sensors of 3 Temperature + 1 Door) 	6	

For more information about Enlogic sensors, refer to the Installation sheet included with each sensor.





Connecting Asset Management Module

U-level Asset management and tracking products and solutions are an important aspect of asset management. Enlogic Asset Management Module's MC-RFID (Magnetic Control + RFID) is contactless technology. It does not rely on electrical connection to transmit data, and not impacted by poor contact at the contact point; at the same time, it avoids the interference of traditional RFID always transmitting signals to the device.

Some of the benefits of an Asset Management module are:

- Real-time Auto Find IT Asset.
- Real-time Auto Audit IT Asset.
- Real-time Monitor U-level Resource.
- IT Asset Whole-life Management.
- IT Asset Consumption Management.
- Real-time Record and Analysis for Asset and Resource.
- Very Early Warning for Fire.

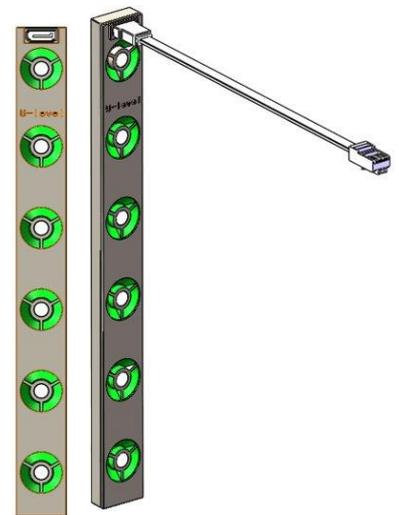

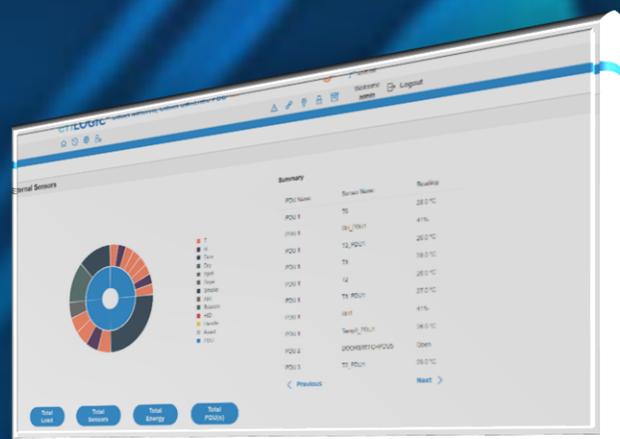

Web User Interface



Web User Interface (UI)

Connect the ethernet cable to the NMC, ensure it is active, which is indicated by a solid green light on the right and a flashing yellow light on the left. This indicates successful connectivity to the network.

Use the menu buttons to look up the IP address of the device on the OLED display by selecting Setup > **Network > IPv4 or IPv6 as applicable.**


In a standard web browser, enter the PDU IP address (“https://IP ADDRESS”) and proceed to configure the PDU as shown in the Web Configuration section. The supported Web browsers are Google Chrome (mobile and desktop), Mozilla Firefox, and Microsoft Edge on desktop. If browser displays “can’t reach this page” please double check that you are using the “https://” protocol not “http://”

Introduction to Web UI

When the user logs in for the first time or in the case of a password expiry, the password must be entered on the login page.

On the login page:

1. A **Change Default Password** screen comes to view.
2. Type the **Current Password**, **New Password** and **Confirmed New Password**.

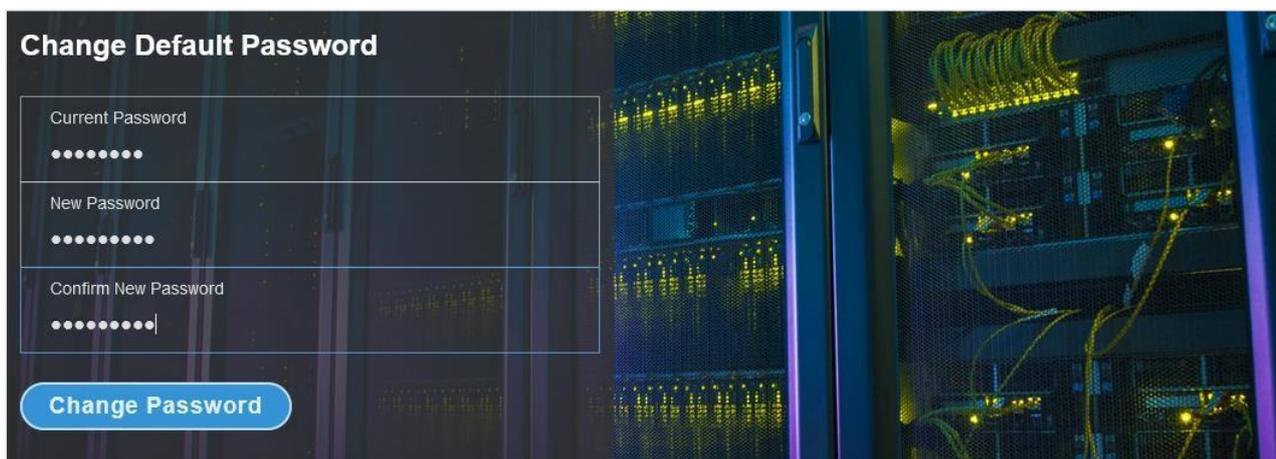

3. Click **Change Password** button to complete the process.



If the user needs to change the password using the web UI:

1. Click on the **User Settings** icon, the User Settings page comes to view.

2. In the **Users** section, under the category **Action**, click  the icon next your **Username** and **Role** to edit/change the password

User Settings

Users

Username	Unit	Role	Action
admin	° F	admin	
user	° F	user	 
manager	° F	manager	 



3. Type the new password in the **Password** and **Confirm Password**.
4. Click **Save** button to complete the setting.

Edit

User



Username	admin
Password	*****
Confirm Password	*****

Save



Navigating through the Web UI

The landing page, followed by the login page.

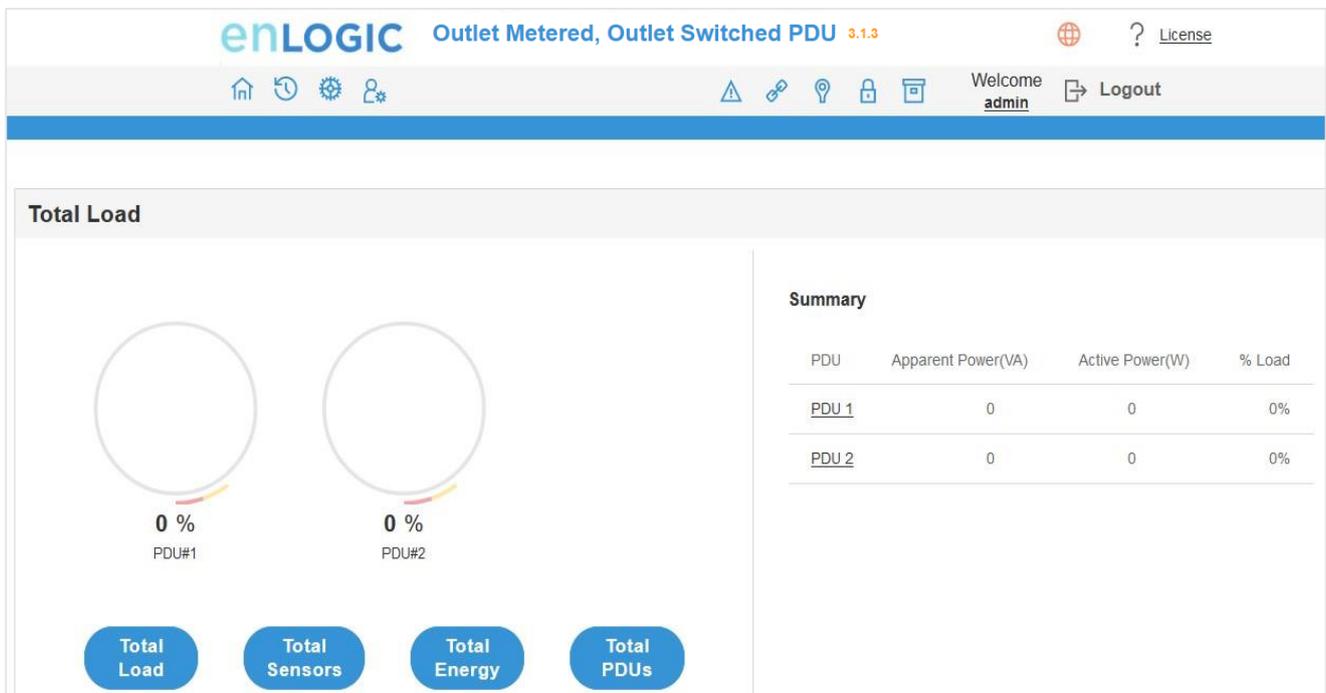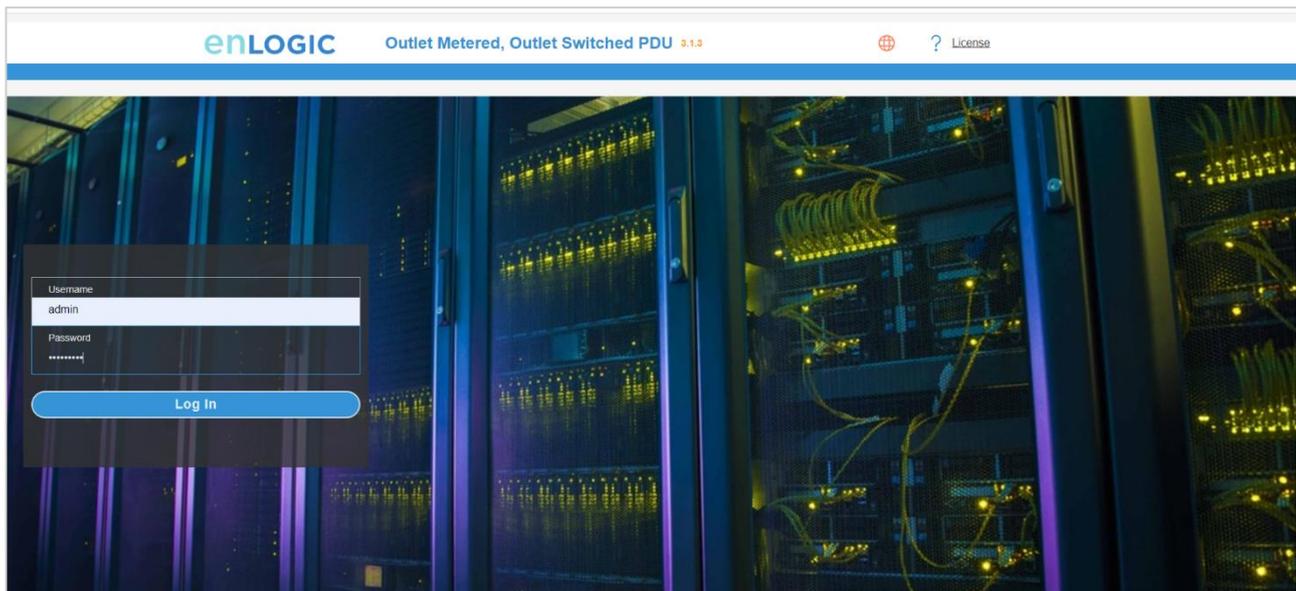



Icon	Description
	<p>Home Icon Click this Home icon to redirect/move to home page. Home page provides an overview of the PDU with access to the Dashboard, Identification and Control & Manage.</p>
	<p>Logs icon Click this icon to view and download the logs and data logs of the PDU.</p>
	<p>Settings Icon This settings icon allows the user to setup the Network Settings, System Management, SNMP Manager, Email Setup, Event Notifications, Trap Receiver, Thresholds, Rack Access Control and Smart Rack Control.</p>
	<p>User Settings Icon Click this icon to view the logged-in user or admin or manager. Also, the user can change the account passwords and manage user accounts through this page. Users and Roles can be added. Also, configure the RADIUS and LDAP servers</p>
	<p>Alarms Click this Alarm icon to view the details of the active critical alarms and active warning alarms.</p> <p>The Alarms are configured, based on different Thresholds which are set by the user on different parameters like Power, Voltage, Input Phase, Circuit Breaker, and External Sensors.</p> <p>Icon colors can be changed based on PDU alarm status. Critical Alarm always have high precedence over warnings.</p> <ul style="list-style-type: none"> • Red - Critical Alarms • Yellow - Warnings
	<p>Link This Icon indicates the daisy-chain connection status alarms.</p>




	<p>Sensor Warning This icon represents the sensor related alarms like:</p> <ul style="list-style-type: none"> • Temp • Humidity • Dry
	<p>Status Alarms This icon indicates the Door and HID sensor status alarms.</p>
	<p>Status Alarms This icon indicates the CB and Outlet status alarms.</p>
	<p>Select a Language This icon allows the user to select a Language. Currently eight languages are available to choose: English, French, Italian, Korean, German, Spanish, Japanese and Chinese.</p>
	<p>Click this icon to download system diagnostic logs or navigate to the user guide.</p>




Dashboard

In this page, the user can view information of Total Load, Total Sensors, Total Energy and Total PDUs.

1. Click on the **Home** icon to dropdown the Home menu.
2. Select **Dashboard** to view information

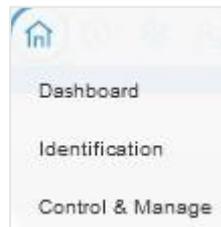

Total Load

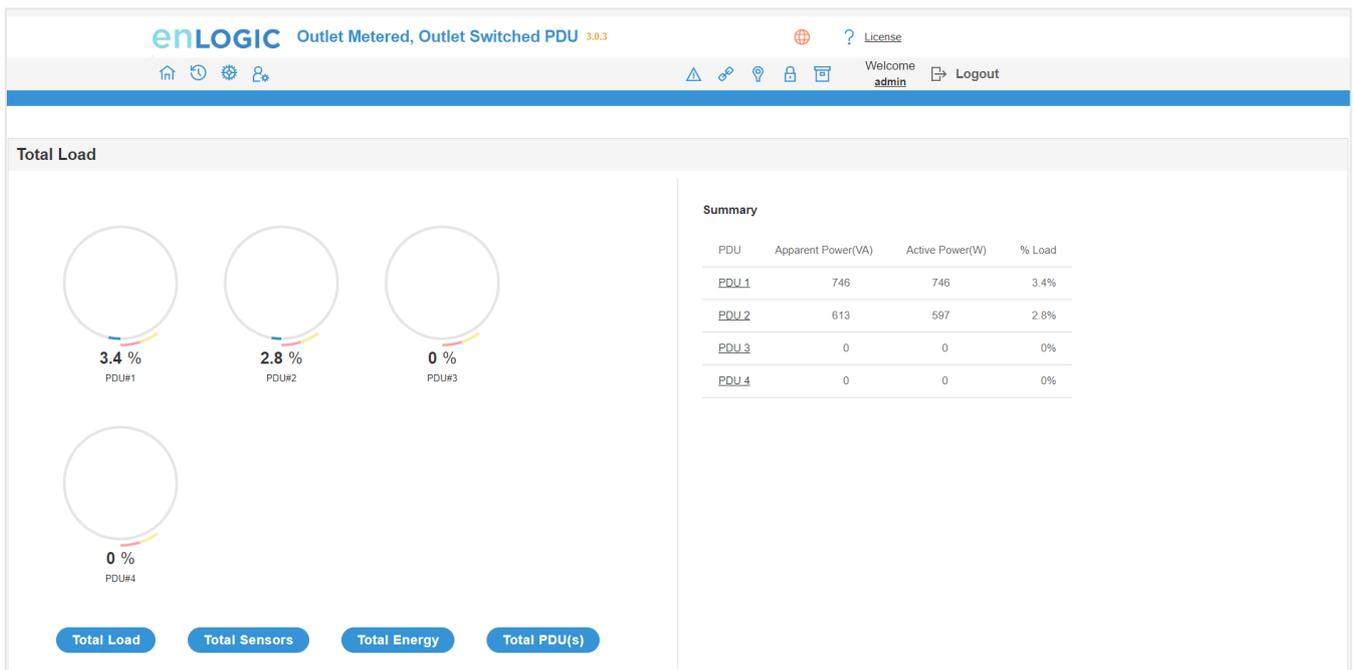



Total Energy

enLOGIC Outlet Metered, Outlet Switched PDU 3.0.3

Home Refresh Settings Users

License

Welcome admin Logout

Energy Information

0.419 kWh Total

- PDU 1 0.418 kWh
- PDU 2 0.001 kWh
- PDU 3 0 kWh
- PDU 4 0 kWh

Total 0.419 kWh

Summary

PDU Name	Total Energy(kWh)	Energy(kWh) [Since]
PDU 1	0.418	0.418 [2023/05/12 16:05:07]
PDU 2	0.001	0.001 [2023/11/09 16:49:34]
PDU 3	0	0 [2023/11/09 16:44:37]
PDU 4	0	0 [2023/11/09 16:45:05]

NOTE

The page shows energy accumulation at each PDU level as well as the sum of all PDU energy. Legend information summarizes energy information by the PDU. Mouse hover on Legend or Bar will display energy value in kWh. Color code may repeat over again if the system is connected with more than 6 PDU. Color is just used here for graphics not meant for anything else.

Total Load

Total Sensors

Total Energy

Total PDU(s)

Total Sensors

enLOGIC Outlet Metered, Outlet Switched PDU 3.0.3

Home Refresh Settings Users

License

Welcome admin Logout

External Sensors

- T
- H
- Door
- Dry
- Spot
- Rope
- Smoke
- AIR
- Beacon
- HID
- Handle
- Asset
- PDU

Summary

PDU Name	Sensor Name	Reading
PDU 1	T6	28.0 °C
PDU 1	RH_PDU1	41%
PDU 1	T3_PDU1	26.0 °C
PDU 1	T1	28.0 °C
PDU 1	T2	26.0 °C
PDU 1	T1_PDU1	27.0 °C
PDU 1	RH1	41%
PDU 1	Temp3_PDU1	26.0 °C
PDU 2	DOORSWITCHPDU5	Open
PDU 3	T2_PDU1	29.0 °C

[< Previous](#)
[Next >](#)

Total Load

Total Sensors

Total Energy

Total PDU(s)



Total PDUs

enLOGIC Outlet Metered, Outlet Switched PDU 3.0.3

Welcome admin Logout

Total PDU(s)

50 %

Total Load Total Sensors Total Energy Total PDU(s)

Summary

Total# PDU in Use	2
Total# PDU not in Use	2
Total# PDUs Connected	4



Identification

In this page, the user can view the **System Information**, and individual **PDU Information**.

1. Click on the **Home** icon to dropdown the Home menu
2. Select **Identification** to view the information and details about the External sensors connected.

Identification

System Information

Name	Value
System Name	saidarshan_EN2.0
Contact Name	ENLOGIC2.0_EN6810_32_PDU_SETUP
Contact Email	eenn1oogglic2882088890@gmail.com
Contact Phone	1234567890123456789012345678901234567890
Contact Location	INDIA_LAB BANGLORE SETUPINDIA_LAB BANGLORE SETUP

Name	Value
MAC Address	C8-45-44-50-1C-17
IPv4 Address	10.10.107.225
IPv6 Link Local Address	fe80::ca45:44ff:fe50:1c17
IPv6 Auto Configured Address	2001:c0a8:aa01:0:ca45:44ff:fe50:1c17

PDU Information

PDU's 1-4
PDU's 5-8
PDU's 9-12
PDU's 13-16
PDU's 17-20
PDU's 21-24
PDU's 25-28
PDU's 29-32

1		2		3		4	
Name	Master PDU	Name	pdu2	Name	pdu3	Name	pdu4
Core Location	Front						
Core U Position	1	Core U Position	2	Core U Position	3	Core U Position	4
Model	346-415V, 32A, 22.0kVA, 50/60Hz						
Part Number	EN6810						
Serial Number	WAAL0170	Serial Number	WAAL0161	Serial Number	WAAL0204	Serial Number	WAAL0046
Boot Version	1.2						
Web Version	1.0.7.3						
Firmware Version	1.0.7.3						
Hardware Version		Hardware Version		Hardware Version		Hardware Version	
PDU Power Rating (kVA)	22						
PDU Input Rating (A)	32						
PDU Breaker Rating (A)	16						

External Sensors

External Sensor Type	Sensor Name	Serial Number	Sensor ID	PDU	Location
Door	DOOR SWITCH	A280P022	1	PDU#1	

[Previous](#)
[Next](#)



Control and Manage

In this page, the user can view and control the **Power Outlet** of the PDU.


1. Click on the Home icon to dropdown the Home menu
2. Select Control & Manage.
3. Enable the Outlet Control Enabled.
4. Click on the  icon.
5. Edit/change the Outlet information below:
 - **Outlet name to identify the outlet**
 - **On delay time** (0-7200 seconds)
 - **Off delay time** (0-7200 seconds)
 - **State on startup** (On, Off, and last known can be selected)
 - **Reboot duration** (configure time between 5 to 60 seconds)

Edit

Outlet Information

Outlet Name	OUTLET 1
On Delay(0-7200s)	88
Off Delay(0-7200s)	8
State on Startup	Off
Reboot Duration(5-60s)	58

[Save](#)

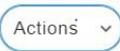6. On the top right side of the Control & Manage page there is an  icon, to **Reset PDU Energy**

Control & Manage Actions ▾

Outlet Control Enabled

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32

Breaker 1 Breaker 2 Breaker 3 Breaker 4 Breaker 5 Breaker 6 

Outlet Name	Power Control	On Delay(0-7200s)	Off Delay(0-7200s)	State on Startup	Reboot Duration(5-60s)	
OUTLET 1		88	8		58	
OUTLET 2		0	0		5	
OUTLET 3		0	0		5	
Outlet 4		7	77		55	
OUTLET 5		0	0		5	
OUTLET 6		0	0		5	




View Logs

In this page, the user can view, download, and clear the Actions performed by the PDU.

Some of the actions performed by the PDU are:

- Generating **Event, Audit and Application logs,**
- Recording **Power Share** details.

Click on the **System Administration** icon to dropdown the menu.

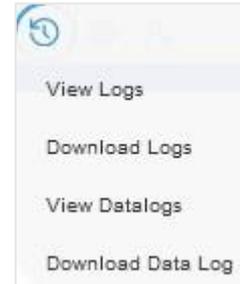

1. Select the **View Logs** to view the information.

View Logs			Download	Clear
page 1/30			1 2 3 4 5 >> 30	
Type	Description	Date & Time		
Audit Log	User admin of PDU 1 from host 10.10.106.111 logged out	2021/09/14, 09:39:59		
Audit Log	User admin of PDU 1 from host 10.10.105.39 logged in	2021/09/14, 09:38:49		
Audit Log	User admin of PDU 1 from host 10.10.105.39 logged out	2021/09/14, 09:37:44		
Event Log	External sensor HID of PDU 27 communication lost	2021/09/14, 09:37:40		
Event Log	External sensor DOOR of PDU 27 communication lost	2021/09/14, 09:37:40		
Audit Log	User admin of PDU 1 from host 10.10.105.194 logged in	2021/09/14, 09:35:55		
Audit Log	User admin of PDU 1 from host 10.10.105.95 time out	2021/09/14, 09:33:34		
Audit Log	User admin of PDU 1 from host 10.10.105.39 logged in	2021/09/14, 09:30:39		

2. On the top-right side of the view log page, Click the below options as required:

3. **Download** Log: to download the logs

4. **Clear** Log: to delete/clear the logs.





View Data Logs

In this page, the user can view, configure, download, and clear the Data recorded by the PDU. The Data recorded by the PDU are:

- **Energy** information
- **Power** information
- **Date and Time** information

1. Click on the **System Administration** icon to dropdown the menu.
2. Select the **View Data Logs** to view the information.

Date(DD/MM/YY)	Time(HH:MM:SS)	PDUID	Pwr.kW	PwrMax.kW	PwrApp.kW	Energy.kWh	PH.VOL.1	2	3	PH.CUR.1	2	3	PH.PEAK.1	2	3	PH.PWR.1	2	3
04/01/2010	20:31:17	2	0.000	0.000	0.000	0.0	0	0	0	0.00	0.00	0.00	0.00	0.00	0.00	0.000	0.000	0.0
04/01/2010	20:31:16	1	0.000	0.000	0.000	0.0	0	0	0	0.00	0.00	0.00	0.00	0.00	0.00	0.000	0.000	0.0

3. On the top- right side of the View Data Log page, Click the below options as required:
 - **Data Log Configuration**, Click on this button to:
 - **Enable** Data Log Configuration if data log is required.
 - **Log Interval** time that needs to be recorded.
 - **Download** Data Log: to download the logs.
 - **Clear** Data Log: to delete/clear the logs.



Network Settings

This page allows the management of IP Configuration, Web Configuration, RESTapi Configuration, DNS Configuration, SSH/FTP's Configuration, Network Time Protocol (NTP), Date/Time Settings and Daylight-Savings Time.

This PDU supports IPv4 and IPV6 with full featured network management and alerting capabilities. After you select your Internet protocol option, you will be able to communicate via HTTP, HTTPS, SNMP, FTPS and SSH and Email for network communications.

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select the **Network Settings** to view the information.

enLOGIC Outlet Metered, Outlet Switched PDU 3.1.3 License

Welcome admin Logout

Network Settings Set Certificate Key | Change Link Speed | Syslog Configuration

Ethernet-1 IP Configuration		Domain Name System	
Network Mode	IPv4/IPv6 Dual	Manually Override Servers	×
Boot Mode	DHCP	Primary DNS Server	0.0.0.0
Boot Mode IPv6	Autoconfig	Secondary DNS Server	0.0.0.0
IPv4 Address	10.10.106.188	Edit Hostname/Domain	×
Network Mask	255.255.252.0	Host Name	
Default Gateway	10.10.104.254	Domain Name(IPv4/IPv6)	
IPv6 Link Local Address	fe80::ca45:44ff:feb5:9ef		
IPv6 Global Configured Address	2001:c0a8:aa01::dc8		

Web/ RESTapi Access Configuration		SSH/FTP's Configuration	
Web Access	https	SSH Access	✓
Web Port	443	SSH Port	22
RESTapi Access	×	FTPs Access	✓
Certificate	View Certificate	FTPs Port	21



3. Click on the  icon to edit/change the **IP Configuration** information below:

- **Network Mode**
- **Boot Mode**
- **Boot Mode Ipv6**
- **IPv4 Address**
- **Network Mask**
- **Default Gateway**
- **IPv6 Auto Configured Address**
- **Subnet Prefix Length (Ipv6)**
- **Default Gateway (Ipv6)**
- Click **Save** button to complete setting.

Edit

IP Configuration

Network Mode	IPv4/IPv6 Dual
Boot Mode	STATIC
Boot Mode IPv6	STATIC
IPv4 Address	10.88.16.17
Network Mask	255.255.255.192
Default Gateway	10.88.16.1
IPv6 Auto Configured Address	2007:cb9:8765:4321::1009
Subnet Prefix Length (IPv6)	64
Default Gateway (IPv6)	2007:cb9:8765:4321::1

[Save](#)



4. By default, accessing the PDU uses HTTPS port setting.

Click the  icon to edit/change the **Web/RESTapi Access Configuration** information below:

- **Web Access (HTTP or HTTPS).**
- **Web Port** (Default 80 for HTTP, and 443 for HTTPS).
- Enable **RESTapi Access**.
- To access the HTTPS settings, upload the **SSL Certificate** and **SSL Certificate Key** provided by Enlogic.
- Click Save button to complete the settings.

Edit

Web/ RESTapi Access Configuration

Web Access
Https
Web Port Default 80 for Http, 443 for Https
443
RESTapi Access
Enable
SSL Certificate
SSL Certificate <input type="button" value="Choose File"/> No file chosen
SSL Certificate Key <input type="button" value="Choose File"/> No file chosen

5. Edit the SSH/FTPS configuration Settings information below:

Click the  icon to edit/change the **SSH/FTPs Configuration** information below:

- Enable **SSH Access**.
- **SSH Port** (Default 22).
- Enable **FTPs Access**.
- **FTPs Port** (Default 21).
- Click Save button to complete the settings.

Edit

SSH/FTPs Configuration

SSH Access
<input checked="" type="checkbox"/>
SSH Port Default 22
22
FTPs Access
<input checked="" type="checkbox"/>
FTPs Port Default 21
21



6. You can link the PDU to a **Network Time Protocol (NTP)** server and let it set the date and time.

Click the icon  to edit/change the NTP Setting information below:

- **Enable** the NTP settings.
- To synchronize the PDU time with a selected server,
- Type the valid **Primary** NTP server address
- Type the valid **Secondary** NTP server address
- Select the desired **NTP GMT offset** time from the dropdown list.
- Click **Test** button to check if the network is valid or not.
- Click **Save** button to complete setting.

Edit

Network Time Protocol(NTP)

Enable	<input type="checkbox"/>
Primary NTP Server	0.0.0.0
Secondary NTP Server	0.0.0.0
NTP GMT Offset	(UTC) Dublin, Edinburgh, Lisbon, London

7. You can manually set the internal clock on the PDU.

Click the icon  to edit/change the **Date/Time Setting** information below:

- Type the **Date** in YYYY/MM/DD format or use the calendar icon.
- Type the **Time** in HH: MM: SS format and time is measured in 24-hour format.
- Click **Save** button to complete setting.

Edit

Date/Time Settings

Date	2021/01/28	
Time	HH:MM:SS	16:37:43 
Date Format	Supported format is [YYYY/MM/DD]	



8. Click on the  icon to edit/change the Daylight-Saving Time information below:

- **Enable** the Daylight-Saving Time.
- Select the specifics of the **Start Month**:
 - Month
 - Week
 - Day
 - Time
- Select the specifics of the **End Month**:
 - Month
 - Week
 - Day
 - Time
 - Assign the **Time Offset**.
- Click **Save** button to complete setting.

Edit

Daylight Saving Time

Enable

Start Month

Select

Select

Select

0:0:199

End Month

End Month::Week::Day::Time

Select

Select

Select

199:173:0

Time Offset

Select

[Save](#)

9. On the top-right side of the Network Settings page, Click the below options as required:

Set Certificate Key

Below are the steps to edit SSL Certificate Key Length.

- Click **Set Certificate Key** button.
- Select **bits (1024/2048)** from dropdown menu.
- Click **Save** button to complete setting.

Edit

SSL Certificate Key Length

SSL Certificate Key Length

2048 bits

[Save](#)



Change Link Speed

Below are the steps to change the Ethernet link speed.

- Click **Change Link Speed** button.
- Select speed (as required below) from dropdown menu.
 - - **Auto Negotiation**
 - - **10/100 Mbps**
 - - **1 Gbps**
- Click **Save** button to complete setting.

Edit

Ethernet Link Speed

Link Speed
 Auto Negotiation

Save

Syslog Configuration

Below are the steps to configure the Syslog.

- Click **Syslog Configuration** button.
- Enable the **Enable Syslog Server Access**.
- Type the **Syslog Server Address**.
- Select **Syslog Server Port** number.
- Click **Save** button to complete setting.

Edit

System Log Configuration

Enable Syslog Server Access

Syslog Server Address :

Syslog Server Port
 514


Save



System Management

This page allows the user to perform functions like, **Uploading Firmware, Uploading Configuration, Downloading Configuration** and setting the PDU to its **Default Settings**. It also allows the user to **Restart** the PDU.

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select the **System Management** to view the information.

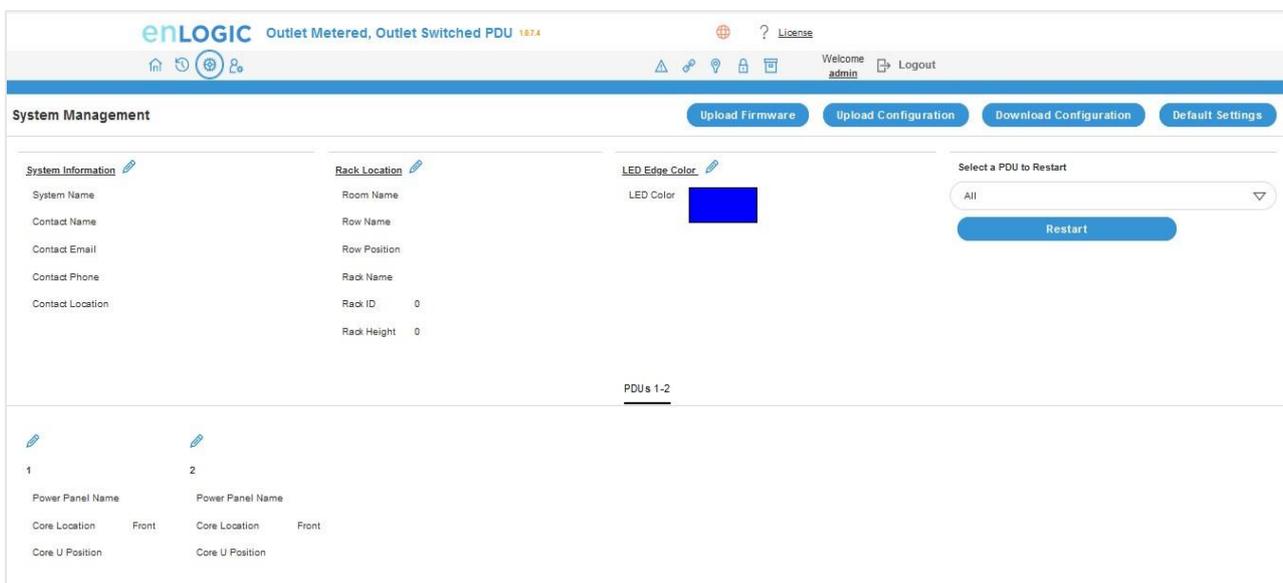

3. Click on  the icon to edit/change the System Information below.

- Enter the **System Name** of the PDU for identification
- Enter the **Contact Name** of the contact person.
- Enter the **Contact Email** of the contact person.
- Enter the **Contact Phone** of the contact person.
- Enter the **Contact Location** of the contact person.
- Click **Save** button to complete setting.

Edit

System Management

System Name	hai
Contact Name	s
Contact Email	hallo@c.com
Contact Phone	88
Contact Location	b

[Save](#)



4. Click on the icon  to edit the Rack Location Information below:

- Enter the **Room Name** to identify the cabinet or room where the PDU is located.
- Enter the **Row Name** where the PDU is located on the rack.
- Enter the **Row Position** where the PDU is located on the rack.
- Enter the **Rack Name** where the PDU is located.
- Enter the **Rack ID** for identification of rack.
- Enter the **Rack Height** where the PDU is located on the rack.
- Click **Save** button to complete setting.

Edit

Rack Location

Room Name
Row Name
Row Position
Rack Name
Rack ID 0
Rack Height 0

[Save](#)

4. The LED Edge Color can be configured into 7 different colors for the easy identification. The colors are red, blue, white, yellow, green, cyan, and pink.

Click the  icon to edit/change the **LED Edge Color** information below:

- Select the **LED Color**.
- Select **PDU**.

Edit

LED Edge Color

LED Color Blue
Select PDU All ▼

[Save](#)



5. Click the  icon to edit/change the **Power Panel & Core Location** information below:

- Enter the **Power Panel Name** to identify the PDU.
- Select **Core Location** to identify which side the PDU is located **Front** or **Back**
- Enter **Core U Position** to identify the rack location.
- Click **Save** button to complete setting.

Edit

Power Panel & Core Location

Power Panel Name	1
Core Location	Front
Core U Position	1

Save

SNMP Management

This page allows the user to manage the transfer of data from the PDU to the MIB Browser. Simple Network Management Protocol (SNMP) is used to manage the Advantage Secure PDU(s) remotely. SNMP allows the user to monitor and detect PDU faults and to even configure variable data in the PDU.

1. Click on the **Settings** icon to dropdown the Settings menu.
 2. Select the **SNMP Manager** to view the information.
 3. To access the PDU data inside a MIB Browser.
- Enable the SNMP General
 - 4. Click Save button to complete the settings.

SNMP General

Enable ✓

SNMP Version V1/2c&V3

SNMP General

Enable

SNMP Version V1/2c&V3

Save



5. To secure the link between the PDU and the MIB Browser.

6. Click the  icon to edit/change the SNMP Port below:

- Enter the **SNMP Port** number.
- Enter the **SNMP Trap Port** number.
- Click **Save** button to complete setting.

SNMP Port 

SNMP Port 161

SNMP Trap Port 162

Edit

SNMP Port

SNMP Port
161

SNMP Trap Port
162

[Save](#)

7. Configuring Users for SNMP V1/V2c. Click on the icon  to edit/change the SNMP V1/2c Manager below:

SNMP Management				
<p>SNMP General </p> <p>Enable <input checked="" type="checkbox"/></p> <p>SNMP Version V1/2c&V3</p>		<p>SNMP Port </p> <p>SNMP Port 161</p> <p>SNMP Trap Port 162</p>		
SNMP V1/2c Manager				
IP Address	Read Community	Write Community	Enable	
10.10.107.135	public	private	✓	
0.0.0.0	public	private	✗	
0.0.0.0	public	private	✗	
0.0.0.0	public	private	✗	
0.0.0.0	public	private	✗	



- Enter the **IP Address**.
- Define the security to **public** or **private** in the
 - **Read Community**
 - **Write Community**
- **Enable** the SNMP V1/V2c.
- Click **Save** button to complete setting.

Edit

SNMP V1/2c Manager

IP Address	10.10.107.135
Read Community	public
Write Community	private
Enable	<input checked="" type="checkbox"/>

[Save](#)

8. Configuring users for SNMP V3 to ensure higher security of data transfer, to the MIB browser.

Click on the icon to edit/change the **SNMP V3 Manager** below:

SNMP V3 Manager						
Username	Security Level	Authentication Password	Authentication Algorithm	Privacy Key	Privacy Algorithm	Enable
NoAuthNoPriv	*****	*****	MD5	*****	DES	✕
NoAuthNoPriv	*****	*****	MD5	*****	DES	✕
NoAuthNoPriv	*****	*****	MD5	*****	DES	✕
NoAuthNoPriv	*****	*****	MD5	*****	DES	✕
NoAuthNoPriv	*****	*****	MD5	*****	DES	✕

- **AuthPriv**: Authentication and privacy.
- Type a new unique password as the **Authentication Password**.
- Select the **Authentication Algorithm**.
- **MD5**
- **SHA**
- Type a new unique password as the **Privacy Key**
- Select the **Privacy Algorithm**.
 - **DES**
 - **AES-128**
 - **AES-192**
 - **AES-256**
- **Enable** the SNMP V3.
- Click **Save** button to complete setting.

Edit

SNMP V3 Manager

Username	
Security Level	No Auth No Priv
Authentication Password	
Authentication Algorithm	MD5
Privacy Key	
Privacy Algorithm	DES
AES 128	

[Save](#)



Email Setup

In this page, the user can configure the PDU to send alerts or event messages via email. To do this, the information about the Simple Mail Transfer Protocol (SMTP) server needs to be configured.

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select the **Email Setup** to view the information.

3. To set the SMTP server settings to receive Emails and notifications.

Click the  icon to edit/change the **SMTP Account Settings** below:


- Enter the **Email Server Address**, which is the IP address or Fully qualified Domain Name of the SMTP server to route the emails to the recipient.
- Enter the **Sender Address**, which is the email address that the email is sent **From**.
- Configure the **Port** number, which is the communication endpoint on the server. The default is **25**.
- Enter the **Username** for SMTP security.
- Enter the **Password** for SMTP security.
- Assign the **Number of Sending Retries**, which is the number of times the PDU will attempt to resend a message if the message fails. The default is **3**.
- Type the **Time Interval Between Sending Retries** (in minutes). The default is **6** minutes.
- Enable the **Server Requires Authentication** to password protect the SMTP.
- Click **Save** button to complete setting.

Edit

SMTP Account Settings

Email Server Address
Sender Address
Port 25
Username
Password
Number of Sending Retries 3
Time Interval Between Sending Retries(in Minutes) 6
Server Requires Authentication <input type="checkbox"/>

[Save](#)

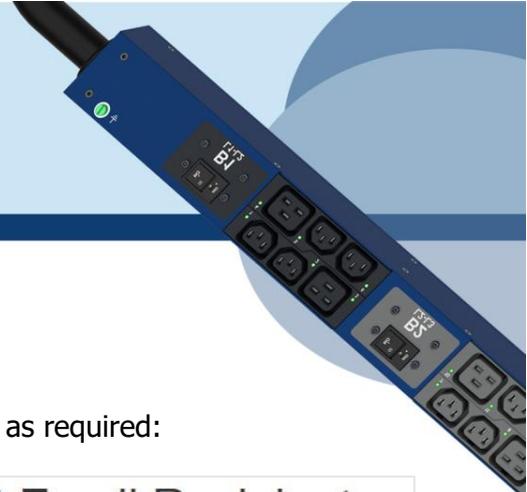

On the top- right side of the Email Setup page, Click the below options as required:

Send Test Email

This button allows us to send a test mail to check if the feature is active or not.

- Enter the **Recipient Email Address**.
- Click the **Send** button to send the Email.

Test Email Recipients



Event Notifications

In this page the user can assign the Event notifications from the PDU to the Syslog, SNMP Trap, and Email.

An event notification has two parts:

- Event: the situation where the PDU meets certain condition (i.e., temperature sensor exceeds the warning limit. Or circuit breaker status is changed).
- Action: the response to the event (i.e., send an SMTP message and SNMP trap).

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select **Event Notifications** to view information.
3. **Enable the Email, SNMP Trap and Syslog** to the respective Events to receive notification.

Event Notifications			
Events	<input checked="" type="checkbox"/> Email	<input checked="" type="checkbox"/> SNMP Trap	<input checked="" type="checkbox"/> Syslog
Circuit Breaker Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
User Activity	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Smart Rack Access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Outlet Power Control Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
User Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Critical Alarm	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Warning Alarm	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Password/Settings Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Network Card Reset/Start	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
External Sensor Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PDU Configuration File Imported/Exported	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
User Role Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Firmware Update	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Communication Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Daisy Chain Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Enter Bootloader Mode	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LDAP/Radius Error	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Power Sharing Status Changed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

The Critical and Warning Alarms are enabled at the SNMP Trap, as default. The notifications for these default events enabled, can only be received after the configuration of **Traps Receiver**.



Trap Receiver

This page allows us to configure the Trap receiver by typing in name, host, and community. Typically, the Read Community and Write Community are public.

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select **Trap Receiver** to view information.
3. Configuring users for SNMP V1 Trap Settings that allows the communication to the MIB browser.

Trap Receiver				
SNMPV1 Trap Receiver				
Name	Host	Community	Enable	
admin	10.10.105.95	public	<input checked="" type="checkbox"/>	
LOP1	10.10.106.111	public	<input checked="" type="checkbox"/>	
console 10	10.10.105.16	public	<input checked="" type="checkbox"/>	
console 11	10.10.105.84	public	<input checked="" type="checkbox"/>	
admin1	10.10.105.13	public	<input checked="" type="checkbox"/>	

Click on the **Receiver**



icon to edit/change the **SNMP V1 Trap** settings below:

- Enter the **Name**, which allows us to identify the different receivers.
- Enter the **Host** IP address to which the traps are sent.
- Assign the **Community** to **public** or **private** security.
- **Enable** the SNMP V1.
- Click **Save** to complete the settings.

Edit

SNMPV1 Trap Receiver

Name	admin
Host	10.10.107.135
Community	public
Enable	<input checked="" type="checkbox"/>

[Save](#)



- Configuring users for SNMP V3 Trap Settings that allows for encrypted communication to the MIB browser.

Click the  icon to edit/change the **SNMP V3 Trap Server** settings below,

- Enter the **Name**, which allows us to identify the different receivers.
- Enter the **Host** IP address to which the traps are sent.
- Assign the **Security Level** from the dropdown menu.
- **NoAuthNoPriv**: No authentication and no privacy. This is the default.
- **AuthNoPriv**: Authentication and no privacy.
- **AuthPriv**: Authentication and privacy.
- Type a new unique password as the **Authentication Password**.
- Select the **Authentication Algorithm**.
 - **MD5**
 - **SHA**
- Type a new unique password as the **Privacy Key**.
- Select the **Privacy Algorithm**.
 - DES
 - AES-128
 - AES-192
 - AES-256
- **Enable** the SNMP V3
- **Click Save button to complete settings.**

Edit

SNMPv3 Trap Server

Name
Host
Security Level No Auth No Priv
Authentication Password
Authentication Algorithm MD5
Privacy Key
Privacy Algorithm AES128
Enable <input type="checkbox"/>

Save

On the top-right side of the Email Setup page, Click the below options as required:

- **Send Test Trap** - This button allows us to send a test Trap to check if the feature is active or not.



Defining Thresholds

The Thresholds are limits, defined by the user over parameters like power, phase, circuit breaker and sensor to send alert notifications when the value crosses above or below the limit.

To access the PDU Thresholds page,

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select **Thresholds** to view information.

Power Thresholds

The PDU will send alert notifications when a power threshold wattage crosses above or below the settings you specify in the Power Threshold.

Below are the steps to change the Power Thresholds settings and alarm notifications,

1. Choose **Power Threshold** tab in the PDU Threshold page.
2. Click  icon edit/change the Power Threshold Setting.

Device Detection Threshold 	
Threshold(mA) 150	
Power Threshold	
Input Phases	
Circuit Breaker	
Control Management	
External Sensors	
PDU 1-4	
PDU 5-8	
PDU 9-12	
PDU 13-16	
	
1 (Watts)	2 (Watts)
High Critical 0	High Critical 0
High Warning 0	High Warning 0
Low Warning 0	Low Warning 0
Low Critical 0	Low Critical 0
	
3 (Watts)	4 (Watts)
High Critical 0	High Critical 0
High Warning 0	High Warning 0
Low Warning 0	Low Warning 0
Low Critical 0	Low Critical 0



3. In the **PDU Power Threshold Setting** dialog boxes, change the fields as needed:
 - a. Low Critical (W)
 - b. Low Warning (W)
 - c. High Warning (W)
 - d. High Critical (W)
 - e. Reset Threshold (W)
 - f. Alarm State Change Delay (samples)
4. Click **Save** button to complete the setting.
5. Repeat the steps for all PDUs.

Edit

PDU Power Threshold (W)

High Critical	0
Enable High Critical	<input type="radio"/>
High Warning	0
Enable High Warning	<input type="radio"/>
Low Warning	0
Enable Low Warning	<input type="radio"/>
Low Critical	0
Enable Low Critical	<input type="radio"/>
Reset Threshold	0
Alarm State Change Delay (Samples)	0

[Save](#)



Input Phases

The PDU will send alert notifications when a phase current and voltage alarm crosses above or below the settings you specify in the Input Phase Threshold.

Below are the steps to change the Input Phase Settings and alarm notifications,

1. Choose the **Input Phases** tab in the PDU Threshold page.
2. Click  icon to edit/change the Phase Current Settings.

PDU Thresholds						
Device Detection Threshold 						
Threshold(mA)						
Power Threshold	Input Phases	Circuit Breaker	Control Management	External Sensors		
					1	
Phase Current	Reading(A)	Low Critical	Low Warning	High Warning	High Critical	
Phase1	0.0	0.0	0.0	22.0	28.0	
Phase2	0.0	0.0	0.0	22.0	28.0	
Phase3	0.0	0.0	0.0	22.0	28.0	

3. In the **Input Phase Current Alarm Setting** dialog boxes, change the fields as needed:

- Low Critical (A)
- Low Warning (A)
- High Warning (A)
- High Critical (A)
- Reset Threshold (A)
- Alarm State Change Delay (samples)

Edit

Input phases current alarm setting

Low Critical (A)
0

Enable Low Critical

Low Warning (A)
0

Enable Low Warning

High Warning (A)
22

Enable High Warning

High Critical (A)
28

Enable High Critical

Reset Threshold (A)
1

Alarm State Change Delay (Samples)
0

Save

4. Click **Save** button to complete the setting
5. Repeat Steps 1 to 4 for all PDUs
6. Click on the  icon to edit/change the Phase Voltage Settings



7. In the **Input Phase Voltage Alarm Setting** dialog boxes, change the fields as needed:
 - Low Critical (V)
 - Low Warning (V)
 - High Warning (V)
 - High Critical (V)
 - Reset Threshold (V)
 - Alarm State Change Delay (samples)
8. Click **Save** button to complete the setting.
9. Repeat the steps for all PDUs.



Circuit Breaker

The PDU will send alert notifications when a circuit breaker amperage crosses above or below the settings you specify in the Circuit Breaker Threshold.

Below are the steps to change the Circuit Breaker Settings and alarm notifications,

1. Choose the **Circuit Breaker** tab in the PDU Threshold page.
 - Low Critical (A)
 - Warning Thresholds
 - High Warning (A)
 - High Critical (A)
 - Reset Threshold (A)
 - Alarm State Change Delay (samples)
2. Click **Save** button to complete the setting.
3. Repeat the steps for all PDUs.

Edit

Bank

Low Critical (A)	0
Enable Low Critical	<input type="radio"/>
Low Warning (A)	0
Enable Low Warning	<input type="radio"/>
High Warning (A)	11
Enable High Warning	<input checked="" type="checkbox"/>
High Critical (A)	14
Enable High Critical	<input checked="" type="checkbox"/>
Reset Threshold (A)	1
Alarm State Change Delay (Samples)	0

[Save](#)



Circuit Breaker List

PN	Manufacturer	Manufacturer Part Number	Amperage	AIC	Application
810-00975	BSB	B3D1-16.0-240-1500B-A2-C1-G-K	16A,1P	5KA	Vertical
810-00977	BSB	B3D1-20.0-240-1500B-A2-C1-G-K	20A,1P	5KA	Vertical
810-00976	BSB	B3D1-20.0-240-2520B-A2-C1-G-K	20A,2P	5KA	Vertical
810-00980	BSB	B2R1-16.0-250-1200B-A2-F2-K-C	16A,1P	5KA	Horizontal
810-00978	BSB	B2R1-16.0-250-1300B-A2-F2-K-C	16A,1P	5KA	Vertical
810-00981	BSB	B2R1-20.0-250-1200B-A2-F2-K-C	20A,1P	5KA	Horizontal
810-01151	BSB	B2R6-20.0/127-1300B-A2-F1-K-K	20A,1P	5KA	Vertical
810-00982	BSB	B2R1-20.0-250-2220B-A2-F2-K-C	20A,2P	5KA	Horizontal
810-00979	BSB	B2R1-20.0-250-2320B-A2-F2-K-C	20A,2P	5KA	Vertical
810-01203	BSB	B3H3-20.0/240-1100B-A2-F2-G-K	20A,1P	10KA	Vertical
810-01204	BSB	B3H3-20.0/240S-2100B-A2-F2-G-K	20A,2P	10KA	Vertical
810-01205	BSB	B3H3-16.0/240-1100B-A2-F2-G-K	16A,1P	10KA	Vertical
810-01206	BSB	B2HR6-16.0/240-1A00B-A2-F1-K-K	16A,1P	10KA	Vertical
810-01207	BSB	B2HR6-20.0/240-1A00B-A2-F1-K-K	20A,1P	10KA	Vertical
810-01208	BSB	B2HR6-20.0/240-2A20B-A2-F1-K-K	20A,2P	10KA	Vertical
810-01209	BSB	B2HE4-16.0/240-1200B-A2-F1-K-K	16A,1P	10KA	Horizontal
810-01210	BSB	B2HE4-20.0/240-1200B-A2-F1-K-K	20A,1P	10KA	Horizontal
810-01211	BSB	B2HE4-20.0/240-2230B-A2-F1-K-K	20A,2P	10KA	Horizontal



Control Management

The PDU will send alert notifications when an outlet wattage crosses above or below the settings you specify in the Control Management Threshold.

1. Choose the **Control Management** tab in the PDU Threshold page.

The screenshot shows the 'enLOGIC' web interface for 'Outlet Metered, Outlet Switched PDU 1674'. The 'Control Management' tab is selected. Below the navigation tabs, there is a table for configuring outlet thresholds across six banks.

Name	Bank#1		Bank#2		Bank#3		Bank#4		Bank#5		Bank#6	
	Low Critical	Low Warning	High Warning	High Critical	Low Critical	Low Warning	High Warning	High Critical	Low Critical	Low Warning	High Warning	High Critical
OUTLET 1	0	0	0	0	0	0	0	0	0	0	0	0
OUTLET 2	0	0	0	0	0	0	0	0	0	0	0	0
OUTLET 3	0	0	0	0	0	0	0	0	0	0	0	0
OUTLET 4	0	0	0	0	0	0	0	0	0	0	0	0
OUTLET 5	0	0	0	0	0	0	0	0	0	0	0	0
OUTLET 6	0	0	0	0	0	0	0	0	0	0	0	0

2. Click icon to edit/change the Control Management Settings,
 - Low Critical (W)
 - Low Warning (W)
 - High Warning (W)
 - High Critical (W)
 - Reset Threshold (W)
 - Alarm State Change Delay (samples)
3. Click **Save** button to complete the setting.
4. Repeat the steps for all PDUs.

The 'Edit' form contains the following fields:

- Low Critical (W): 1
- Set Lower Critical:
- Low Warning (W): 2
- Set Lower Warning:
- High Warning (W): 3
- Set High Warning:
- High Critical (W): 4
- Set High Critical:
- Reset Threshold (W): 1
- Alarm State Change Delay (Samples): 2

A **Save** button is located at the bottom of the form.



The PDU will communicate about the sensor location, alarms, notifications, and details. The External Sensors section displays the connected sensors on the PDU. Choose the External Sensors tab PDU Threshold page.

1. Choose the **External Sensors** tab in the PDU Threshold page
2. Click  icon to edit/change the External Sensors Settings,
 - Low Critical
 - Low Warning
 - High Warning
 - High Critical
3. Click **Save** button to complete the setting.
4. Repeat the steps for all PDUs.

Edit

External Sensors(1:1)

High Critical	31	Enable High Critical	<input checked="" type="checkbox"/>
High Warning	29	Enable High Warning	<input checked="" type="checkbox"/>
Low Warning	17	Enable Low Warning	<input checked="" type="checkbox"/>
Low Critical	15	Enable Low Critical	<input checked="" type="checkbox"/>

Save



Rack Access Control

This page allows you to configure the Rack Access functions to control and monitor the Racks.

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select **Rack Access Control** to view information.

PDU	Card ID	Aisle	User	Date/Time	Action
1	12345678	Cold Aisle	Card1	1/5/2010 11:22:51	✗

On the top- right side of the Rack Access Control page, Click the below options as required:

- **Actions**
- **New**

To Assign new Rack Access to the PDU

Remote Control

Used to perform Lock, Unlock and Close functions.



AutoLock Settings

To assign Automatic locking functions within a time limit to the PDU

Edit

AutoLock Setting

PDU1	▼
Aisle	
Hot Aisle	▼
Interval(1-30 Minutes)	
10	

Handle and Compatible Card Types

Below are the card lists which are supported on the different swing handle,

1. MYFARE® Classic 4K
2. MYFARE® Plus 2K
3. MYFARE® DESFire 4K
4. HID® iCLASS



Smart Rack Control

This page allows you to configure the Smart Rack Access functions to control and monitor the Racks. It is used to set up the access control server door Handle (above 4 Handles and Compatible Cards). So, the user can use the editing option to modify the data as required. A total of 200 cards are compatible with the smart rack control.

1. Click on the **Settings** icon to dropdown the Settings menu.
2. Select **Smart Rack Control** to view information.

3. Click  icon to edit/change the Rack Access Control Settings

- Enter the **Card ID** to ensure security and restrictive access.
- Enter **Username** of the card holder.
- Enter **PIN** (as set in card configuration page).
- Enable or Disable **Temporary User** as per user status
- Click **Save** button to complete setting.

Add

Card

Card ID

Username

PIN
Please set PIN length in Card Configuration page. Default length is 0.

Temporary User

Save



4. On the top-right side of the Rack Access Control page, Click the below options as required:

Action

5. On the top-right side of the Rack Access Control page, click the below options as required. Click on the Actions, Edit button

6. To add card details, select **Add Card**.

- Enter the **Card ID**
- Enter **Username** of the card holder.
- Enter **PIN** (as set in card configuration page)
- Enable or Disable **Temporary User** as per user status
- Click **Save** button to complete setting.

7. To edit rack access details, select **Rack Access Settings**.

- Select **Aisle Control** to **Standalone** or **Combined** as per rack.
- Set **Autolock Time**.
- Set **Door Open Time**.
- Set **Max Door Open Time**.
- Select the access type in **Work Mode**.
- Click **Save** button to complete setting.

Edit

Rack Access Settings

Aisle Control	Hot/Cold Standalone
Autolock Time(Sec)	10
Door Open Time(Sec)	10
Max. Door Open Time(Sec)	100

Save



8. To edit handle settings, select **Rack Access Settings**. - Enter **Handle** name for identification.

- Enter **ACU Name** for identification.
- The **Firmware Version** and **Hardware Version** are non-editable fields and are filled by default in their respective Versions.
- Enter **Serial** number of the handle. Click **Save** button to complete setting.

Edit

Handle Settings

Handle PDU 1 - Cold
ACU Name COLD AISLE
Work Mode RFID Only
Firmware Version
Hardware Version
Serial 4C0000331

[Save](#)

9. Select **Remote Control** to perform **Lock**, **Unlock** and **Close** functions.

Edit

Remote Control

PDU PDU 1 - Cold

[Lock](#)
[Unlock](#)
[Close](#)

10. Select **Beacon Settings** to **Enable Beacon** Lock and **Color**. Click **Save** button to complete setting.

Edit

Beacon Settings

Function Standby
Color Green

[Save](#)



11. Select **Status LED Settings** to configure **Function** and **Color** of the LED. Click **Save** button to complete setting.

Edit

Status LED Settings

Function	Standby On
Color	Green

Save

12. Select **Sensor Harness Configuration** to configure the sensor harness. Click **Save** button to complete setting.

Edit

Keypad Settings

Pin Mode	<input checked="" type="checkbox"/>
Pin Length	4

Save



User Settings

The Advantage Secure PDU comes with a standard **Admin** profile and a standard **User** profile.

- The Admin profile is typically the system administrator, and it has the “Admin Role” with full operating permissions.
- The default User profile includes the default “User Role” permissions. The Admin user must add all other user privileges. Users are defined by their unique login credentials and by their user role.

Before setting up the user profile, determine the roles required. Each user must be given a Role. These Roles define the permissions which are granted to the user.

1. Click on the **User Settings** icon to dropdown the User Settings menu.

User Settings

Users

Username	Unit	Role	Action
admin	* F	admin	Edit
user	* F	user	Edit Delete
manager	* F	manager	Edit Delete

LDAP Configuration

Enable	<input checked="" type="checkbox"/>
LDAP Server	
Port	389
Type	OpenLDAP
Base DN	
Bind Password	****
Search User DN	
Login Name Attribute	
User Entry Object Class	

Radius Configuration

Enable	<input checked="" type="checkbox"/>
Server	
Port	1812
Secret	*****

Roles

Role	Description	Action
admin	admin operation	
user	user operation	
manager	redfish user	

Session Management

Sign-In retries allowed	<input checked="" type="checkbox"/>
Number of Retries Allowed	3
Session Timeout Value	10 [Minutes of Inactivity]
Lockout Time	3 [Minutes]

Password Policy

Password Aging Interval	60d
Minimum Password Length	8
Maximum Password Length	32
Enforce at least one lower case character	<input checked="" type="checkbox"/>



Role	Default Permissions
Admin	Complete system permissions (that cannot be modified or deleted)
User	Limited permissions that can be modified or deleted. By default, these permissions are: Change own Password
Manager	Complete system permissions (that cannot be modified or deleted)

On the top- right side of the User Settings page, Click the below options as required

Add Users

To create a new user profile:

1. Click on the **User Settings**, the user settings page opens.
2. Click on **Add User** the icon, to create a new user profile.
3. The add user window opens, enter the information:
 - Username
 - Password
 - Confirm Password
4. In the add user window assign role to set admin, user, or manager privileges.
5. Select **Save** to save the new user profile.

Add

User

Username

Password

Confirm Password

Role

Administrator

User

Manager

Save

Modify

To edit the existing user profile,

- 1 In **User Settings** select the Edit next to the username to modify.
- 2 Update the user profile and select **Save** to save the new user profile.

Edit

User

Username

Password

Confirm Password

Role

Administrator

User

Manager

Save

Delete:

To delete the existing user profile,

- 1 Go to User Settings.
- 2 Go to the username.
- 3 Select the **X** next to the username to delete.



LDAP Server Settings

To setup LDAP to access the Active Directory (AD) and provide authentication when logging into the PDU via the Web Interface:

- 1 In **User Setting**, go to LDAP Configuration.
- 2 Select the LDAP Enable.
- 3 From the **Type** (Type of LDAP Server) drop down menu, select **Open LDAP**.
- 4 Type Port number.
***Note:** For Microsoft, this is typically 389.*
- 5 Type Password in the Bind Password box
- 6 In the Base DN field, type in the account.
Example - CN=myuser, CN=Users, DC=EMEA, DC=mydomain, DC=com
- 7 Search User DN.
- 8 Type SAMAccountName (typically) in the Login Name Attribute field.
- 9 Type Person Name in the User Entry Object Class field.
- 10 With these LDAP settings configured, the Bind is complete.

LDAP Configuration

Enable	✕
LDAP Server	
Port	389
Type	OpenLDAP
Base DN	admin
Bind Password	****
Search User DN	
Login Name Attribute	
User Entry Object Class	



- 11 Once the LDAP is configured, the PDU must understand for which group authentication occurs. A role must be created on the PDU to reference a group within Active Directory (AD).

Edit

LDAP Configuration

Enable	<input checked="" type="checkbox"/>
LDAP Server	
Port	389
Type	OpenLDAP
Base DN	
Bind Password	
Search User DN	
Login Name Attribute	
User Entry Object Class	

Test LDAP Configuration

Test Name	
Test Password	

- 12 Within the Web Interface, go to **User Settings**, click on the **Add Role** button
- 13 Type **Role Name**, which was created in AD *i.e.*, *PDUAdmin*.
- 14 Administrator privileges must be enabled

Add

Role

Role Name	PDUAdmin
Description	
Privileges	<input checked="" type="checkbox"/> Administrator Privileges



- 15 Once LDAP authentication is ready to use.
- 16 To test this, click **save**, then click "**LDAP Configuration**" again and type **Active Directory username/password** into the test box.
- 17 Click **Test LDAP Configuration**. If a box pops up with all green "SUCCEEDED" (no X's), the LDAP is successfully configured.

Radius Configuration

1. In the **User Settings** go to **Radius Configuration** and click the edit pencil.
2. Select the Enable button.
 - Type **Server IP address, Port number**, and **Secret** in the corresponding field.
 - Click **save** button to complete the Radius authentication.

Edit

Radius Configuration

Enable <input type="checkbox"/>
Server
Port 1612
Secret

[Save](#)

Roles

In the **User Settings**, go to **Roles** to change user roles, privileges, and settings.

To create a new role:

1. Click **Add Role** button on the top right corner.
2. type the **Role Name** and **Description**.
3. In the Privileges tab, click Edit.
4. Select the privileges to add to that user role. Set parameters if necessary.
5. Click **OK**.
6. Click **Save**.

Add

Role

Role Name
Description
Privileges <input type="checkbox"/> Administrator Privileges

[Save](#)



To modify a custom user role:

1. Select the role.
2. click Edit Button.
3. Edit the role name and privileges as needed. click **Save**.

Edit

Role

Role Name	admin
Description	admin operation
Privileges	<input checked="" type="checkbox"/> Administrator Privileges

Save

To delete a user role:

1. Select the role.
2. Click **Delete** Button.
3. click **Yes** to confirm the change.

Roles

Role	Description	Action	
admin	admin operation		
user	user operation		
manager	redfish user		



Session Management

Session management supports the users to manage the Sign-In retries, number of retries allowed session timeout value and lockout time.

1. Click on the  icon to edit/change the Session Management settings.
2. Add the required data and click on **Save** button to update the new settings.

Session Management 

Sign-In retries allowed	✓
Number of Retries Allowed	3
Session Timeout Value	10 [Minutes of Inactivity]
Lockout Time	3 [Minutes]

Edit

Session Management

Sign-In retries allowed	<input checked="" type="checkbox"/>
Number of Retries Allowed	3
Session Timeout Value	10 min
Lockout Time	3 min

Save



Password Policy

You can set a requirement for users to change their password at set intervals using the Password Aging Interval policy. You can also specify criteria for passwords to ensure that your users enter strong passwords.

1. Go to User Setting, click on **Password Policy**.
2. If desired, choose a password aging interval from the Password Interval dropdown menu.
3. If you wish to specify password criteria, enable the **Strong Password** radio button.

Password Policy 	
Password Aging Interval	60d
Minimum Password Length	8
Maximum Password Length	32
Enforce at least one lower case character	<input type="checkbox"/>
Enforce at least one upper case character	<input type="checkbox"/>
Enforce at least one numeric character	<input checked="" type="checkbox"/>
Enforce at least one special character	<input type="checkbox"/>

4. Set the Minimum Password Length and Maximum Password Length from the dropdown menus.

Note: Minimum password length cannot be below 8 characters and the maximum allowed up to 32.

5. Enable the **checkboxes** to force the users to use specific types of characters within the password.
6. Click Save button to complete the settings.

Edit


Password Policy

Password Aging Interval	60d
Minimum Password Length	8
Maximum Password Length	32
Enforce at least one lower case character	<input type="checkbox"/>
Enforce at least one upper case character	<input type="checkbox"/>
Enforce at least one numeric character	<input checked="" type="checkbox"/>
Enforce at least one special character	<input type="checkbox"/>



SNMP

Simple Network Management Protocol (SNMP) is used to manage the Advantage Secure PDU(s) remotely. SNMP allows the user to monitor and detect network faults and to even configure variable data in the PDU.

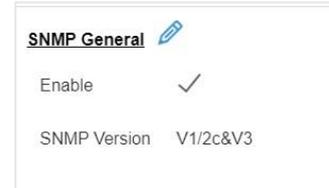

Enable the SNMP in the Web UI (Refer SNMP Management)

Working with MIB Browser

Download the MIB browser and install it.

1. Open the **MIB browse and** Type the IP address of the PDU.



2. Click the Advanced button, in the **Advanced Properties of SNMP Agent** window , enter the respective Port, Read Community and Write Community information.
3. Select the SNMP manager version- **1 / 2 / 3**.







Loading the MIB file

Click on **File** and select **Load MIBs**

The **Open** window comes to view:

1. Select the latest version of the **mib file**
2. Click **Open**-> The **mib file** gets loaded.
3. The **MIB Tree** comes to view on the SNMP MIBs-> Expand the MIB Tree and select the **iso.org.dod.internet**
4. Right click on the **iso.org.dod.internet** and select **walk** to monitor the PDU data.

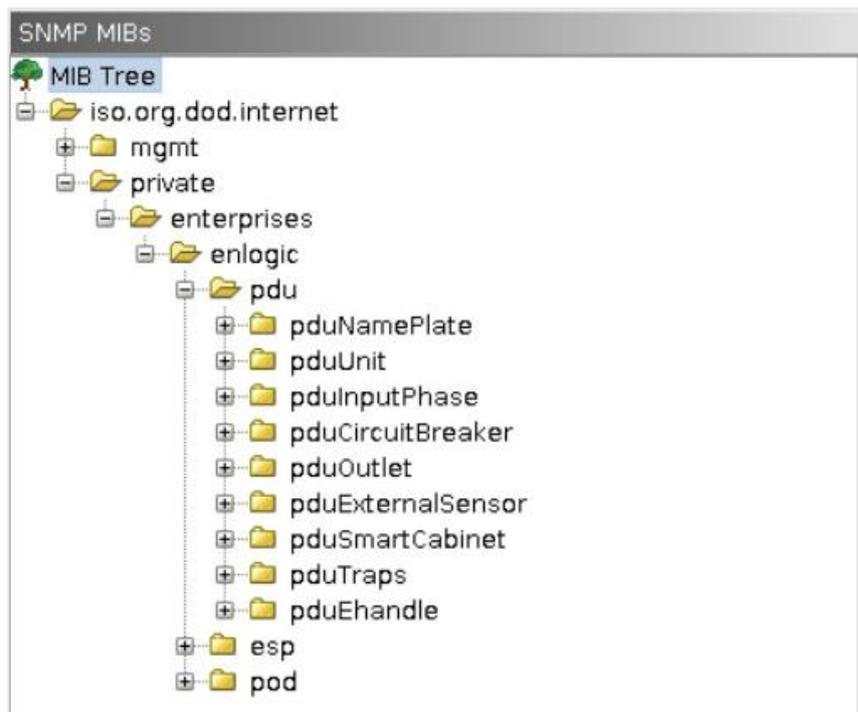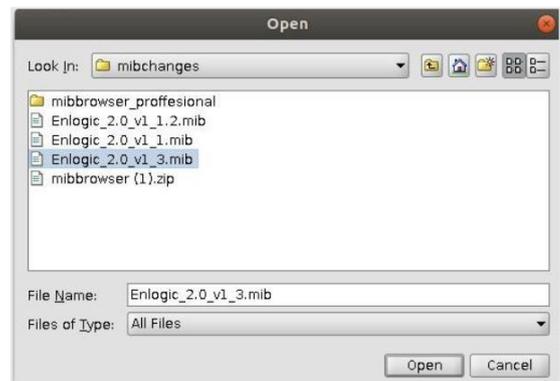



Redfish

Redfish API is tested using POSTMAN, which is a Google Chrome extension app for GET, POST and DELETE method requests.

1. To setup the **Redfish access**, type the PDU IP in chrome browser and login to the PDU using the credentials.
2. Go to **Network Settings** and enable **RESTapi Access** Configuration.

The screenshot displays the PDU's web management interface. On the left, the 'Network Settings' page is visible, showing configurations for Ethernet-1 and Ethernet-2 IP addresses, IPv6 access, and network protocols. On the right, the 'Edit' page for 'Web/ RESTapi Access Configuration' is shown, with the following settings:

Parameter	Value
Web Access	https
Web Port	Default 80 for Http, 443 for Https
RESTapi Access	Enable
SSL Certificate	No file chosen
SSL Certificate Key	No file chosen

A 'Save' button is located at the bottom of the configuration panel.

3. Click **Save, Confirm**, and apply changes. The PDU will reboot
4. Open **POSTMAN** app. Add the basic authentication header, which is required for all the query requests.



For **GET** request, type the URL request, basic authentication header with username and password and query the request.


```

GET https://10.10.105.219/redfish/v1/
Send

Pretty Raw Preview Visualize JSON
1
2 "Id": "RootService",
3 "AccountService": {
4   "@odata.id": "/redfish/v1/AccountService"
5 },
6 "JsonSchemas": {
7   "@odata.id": "/redfish/v1/Schemas"
8 },
9 "@odata.type": "ServiceRoot.v1_6_0.ServiceRoot",
10 "Name": "Redfish Root Service",
11 "@odata.id": "/redfish/v1",
12 "Manager": {
13   "@odata.id": "/redfish/v1/Managers"
14 },
15 "PowerDistribution": {
16   "@odata.id": "/redfish/v1/PowerEquipment/RackPDUs"
17 },
18 "SessionService": {
19   "@odata.id": "/redfish/v1/SessionService"
20 },
21 "links": {
22   "Session": {
23     "@odata.id": "/redfish/v1/SessionService/Sessions"
24   }
25 },
26 "EventService": {
27   "@odata.id": "/redfish/v1/EventService"

```


For **POST** request, include the json object type along with the basic authentication header. Create a session using POST method:

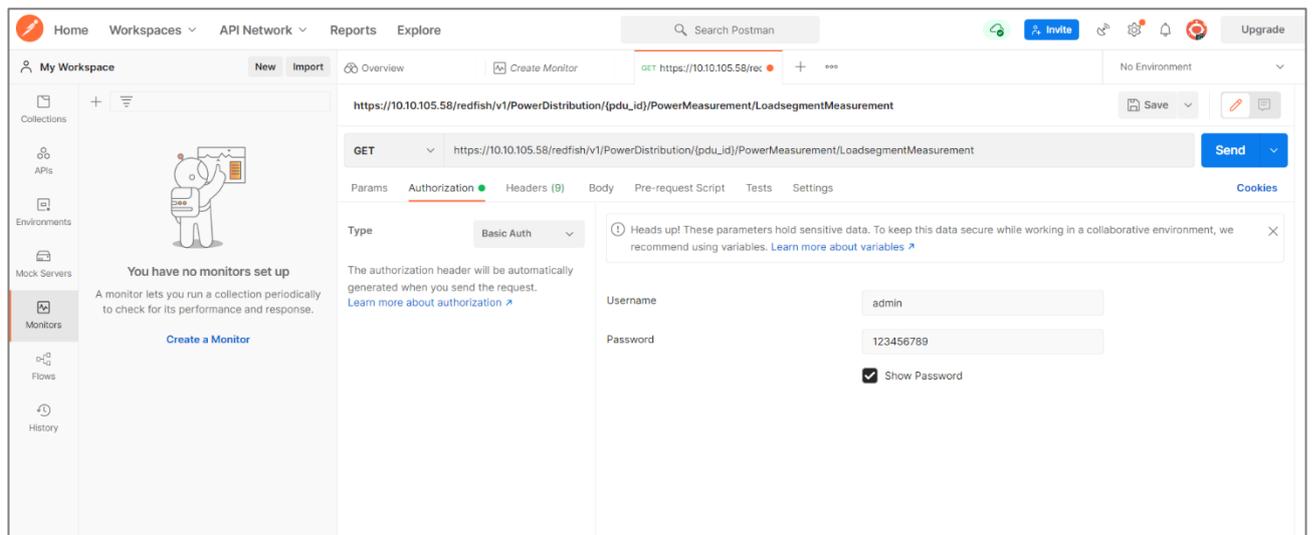

POST query the URL **http://{pdu_ip}/redfish/v1/SessionService/Sessions** along with the two headers (basic auth and json object type) and the body:

1. https://{pdu_ip}/redfish/v1/SessionService/Sessions


```
{
  "username": "admin",
  "password": "123456789"
}
```

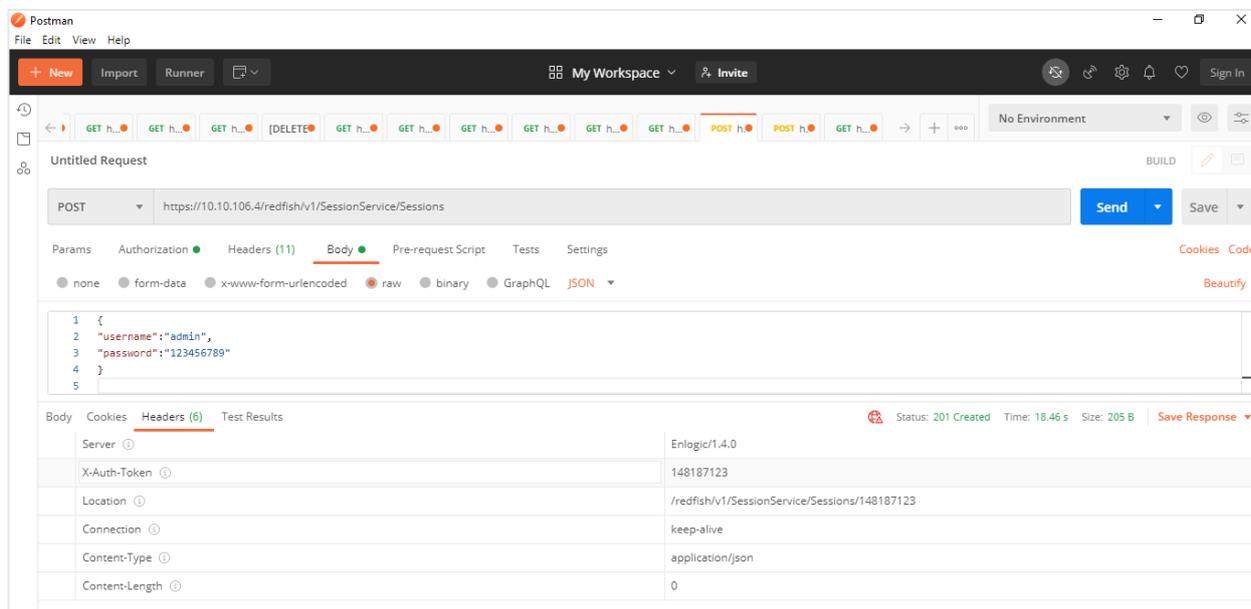



2. `https://{pdu_ip}/redfish/v1/AccountService/Accounts`

```
{
  "username":"new_user",
  "password":"11223344",
  "email":" admin@mycompany.com",
  "chkenable":true,
  "frpasschk":true,
  "rolename":"manager",
  "temperature":1
}
```

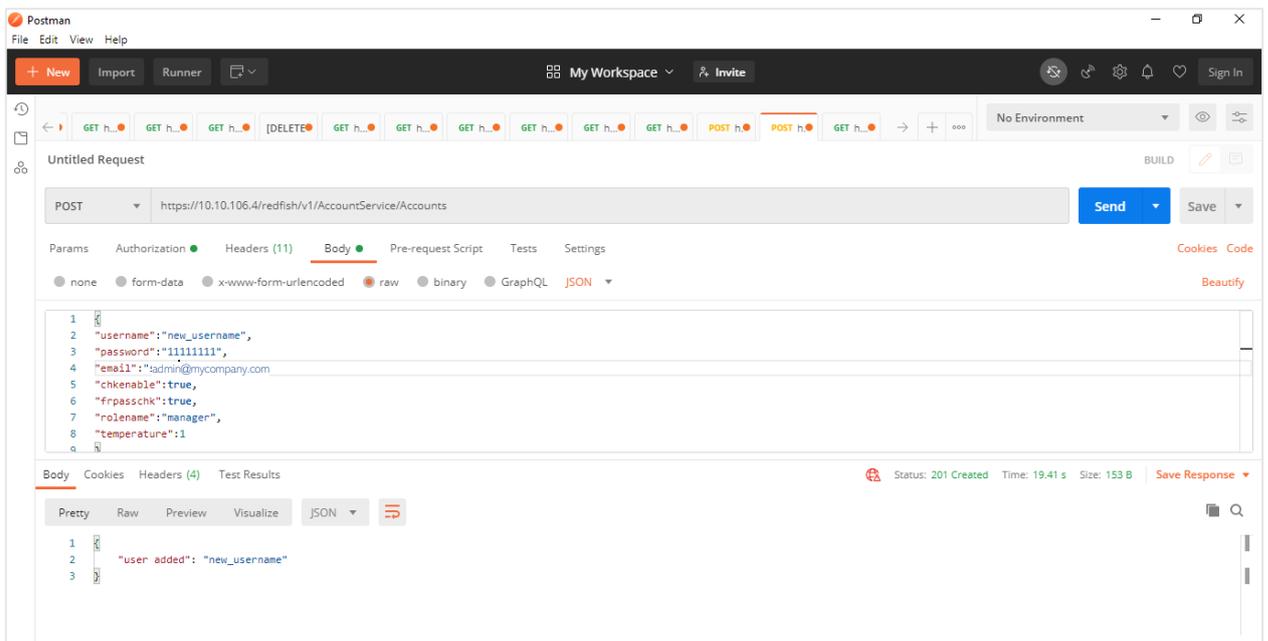




3. PDU1 – Outlet Control

https://{pdu_ip}/redfish/v1/PowerEquipment/RackPDUs/1/Outlets/OUTLET5/Outlet.PowerControl


```
{
  "OutletNumber":6,
  "StartupState":"off",
  "Outletname":"OUTLETFive",
  "OnDelay":5,
  "OffDelay":6,
  "RebootDelay":7,
  "OutletStatus":"off"
}
```

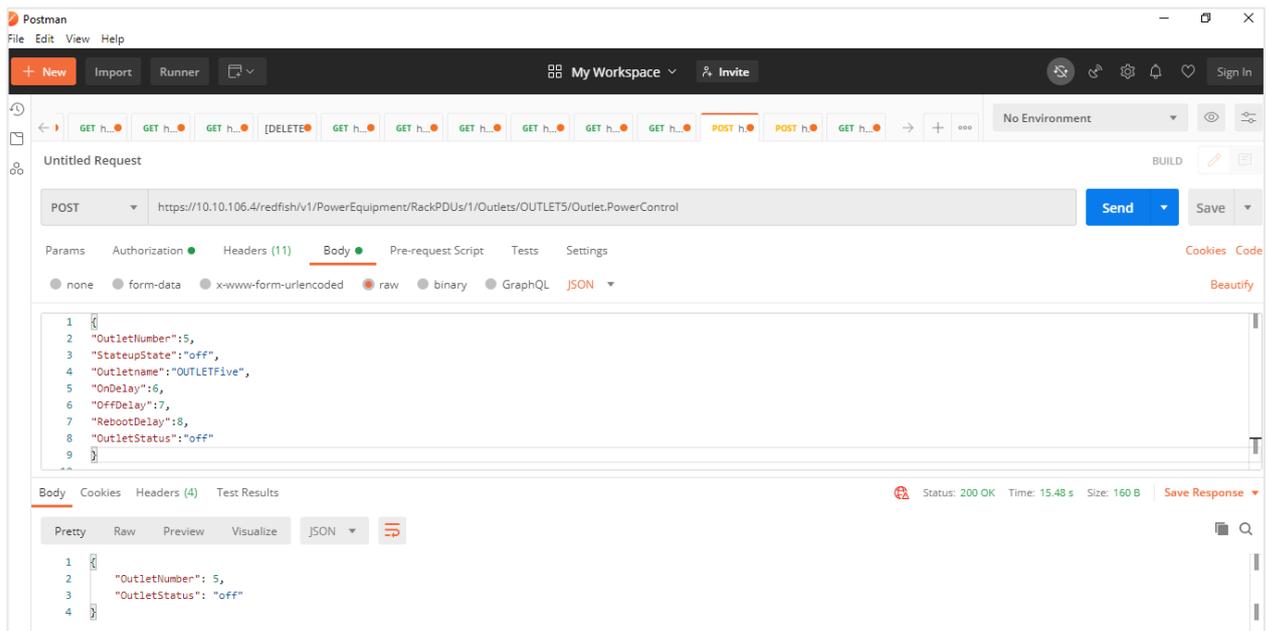



4. PDU2 – Outlet Control

https://{pdu_ip}/redfish/v1/PowerEquipment/RackPDUs/2/Outlets/OUTLET3/Outlet.PowerControl

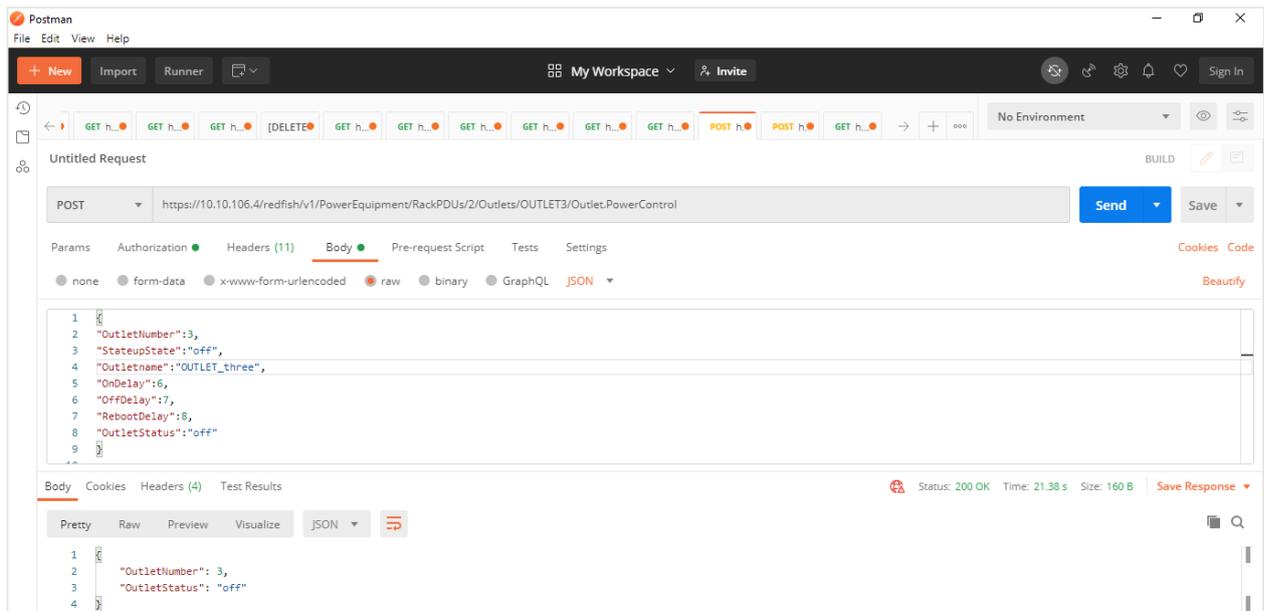


Note : Every highlighted text must be provided in the body section as shown in captured screenshots


Along with authorization & X-Auth-Token generated



For **DELETE** request, type the URL for session or users want to delete along with the basic authentication and send

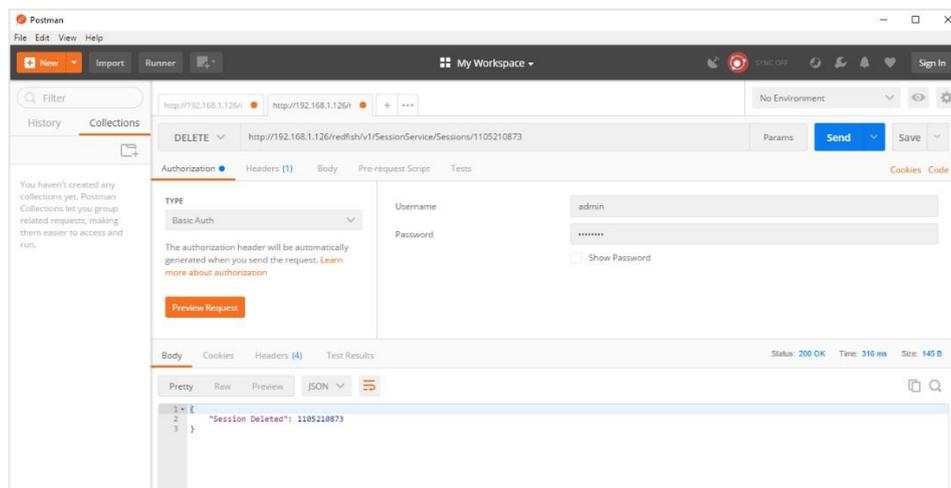

1. https://{pdu_ip}/redfish/v1/AccountService/Accounts/{username}

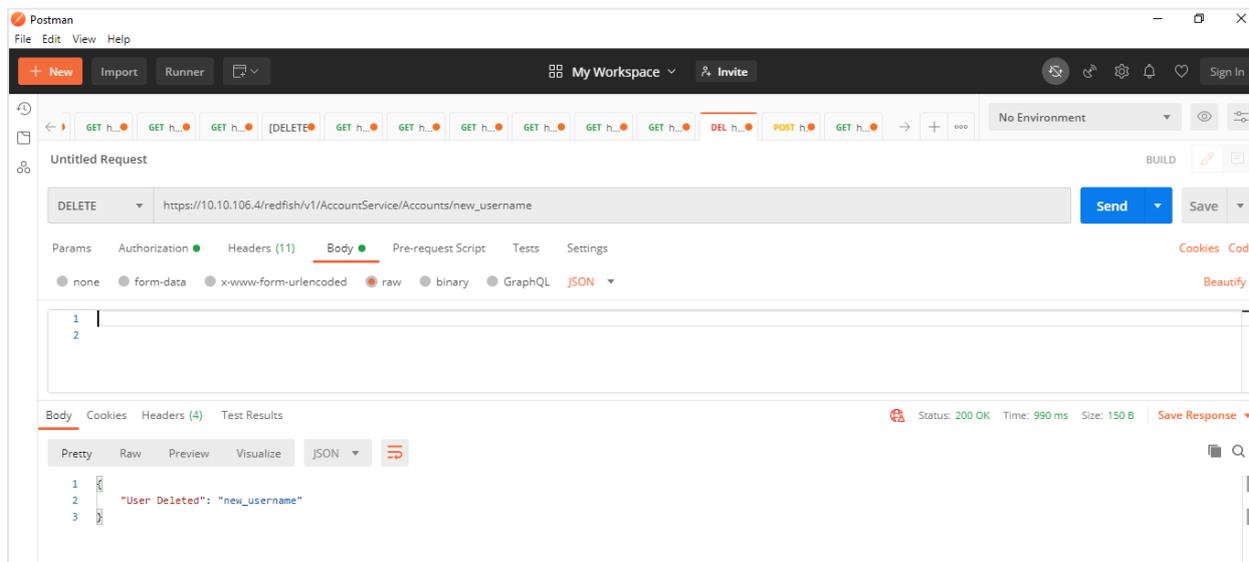



2. `https://{pdu_ip}/redfish/v1/SessionService/Sessions/{session_id}`

The screenshot displays the Postman interface for a DELETE request. The URL is `https://10.10.106.4/redfish/v1/SessionService/Sessions/964194279`. The request is configured with Basic Authentication, where the username is `admin` and the password is `*****`. The response status is `200 OK` with a response time of `192 ms` and a size of `148 B`. The response body is a JSON object: `{ "Session Deleted": "964194279" }`.



Redfish URLs Supported with GET Method

Session Service

S.No	URL
1	https://<ip_addr>/redfish/v1
2	/redfish/v1/SessionService
3	/redfish/v1/SessionService/Sessions
4	/redfish/v1/SessionService/Sessions/{session_ids}

Account Service

S.No	URL
1	/redfish/v1/AccountService
2	/redfish/v1/AccountService/Accounts
3	/redfish/v1/AccountService/Accounts/{userid}
4	/redfish/v1/AccountService/Roles
5	/redfish/v1/AccountService/Roles/{rolename}

Managers

S.No	URL
1	/redfish/v1/Managers
2	/redfish/v1/Managers/manager
3	/redfish/v1//Managers/manager/NetworkProtocol
4	/redfish/v1//Managers/1/LogServices
5	/redfish/v1//Managers/1/LogServices/Log
6	/redfish/v1//Managers/1/LogServices/Log/Entries

Metrics

S.No	URL
1	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Metrics

Power Equipment

S.No	URL
1	/redfish/v1/PowerEquipment
2	/redfish/v1/PowerEquipment/RackPDUs
3	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}



Branches

S.No	URL
1	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Branches
2	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id} /Branches/#cbnumber
3	/redfish/v1/PowerEquipment/RackPDUs/{pdu id}/Branches/A
4	/redfish/v1/PowerEquipment/RackPDUs/{pdu id}/Branches/B
5	/redfish/v1/PowerEquipment/RackPDUs/{pdu id}/Branches/C
6	/redfish/v1/PowerEquipment/RackPDUs/{pdu id}/Branches/D
7	/redfish/v1/PowerEquipment/RackPDUs/{pdu id}/Branches/E
8	/redfish/v1/PowerEquipment/RackPDUs/{pdu id}/Branches/F

Outlets

S.No	URL
1	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Outlets
2	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Outlets/#outletnumber

Sensors

S.No	URL
1	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors
2	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/Power{cbnum#}
3	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/Current{cbnum#}
4	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/Voltage{cbnum#}
5	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/CurrentOUTLET#
6	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/VoltageOUTLET#
7	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/PowerOUTLET#
8	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/EnergyOUTLET#
9	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/PowerMains1-6 (for WYE type PDUs) /redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/PowerMains1-3 (for DELTA type PDUs)
10	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/CurrentMains1-3
11	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/VoltageMains1-6 (for WYE type PDUs) /redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/VoltageMains1-3 (for DELTA type PDUs)
12	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/FreqMains
13	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Sensors/PDUPower



Mains

S.No	URL
1	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Mains
2	/redfish/v1/PowerEquipment/RackPDUs/{pdu_id}/Mains/AC1

Redfish URLs Supported with POST Method

S.No	URL
1	/redfish/v1/SessionService/Sessions
2	/redfish/v1/AccountService/Accounts
3	/redfish/v1/PowerEquipment/RackPDUs/{pduid}/Outlets/OUTLET#/Outlet.PowerControl
4	/redfish/v1/PowerEquipment/RackPDUs/{pduid}/Outlets/OUTLET#/Outlet.PowerControl
5	/redfish/v1/PowerEquipment/RackPDUs/4/Outlets/OUTLET24/Outlet.PowerControl

Redfish URLs Supported with DELETE Method

S.No	URL
1	/redfish/v1/AccountService/Accounts/{username}
2	/redfish/v1/SessionService/Sessions/{session_id}



The Command Line Interface (CLI)

The Command Line Interface (CLI) is an alternate method used to manage and control the PDU status and parameters, as well as basic admin functions. Through the CLI a user can:

- Reset the PDU
- Display PDU and network properties
- Configure the PDU and network settings
- Switch outlets on/off
- View user information

The CLI can be accessed over a serial connection using a program such as HyperTerminal.

Logging in with HyperTerminal

To login through HyperTerminal, set the COM settings to the following parameters:

- Bits per second: 115200
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None



CLI Commands and Prompts

CLI Options

- To display a list of available options in the CLI, **type '?'** in the command prompt. This will display the 5 main menus and sub menus of command options available: sys, net, usr, dev & pwr.

```

EN2.0>?
sys: system setting
usage:
  sys [date/time/ntp] [2012-09-11/14:16:20/133.100.11.8 133.100.11.9 (server1 server2)]
  sys [ver/def/rst]
  sys upd [conf/all]
  sys log [del/edit] [event|data] [on/off] [interval]
  sys ledcolor [pduid]/all] [red/green/yellow/blue/pink/cyan/white]
  sys dualinput get
  sys dualinput set [NA/EMEA]

user: user setting
usage:
  usr list
  usr login
  usr unlock [username]

net: network configuration command
usage:
  net [ssh/ftp/http/https/redfish] [on/off]
  net snmp [v1v2c/v3] [on/off]
  net snmp port [portnumber]
  net snmp trap [on/off/port] [portnumber]
  net snmp v1v2c <index> <IPaddress> <Read_community> <Write_community>
<Enable/Disable>
  net snmp v3 <index> <username> <securitylevel[AP/ANP/NANP]>
<Auth_password> <Auth_algo[MD5/SHA]> <Priv_key>
<Priv_algo[DES/AES128/AES192/AES256]>
    
```



```
<Enable/Disable>
net [mac/tcpip]
net tcpip [eth0dhcp/eth1dhcp/eth0static/eth1static ip nm gw]
net tcpip [v6eth0dhcp/v6eth1dhcp/v6eth0static/v6eth1static ip pl gw]
net ip [v4] [v6] [v4v6]
net phy [auto/10100mbps/1gbps]
net dns [-h <hostname> -d <domain> -s1 <server1> -s2 <server2>]
net dns [disable/enable] [dnsname/servername]]
net cert [def]
```

dev: device setting

usage:

```
dev daisy [rna/qna] [init] [create]
dev outlet pduID [status]
dev outlet pduID [outletindex] [on/off/rebootdelay/ondelay/offdelay]
dev [sensor/usb] [on/off]
dev ledstrip [on/off]
dev powershare [pduID] [func] [on/off]
dev handle [pduID] [cold/hot] [lock/unlock]
    dev hid [cold/hot] [lock/unlock]
```

pwr: pdu information

usage:

```
pwr [unit/phase/cb/outlet] [idx]
```



2. To display a list of options available for one of the menus (sys, net, usr, dev or pwr), type the menu command and press enter.

Note: You can also type the menu command with '?' to show a list of commands.

For example, below shows the available system options:

```
EN2.0>sys?  
  
sys: system setting  
usage:  
  sys [date/time/ntp] [2012-09-11/14:16:20/133.100.11.8 133.100.11.9 (server1 server2)]  
  sys [ver/def/rst]  
  sys upd [conf/all]  
  sys log [del|edit] [event|data] [on|off] [interval]  
  sys ledcolor [pduid]/all] [red/green/yellow/blue/pink/cyan/white]  
  sys dualinput get  
  sys dualinput set [NA/EMEA]
```



CLI Commands Table

The following is a list of commands available in the CLI to execute. The commands are divided into 5 main categories: System setting (sys), Network configuration (net), User setting (usr), Device setting (dev) and Power (pwr).

SYS Commands

Sys Commands	Description	Example
sys date [yyyy-mm-dd]	Sets the user input date	EN2.0>sys date 2013-08-12 SUCCESS
sys date	Query on PDU date	EN2.0>sys date SUCCESS Date:2013-08-12 Time:04:58:16
sys time[hh:mm:ss]	Sets the user input time	EN2.0>sys time 09:20:50 SUCCESS
sys time	Query on PDU time	EN2.0>sys time SUCCESS Date:2013-08-12 Time:09:20:53
sys ntp [primary_ip] [secondary_ip]	Sets the NTP	EN2.0>sys ntp 129.6.15.28 129.6.15.29 SUCCESS
sys ver	Query on the system versions – firmware, web, boot loader and language version	EN2.0>sys ver SUCCESS Firmware Version: 1.0.6.1 Boot loader Version: 1.1 LANGUAGE Version: 1.01 Web Version: 1.0.5.8
sys def	Set the PDU system to default settings	EN2.0>sys def Reboot required for change to take effort System Reboot now, Are you sure?(Y/N):



sys rst	Resets the PDU system	EN2.0>sys rst Reboot required for change to take effort System Reboot now, Are you sure?(Y/N):
sys upd [conf/all]	Updates the configuration file	EN2.0>sys upd conf Reboot required for change to take effort System Reboot now, Are you sure?(Y/N):
sys log [del edit] [event data] [on off] [interval]	Edits the data log configuration interval	EN2.0>sys log edit data on 5 SUCCESS EN2.0>sys log edit data off SUCCESS
sys ledcolor [pduid]/all [dark/red/green/yellow/blue/pink/cyan/white]	Update color of LED	EN2.0>sys ledcolor pduid dark SUCCESS
sys dualinput get	Displays the current region of the PDU	EN2.0>sys dualinput get SUCCESS EMEA rating is active Rating: 346-415V, 32A, 22.0kVA, 50/60Hz
sys dualinput set	Toggle the region of the PDU between NA/EMEA	EN2.0>sys dualinput set NA SUCCESS Input current updated to 24 and voltage updated to 240 Reboot required for change to take effect System Reboot now, Are you sure?(Y/N):Y



Net Commands

Net Commands	Description	Example
net ssh [on/off]	Sets ssh on/off	EN2.0>net ssh SUCCESS SSH Port: 22 SSH server is running
net ftps [on/off]	Sets ftps on/off	EN2.0>net ftps SUCCESS FTPS Port: 21 Service is running Is Ftp
net http [on/off]	Sets https on/off	EN2.0>net http SUCCESS HTTPS Port: 80 Status: ON EN2.0>net https on Reboot required for change to take effort WEB protocol is changed, reboot to validate System Reboot now, Are you sure?(Y/N):
net https [on/off]	Sets https on/off	EN2.0>net https SUCCESS HTTPS Port: 443 Status: OFF EN2.0>net https on Reboot required for change to take effort WEB protocol is changed, reboot to validate System Reboot now, Are you sure?(Y/N):



<p>net redfish [on/off]</p>	<p>Sets redfish on/off</p>	<pre>EN2.0>net redfish SUCCESS Status: ON EN2.0>net redfish off SUCCESS Status: OFF</pre>
<p>net snmp trap [on/off/port] [portnumber]</p>	<p>Changes the snmp trap port number or turns off/on the snmp trap</p>	<pre>EN2.0>net snmp trap port 162 Reboot required for change to take effect SNMP trap port is changed, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y</pre>



<pre>net snmp v1v2c <index> <IPAddress> <Read_community> <Write_community> <Enable/Disable></pre>	<p>Configure the SNMP v1/v2c manager</p>	<pre>EN2.0>net snmp v1v2c 5 10.10.105.120 public private enable SUCCESS</pre>
<pre>net snmp v3 <index> <username> <securitylevel[AP/ANP /NANP]> <Auth_password> <Auth_algo[MD5/SHA]> <Priv_key> <Priv_algo[DES/ AES128/AES192/ AES256]> <Enable/Disable></pre>	<p>Configure the SNMP v3 manager</p>	<pre>EN2.0>net snmp v3 3 user1 AP 12345 SHA 12345 AES256 enable SUCCESS</pre>
<pre>net [mac/tcpip]</pre>	<p>Displays the mac address, IPv4</p>	<pre>EN2.0>net mac SUCCESS MAC Addr: C8-45-44-66-2B-65 MAC Addr: C8-45-44-66-2B-67 EN2.0>net tcpip SUCCESS eth0 IPv4 Addr: 10.10.105.37 eth0 IPv6 Link Local Addr: fe80:ca45:44ff: fe66:2b65 eth0 IPv6 DHCP Addr: 2001:c0a8: aa01:0:ca45:44ff: fe66:2b65 eth1 IPv4 Addr: 192.168.2.2</pre>



<p>net tcpip [eth0dhcp/eth1dhcp/ eth0static/eth1static ip nm gw]</p>	<p>Changes the IPv4 network to DHCP or Static mode</p>	<p>EN2.0>net tcpip dhcp eth0dhcp Reboot required for change to take effort Network is reconfigured, reboot to validate System Reboot now, Are you sure? (Y/N): Y</p> <p>EN2.0>net tcpip eth1static <10.10.94.20 255.255.255.0 10.10.94.1> Reboot required for change to take effort Network is reconfigured, reboot to validate System Reboot now, Are you sure?(Y/N):Y</p>
<p>net tcpip [v6eth0dhcp/v6eth1dhcp/ v6eth0static/v6eth1static ip pl gw]</p>	<p>Changes the IPv6 network to DHCP or Static mode</p>	<p>EN2.0>net tcpip v6eth0dhcp</p> <p>Reboot required for change to take effect Network is reconfigured, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y</p>



<p>net ip [v4] [v6] [v4v6]</p>	<p>Changes the mode between DUAL, IPv4 or IPv6 Only</p>	<p>EN2.0>net ip SUCCESS IPV4</p> <p>EN2.0>net ip v6 Reboot required for change to take effort IP protocol is changed, reboot to validate System Reboot now, Are you sure?(Y/N):</p>
<p>net phy [auto/10100mbps/1gbps]</p>	<p>Set the link speed to auto negotiation/10100mbps/1gbps</p>	<p>EN2.0>net phy SUCCESS link speed: auto negotiation</p> <p>EN2.0>net phy 10100mbps Reboot required for change to take effort Phy speed is changed, reboot to validate System Reboot now, Are you sure?(Y/N):</p>



<pre>net dns [-h <hostname> -d <domain> -s1 <server1> -s2 <server2>]</pre>	<p>Changes the DNS domain name, host name, primary and secondary server</p>	<pre>EN2.0>net dns -h admin -d test -s1 10.10.105.20 -s2 10.10.105.21</pre> <p>Reboot required for change to take effect IP protocol is changed, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y</p>
<pre>net dns [disable/enable] [hostname/servername]</pre>	<p>Enables/Disables the DNS server or host by name</p>	<pre>EN2.0>net dns enable hostname</pre> <p>Reboot required for change to take effect IP protocol is changed, Please reboot to validate System Reboot now, Are you sure?(Y/N):Y</p>



<p>net cert [def]</p>	<p>Updates the certificate file</p>	<pre> EN2.0>net cert SUCCESS Custom certificate key file active, in /cert/cert.key Custom certificate cert file active, in /cert/cert.crt EN2.0>net cert def Removing custom certificate key file, in /cert/cert.key Removing custom certificate file, in /cert/cert.crt Reboot required for change to take effect Certificate Setting changed, reboot to validate System Reboot now, Are you sure?(Y/N): </pre>
-----------------------	-------------------------------------	--



USR Commands

Usr Commands	Description	Example
usr list	Lists out the PDU users	<pre>EN2.0>usr list SUCCESS Usr Role Privilege Role id ===== admin Administrator 1 user 2 manager Administrator 3</pre>
usr login	Displays the logged in user details	<pre>EN2.0>usr login SUCCESS username: admin ip address: 10.10.94.211 client type: SSH</pre>
usr unlock [username]	Unlocks the blocked user	<pre>EN2.0>usr unlock en_user SUCCESS</pre>



DEV Commands

Dev Commands	Description	Example
dev daisy [rna/qna] [init] [create]	Setting the PDU Daisychain to RNA or QNA mode	<pre>EN2.0>dev daisy SUCCESS Daisy chain unit number: 1 Daisy chain address list: 0 0 0 Daisy Mode: QNA EN2.0>dev daisy qna create Reboot required for change to take effort System Reboot now, Are you sure?(Y/N):</pre>
dev outlet pduID [status]	Displays outlet status.	<pre>EN2.0>dev outlet 1 status SUCCESS Relay Outlet Status Outlet# 1: Open Outlet# 2: Open Outlet# 3: Open Outlet# 4: Open Outlet# 5: Open Outlet# 6: Open Outlet# 7: Open Outlet# 8: Open</pre>



<p>dev outlet pduID [outletindex] [on/off/rebootdelay/ ondelay/offdelay]</p>	<p>Command to Turn on/off/offdelay/ ondelay/rebootdelay the outlet power</p>	<p>EN2.0>dev outlet 1 1 on SUCCESS</p> <p>EN2.0>dev outlet 1 1 rebootdelay SUCCESS</p>
<p>dev [sensor/usb] [on/off]</p>	<p>Lists out the connected sensors on PDU Turn on/off the USB</p>	<p>EN2.0>dev sensor SUCCESS</p> <p>EN2.0>dev usb on SUCCESS</p>
<p>dev hid [cold/hot] [lock/unlock]</p>	<p>Displays the PDU Rack Access details Locks/Unlocks the HID</p>	<p>EN2.0>dev hid 1 SUCCESS</p> <p>EN2.0>dev hid 1 hot unlock SUCCESS</p>
<p>dev ledstrip [on/off]</p>	<p>Turns on/off the ledstrip</p>	<p>EN2.0>dev ledstrip on SUCCESS</p>



<p>dev powershare</p>	<p>Displays the status of PDU power share</p>	<pre>EN2.0>dev power share SUCCESS PDU 1: Downstream: 0 Upstream: 1 Mains: 1 PDU 2: Downstream: 1 Upstream: 1 Mains: 1 PDU 3: Downstream: 1 Upstream: 1 Mains: 1</pre>
<p>dev handle [pduID] [cold/hot] [lock/unlock]</p>	<p>Enables handle function</p>	<pre>dev handle 1 hot lock</pre>



PWR Commands


Pwr Commands	Description	Example
<p>pwr [unit/phase/cb/outlet] [idx]</p>	<p>Displays the power readings</p>	<pre>EN2.0>pwr unit 1 SUCCESS UNIT power Feature voltage: 0V current: 0.0A active power: 0W apparent power: 0W power factor: 1.00 energy: 0.000kWh EN2.0>pwr outlet 3 SUCCESS OUTLET 3 power Feature voltage: 0V current: 0.0A active power: 0W apparent power: 0W</pre>



FTPS

File Transfer Protocol is used to transfer files from the PDU file system into the local drives under a secure network and vice-versa.

1. Enable the FTPS Access through Web UI

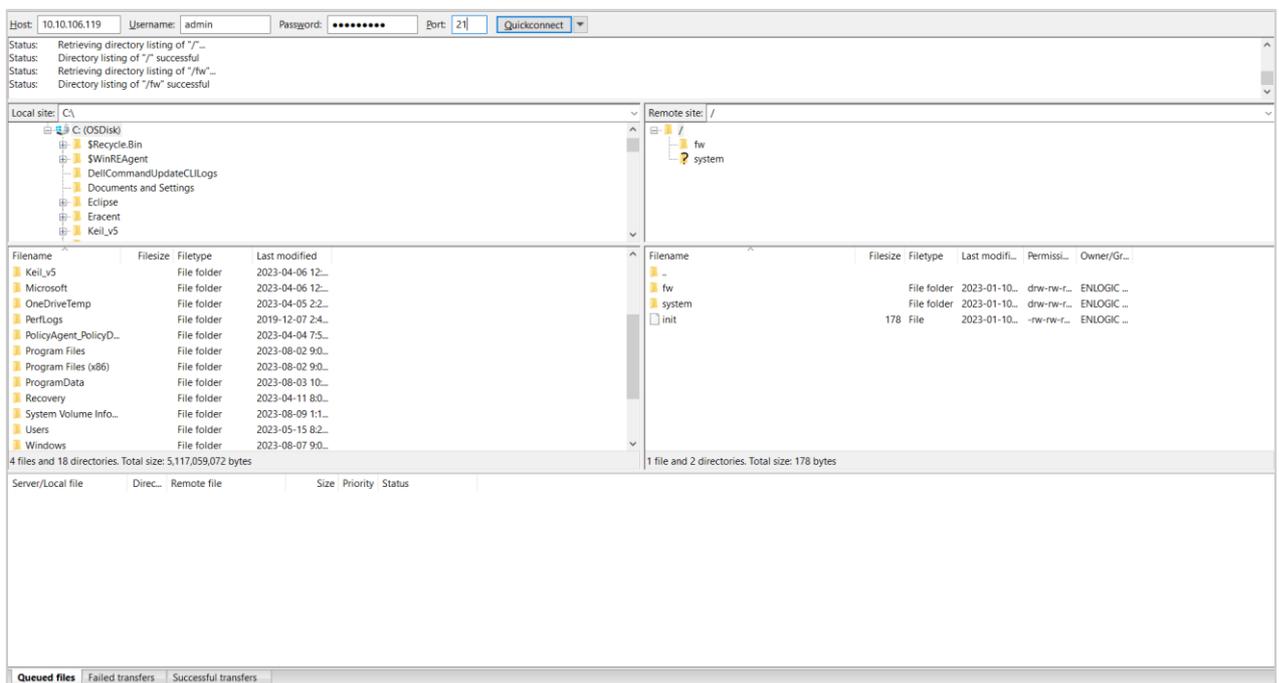

2. Enter the IP address of the PDU at the **Host**.
3. Enter the **Username** and **Password** of a person with the role having administrative privileges.
4. Enter the **Port** number set for the FTPS.
5. Click the **Quickconnect** button to connect the PDU and Local Drive through the FTPS Client.
6. The **Local Site** containing the local drives and **Remote Site** containing the PDU file system comes to view.
7. Using Drag and Drop we can transfer the files between Local and Remote site. We can also use right click and select the upload and download function to perform the file transfer.



Sensors

The Advantage Secure PDU can monitor conditions (environment and security) with Enlogic's sensors. Sensors are connected to the Advantage Secure PDU through the RJ45 connection or Sensor Input Hub, which can connect to three additional sensors. Following are the sensors available:

- Temperature Sensor
- Temperature and Humidity Sensor
- (3) Temperature + (1) Humidity Sensor
- Sensor Input Hub (3 sensor inputs)
- Door Switch Sensor
- Dry Contact Cable
- Spot Fluid Leak Sensor
- Rope Fluid Leak Sensor
- LED Light Strip Sensor
- RJ45-DB9 Cable
- USB to RS232 Cable
- HID RACK Access kit
- ehandle with RFID
- ehandle with RFID + PIN

Sensor Overview

Enlogic sensors allow the users and administrators to monitor, report, and alarm specific conditions in and around a PDU, Inline Meter, and server rack. Conditions such as temperature, humidity, leak, and switches are vital aspects of maintaining an efficient-working data center atmosphere.

Enlogic iPDUs and Inline Meters are designed to collect a maximum of 10 sensor measurements



1. Plug the sensor into the PDU through the RJ45 connection or Sensor Input Hub.

Note: It can take 1-3 minutes (depending on model and configuration) for PDU to recognize the sensor.

2. Log in to the Enlogic Web UI. (The sensors are identified and displayed, after login).
3. Identify each sensor through the serial number in the External Sensors section of the Enlogic Web UI.
4. Make sure that the Advantage Secure PDU begins to automatically manage sensors. If the sensors are not auto managed, refer to the **Viewing and Managing Sensor Information** section.
5. Click **Setup** button to configure the sensor name, description, location, and alarm setup. Refer to the **Viewing and Managing Sensor Information** section for more information.

Temperature and Humidity Sensor Installation Instructions EA9102, EA9103, and EA9105

1. Secure the sensor box to the perforated rack enclosure door by threading a cable tie through the recessed channel in the sensor box and door.

Note: There are two recessed channels on the back of the sensor box, which is included with a magnet to secure the sensor.

2. Secure the RJ45 cable along with the desired path to the PDU using the remaining cable ties.
3. For the 3 Temperature and 1 Humidity sensors (model EA9105) only: Secure the two additional temperature probes near the top and the bottom of the perforated rack enclosure door using the cable ties.
4. Use the RJ45 Quick Disconnect Coupler and Ethernet Cable to extend the length of the sensor input cable and/or to serve as an easy disconnect point for rack door removal. Refer to the Advantage Secure User Manual for instructions on, how to create custom cord lengths using the RJ45 Quick Disconnect Coupler.

Note: Use either the 1.8m Ethernet cable included with the Enlogic sensor or any other CAT5 or CAT6 Ethernet cable with a standard RJ45 plug.



5. Plug the sensor cable into the Sensor 1 or Sensor 2 port on the PDU/Inline Energy Meter or the Sensor Hub (model EA9106).

Note: It can take 1-3 minutes (depending on model and configuration) for PDU to recognize the sensor.

6. The Enlogic sensor is installed and ready for use.

Sensor Input Hub Installation Instructions

EA9106

1. Secure the sensor box to the perforated rack enclosure door by threading a cable tie through the recessed channel in the sensor box and door.

Note: There are two recessed channels on back of the sensor box, which includes the magnet to secure the sensor.

2. Secure the RJ45 cable along the desired path to the PDU using the remaining cable ties.
3. For the 3 Temperature and 1 Humidity sensors (model EA9105) only: Secure the two additional temperature probes near the top and the bottom of the perforated rack enclosure door using the cable ties.
4. Use the RJ45 Quick Disconnect Coupler and an Ethernet cable to extend the length of the sensor input cable and/or to serve as an easy disconnect point for rack door removal. Refer to the Advantage Secure User Manual for instructions on how to create custom cord lengths using the RJ45 Quick Disconnect Coupler.

Note: Use either the 1.8m Ethernet cable included with the Enlogic sensor or any other CAT5 or CAT6 Ethernet cable with a standard RJ45 plug.

5. Plug the sensor cable into the Sensor 1 or Sensor 2 port on the PDU/Inline Energy Meter or the Sensor Hub (model EA9106).




Door Switch Sensor Installation Instructions

EA9109

Top Door Mounting Option

1. Attach the door switch assembly to the top of the rack using the Adhesive backed mount and cable ties.
2. Attach the Switch Sensor to the top corner of the rack (on the side that the rack door will close) using double-sided tape. Secure the cable to the top of the rack using cable ties.
3. Attach the Magnetic Sensor to the rack door using double-sided tape.

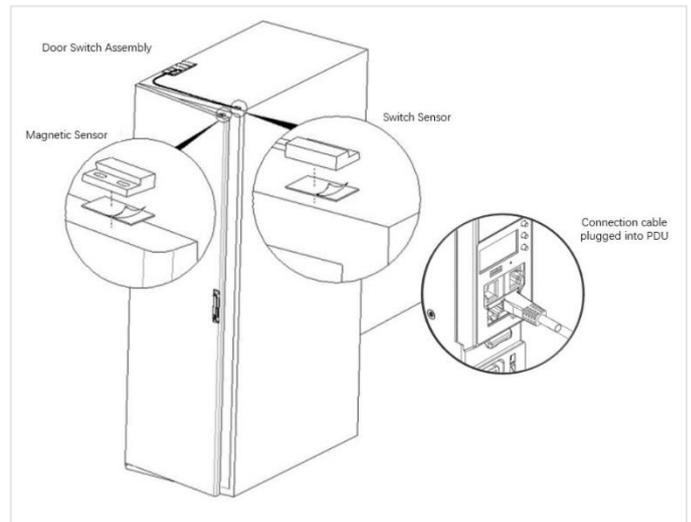

4. Thread the sensor connection cable through the rack. Secure the cable with cable ties. Plug the cable into a sensor port on the PDU.
5. Log into the Web Interface, or Serial to manage the door sensor alarm and notification settings. The sensor is designed to alarm if the door is opened more than 10 mm.
6. Attach the Door Switch assembly to the top of the rack using the Adhesive backed mount and cable ties.
7. Attach the Switch Sensor to the inside of the rack (on the side that the rack door will close) using 4 screws (FS00041). Secure the cable to the top of the rack using cable ties.
8. Attach the Magnetic Sensor to the rack door using screws.
9. Thread the sensor connection cable through the rack. Secure the cable with cable ties. Plug the cable into a sensor port on the PDU.
10. Log into the Web Interface, or Serial to manage the door sensor alarm and notification settings. The sensor is designed to alarm if the door is opened more than 10 mm.




Door Mounting Option

1. Attach the Door Switch assembly to the top of a door jamb using the Adhesive backed mount and cable ties.

2. Attach the Switch Sensor to the door (on the side that the rack door will close) using the 4 screws (FS00041). Secure the cable to the top of the rack using cable ties.

3. Attach the Magnetic Sensor to the rack door using screws.

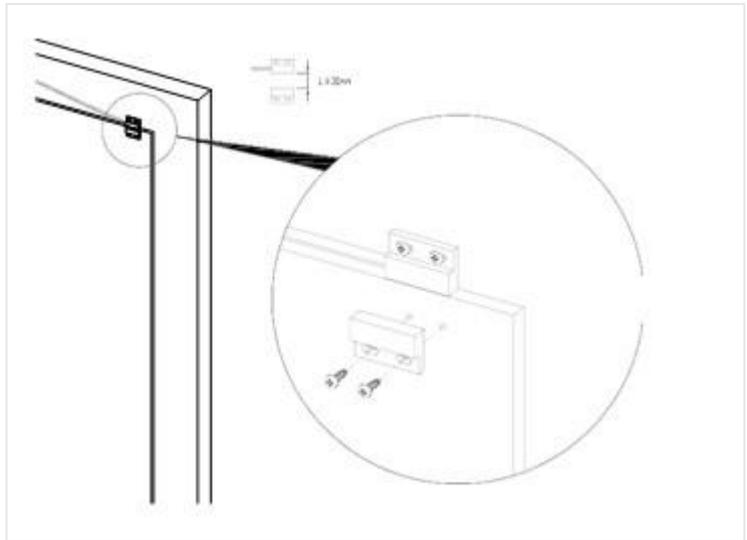

4. Thread the sensor connection cable through the rack. Secure the cable with cable ties. Plug the cable into a sensor port on the PDU.

5. Log into the Web Interface, or Serial to manage the Door Sensor alarm and notification settings. The sensor is designed to alarm if the door is opened more than 10mm.



Dry Contact Cable Installation Instructions

EA9110


1. Attach the open wire leads on the dry contact cable to a dry contact sensor. *Refer to instructions for the dry contact sensor for this step.*
2. Connect the RJ-45 jack of the Enlogic Dry Contact Cable to a sensor port on the PDU, Inline Energy Meter, or Sensor Hub (model EA9106).
3. Go to the Enlogic Web UI to setup specific conditions to monitor and alarm for this sensor.

Spot Fluid Leak Sensor Installation Instructions

EA9111

1. Place the fluid sensor on the surface to be monitored. Secure the cable using cable ties and/or adhesive mounts.

Note: *The Spot Fluid Leak Sensor uses electronic circuits to detect the presence of liquid. Certain materials, such as metal surfaces or cement floor, can activate a false leak signal. To avoid this occurrence, place the sensor on the installation pad, (provided). The installation pad is best to install on a clean, dry surface.*

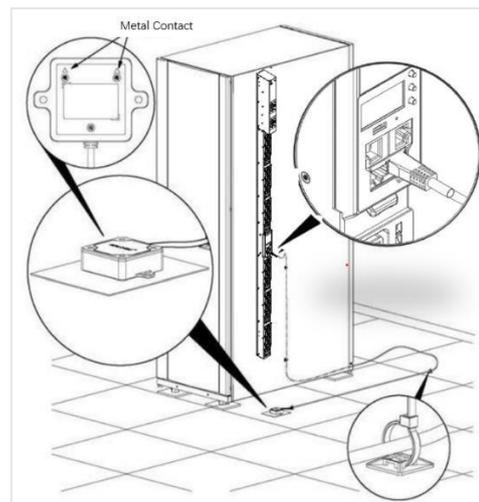

2. Plug the RJ-45 cable into a sensor port on the Enlogic iPDU, Inline Energy Meter, or Sensor Hub (model EA9106)
3. Go to the Enlogic Web UI to setup specific conditions to monitor and alarm for this sensor.



Rope Fluid Leak Sensor Installation Instructions EA9112

1. Connect the RJ-45 jack on the Rope Fluid Leak Sensor assembly to a sensor port on the Enlogic iPDU, Inline Energy Meter, or Sensor Hub (model EA9106).
2. Thread the Rope Fluid Leak Sensor cable (EW00253) through the rack and along the desired path of detection.

Note: *Up to 5 Rope Fluid Leak Sensor Cables can be connected to lengthen the detection zone. These can be purchased through Enlogic.*

3. Secure the Rope Fluid Leak Sensor cable to the rack and ground using the cable ties and/or adhesive mounting strips provided.

Note:


- *The wire mount (shown here) is for installation on the floor or ground surface. This must be used in the detection area.*
- *If mounting to a cabinet or wall, use the adhesive-backed mount (provided). The adhesive backed is mounted in the detection area to prevent and notify delay leakage.*



Detecting Sensors

The sensor serial number is listed in the Enlogic Web UI when the sensor is detected. To identify each detected sensor:

1. Go to Overview/Dashboard
2. Select **Total Sensors** to view all connected sensors

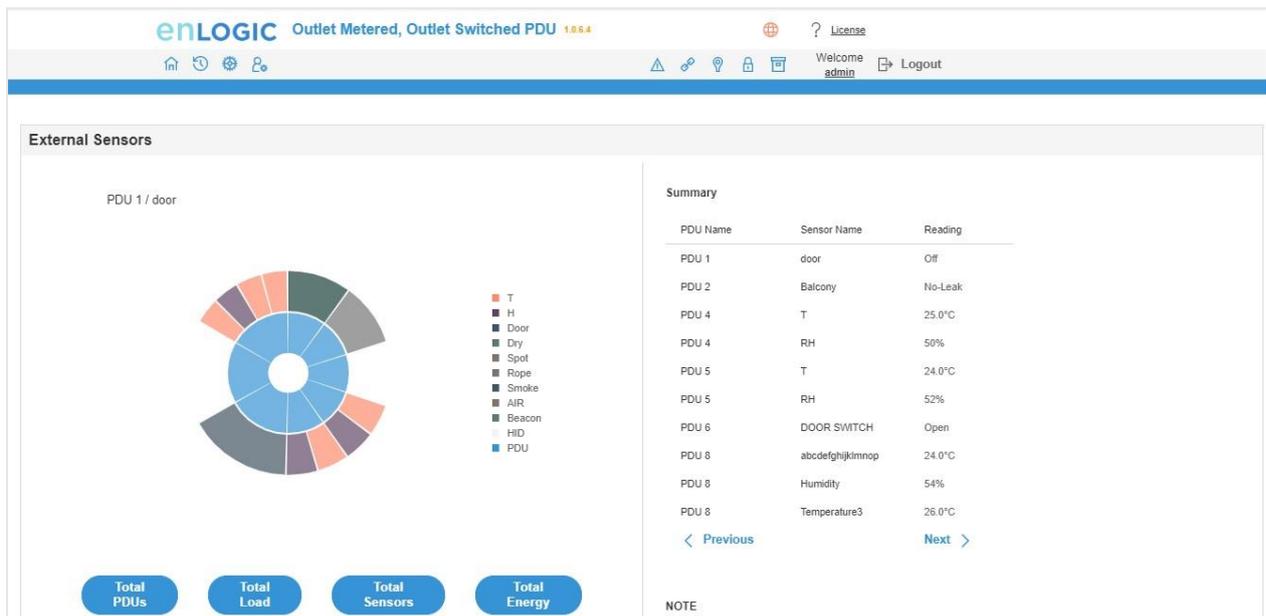

Configuring Sensors

To configure the sensor name, location, alarms, notifications, and details, open the Web UI:

1. Go to **Dashboard** to view all connected external sensors.
2. Select **Total Sensors** to view the External Sensors page.
3. Go to Settings -> Threshold -> External Sensors to configure.
4. In the **Edit** dialog box, type new data in the following fields, (for example in the 3 Temperature and 1 Humidity sensor):
 - High Critical
 - High Warning
 - Low Warning
 - Low Critical
5. Click **Save** to complete the sensor setup. Repeat this process for additional sensors.



Viewing and Managing Sensor Information

Readings of the sensors are available in the Enlogic Web UI when they are connected properly. The main Dashboard page and External Sensors page show the connected sensors information.

To View Connected Sensors

1. Open the **Dashboard**.
2. View the External Sensors section on the Dashboard page to see:
 - A list of sensors, which can be connected.
 - Information of each managed sensor: Sensor Name, Location, and Measurement.
3. Go to **Overview/Identification** (bottom of the page shows all connected sensors).
4. Below information is displayed for each connected sensor:
 - Type
 - Name
 - Serial number
 - ID
 - PDU Name
 - Location

External Sensors					
External Sensors, Type	Sensor Name	Serial Number	Sensor ID	PDU	Location
Temperature	T1	07080002	1	PDU#1	
Temperature	T2	07080002	2	PDU#1	
Temperature	T3	07080002	3	PDU#1	
Humidity	RH	07080002	4	PDU#1	



Edit External Sensor Threshold

1. Go to **Settings>>Thresholds** to view all connected external sensors.
2. In the **External Sensor** section, select the sensor to edit.
3. Click **Edit** icon in the **Action** field.
4. Type new data in the following fields, for example in the 3 Temperature & 1 Humidity sensor:
 - High Critical
 - High Warning
 - Low Warning
 - Low Critical
5. Click **Save** to proceed further.

Toggle Temperature Units between Celsius & Fahrenheit

1. Go to User **Settings** page.
2. On the top-right corner, a toggle button is displayed.
3. Click and **Toggle** between **Celsius C ° to Fahrenheit F °** based on the requirements.

User Settings °C [Add Role](#) [Add User](#)

Username	Unit	Role	Action
admin	°C	admin	Edit
user	°C	user	Edit Delete
manager	°C	manager	Edit Delete

Role	Description	Action
admin	admin operation	
user	user operation	
manager	redfish user	

LDAP Configuration

Enable [X](#)

LDAP Server

Port 389

Type OpenLDAP

Base DN

Bind Password ****

Search User DN

Login Name Attribute

User Entry Object Class

Radius Configuration

Enable [X](#)

Server

Port 1812

Secret *****

Session Management

Sign-In retries allowed

Number of Retries Allowed 3

Session Timeout Value 10 [Minutes of Inactivity]

Lockout Time 3 [Minutes]

Password Policy

Password Aging Interval 60d

Minimum Password Length 8

Maximum Password Length 32

Enforce at least one lower case character [X](#)

Enforce at least one upper case character [X](#)



- Click and Toggle on **Celsius C °** and view the temperature information stored in Celsius

enLOGIC Outlet Metered, Outlet Switched PDU x.x.x.x License

Welcome admin Logout

PDU Thresholds

Device Detection Threshold [✎](#)
Threshold(mA)

Power Threshold Input Phases Circuit Breaker Control Management **External Sensors**

External Sensors(1:1) ✎		External Sensors(1:2) ✎		External Sensors(1:3) ✎		External Sensors(1:4) ✎	
Name	RH	Name	T3	Name	T1	Name	T2
Type	Humidity	Type	Temperature	Type	Temperature	Type	Temperature
Low Critical	16	Low Critical	15	Low Critical	15	Low Critical	12
Low Warning	17	Low Warning	18	Low Warning	18	Low Warning	13
High Warning	18	High Warning	27	High Warning	27	High Warning	14
High Critical	19	High Critical	32	High Critical	32	High Critical	15

- Click and Toggle on **Fahrenheit F °** and view the temperature information stored in Fahrenheit °

enLOGIC Outlet Metered, Outlet Switched PDU x.x.x.x License

Welcome admin Logout

PDU Thresholds

Device Detection Threshold [✎](#)
Threshold(mA)

Power Threshold Input Phases Circuit Breaker Control Management **External Sensors**

External Sensors(1:1) ✎		External Sensors(1:2) ✎		External Sensors(1:3) ✎		External Sensors(1:4) ✎	
Name	RH	Name	T3	Name	T1	Name	T2
Type	Humidity	Type	Temperature	Type	Temperature	Type	Temperature
Low Critical	16	Low Critical	59	Low Critical	59	Low Critical	54
Low Warning	17	Low Warning	64	Low Warning	64	Low Warning	55
High Warning	18	High Warning	81	High Warning	81	High Warning	57
High Critical	19	High Critical	90	High Critical	90	High Critical	59



Monitoring the External Sensor

You can view the sensor details including name, location, value, etc.

1. From the Dashboard in the Web Interface, go to the **External Sensors** section or **Settings/PDU thresholds** to view all connected external sensors to view details.

enLOGIC Outlet Metered, Outlet Switched PDU 1.A.7.3

Welcome admin Logout

PDU Thresholds

Device Detection Threshold

Threshold(mA) -956301139

Power Threshold Input Phases Circuit Breaker Control Management **External Sensors**

External Sensors(1:1)		External Sensors(1:2)		External Sensors(1:3)	
Name	DOOR SWITCH 1	Name	T	Name	RH
Type	Door	Type	Temperature	Type	Humidity
Value	Off	Low Critical	17	Low Critical	18
		Low Warning	18	Low Warning	19
		High Warning	19	High Warning	21
		High Critical	20	High Critical	23

Edit

External Sensors(1:2)

High Critical	20
Enable High Critical	<input type="radio"/>
High Warning	19
Enable High Warning	<input checked="" type="checkbox"/>
Low Warning	18
Enable Low Warning	<input checked="" type="checkbox"/>
Low Critical	17
Enable Low Critical	<input type="radio"/>

Save



Daisy Chain and RNA–Redundant Network Access Daisy-Chain Functionality

In daisy chain mode, up to **64** PDUs can be connected via one (1) IP address. This allows the user to gather information and data of all daisy chained PDUs from the master PDU.

The daisy chain functionality reduces the network services cost for PDUs. For example, a standard network switch is used in a data center can contain 24 ports. Without using the daisy chain function, each port supplies network services to one (1) PDU. However, if using the daisy chain features of Enlogic, a typical network switch with 24 ports can supply network services for up to **1536** PDUs.

Daisy-Chain Setup

Follow below steps to setup the connection up to **64** PDUs of the same SKU via single IP address:

1. Configure the PDU, which is first in line on the Daisy Chain.

Note: Refer to the *Network Settings* section for more information.

2. After the initial PDU is configured, connect the Ethernet cord from the 10/100 port (on the configured PDU) to the 10/100/1000 port (on the second PDU) in the daisy chain line.
3. Repeat **step 2**, connecting PDUs from the 10/100 port to the 10/100/1000 port for up to **64** PDUs.


Note: The length of the Ethernet cords connecting the PDUs must be less than 6 m (20 ft.).

4. By default, the Daisy Chain command is enabled in the PDU configuration file and default mode of the PDU is QNA. Go to the **web interface** (or management software) to manage and control the PDUs in the Daisy Chain.



RNA (Redundant Network Access) Functionality

Enlogic RNA allows secure access of PDU data and statistics on two separate private networks. RNA is used with a redundant power delivery design including two rack PDUs for each IT rack. PDUs are used in RNA applications that must be the same SKU.

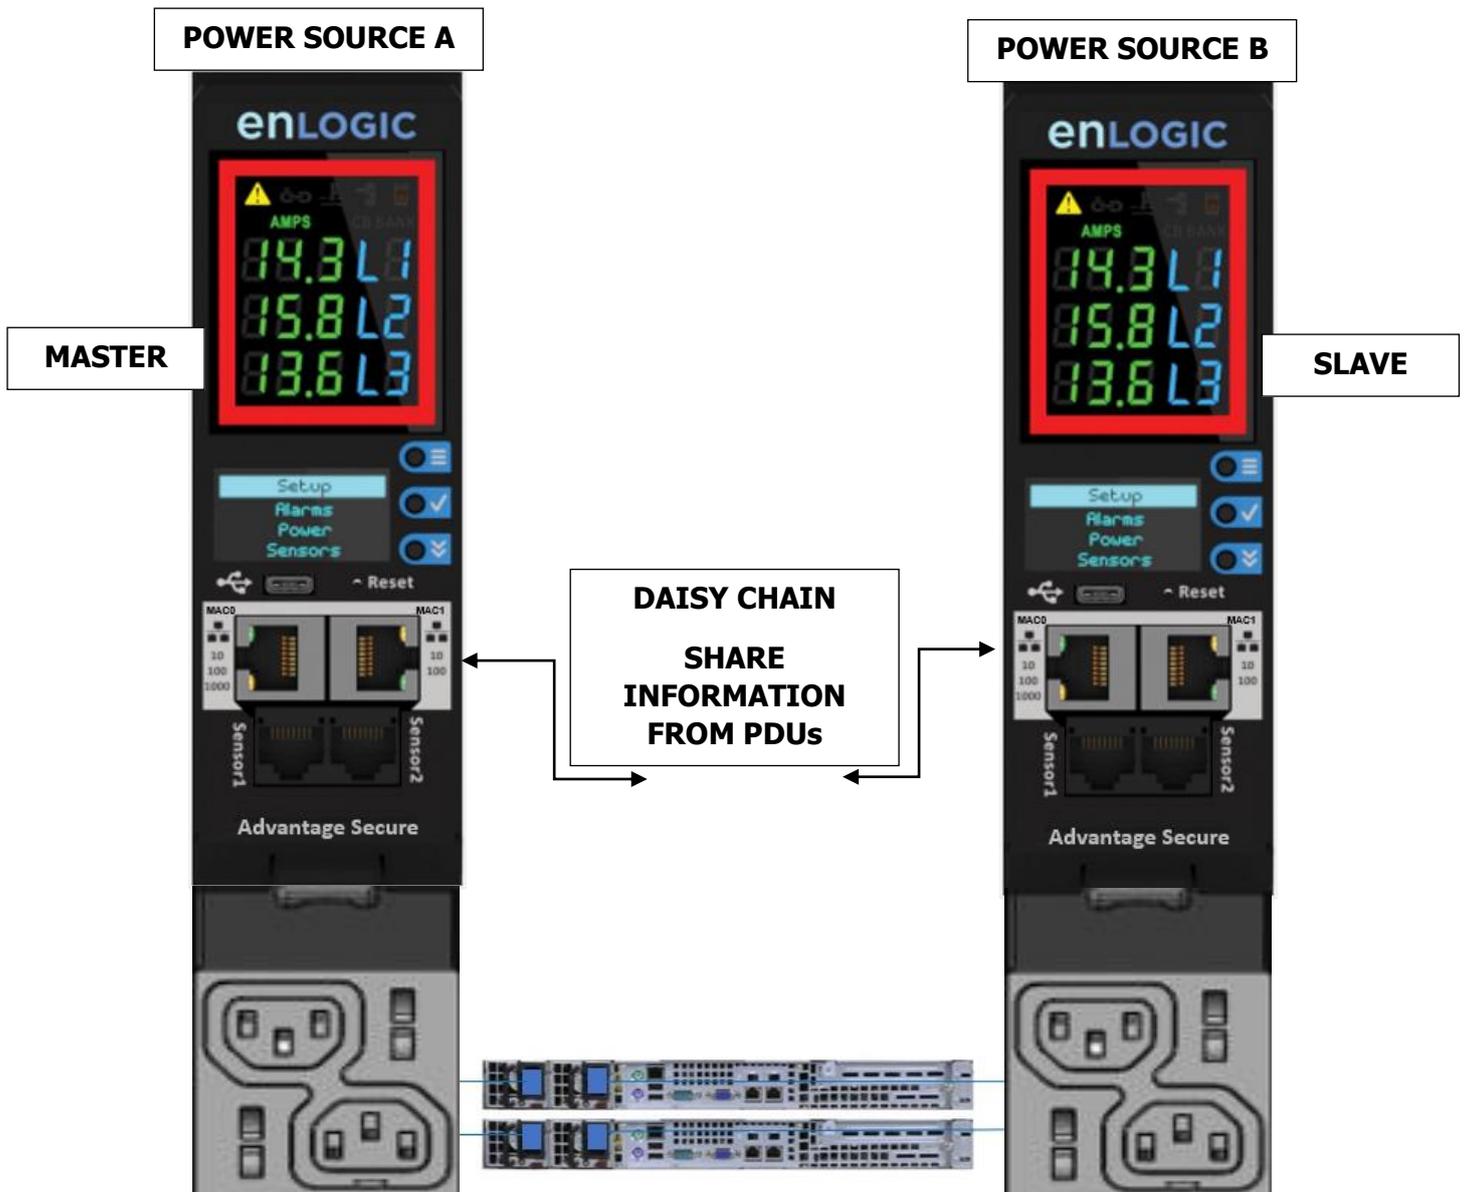



How it Works

- Using Enlogic RNA, the landlord and tenant maintain two separate private networks that do not overlap.
- Enlogic RNA works using a redundant power delivery design (i.e., two rack PDUs for each IT rack).
- Each PDU is separately connected to the Tenant or Landlord's private communications network.
- The two PDUs are connected with the data communications bus to allow PDUs to share user-defined information.
- Each PDU acts like a master PDU to report PDU data to both networks.



RNA Setup

To setup RNA mode on Daisy chain setup the user must,

1. Configure the PDU for RNA Mode (using CLI).
2. Connect the LAN Network cords and Ethernet cords between PDUs.

To Connect PDUs for RNA Setup


After the PDUs are configured for RNA

1. Connect the LAN network cable from network switch to the PDU1 Port1.
2. Connect another LAN NETWORK cable to Port 2 of last PDU in the daisy chain setup.
3. Connect the Ethernet cable from the Landlord PDU port 2 to Tenant PDU port 1 (to establish daisy chain connection).
4. Next step is to configure RNA mode to establish RNA connection.

To Configure RNA Mode in the CLI

1. Login to the CLI and type the command `'dev daisy rna'` on the last PDU of daisy chain setup.
2. The following message will appear:
SUCCESS
System Reboot now, Are you sure? (Y/ N)
3. Type Y to confirm reboot.
4. After reboot, the PDU will be setup to RNA Mode.

Note: RNA mode enabled PDU's should not be placed in between the daisy chain system.

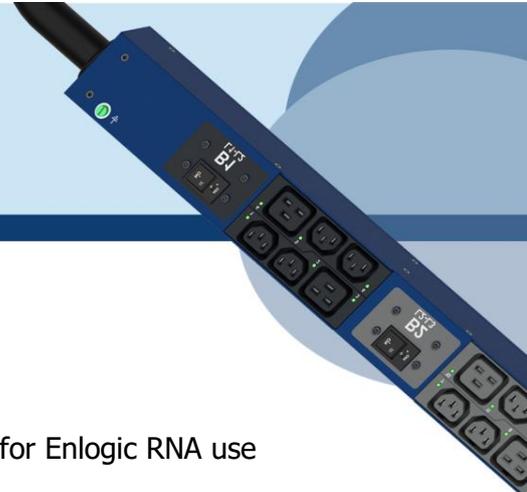

Daisy Chain and RNA Commands in CLI

The following is a list of executable commands available in the CLI for Enlogic RNA use only.

Command	Description	Example
dev daisy rna	Changes mode from daisy chain to RNA	EN2.0> dev daisy rna System Reboot now, Are you sure?(Y/ N):
dev daisy qna	Changes mode from RNA to daisy chain	EN2.0> dev daisy qna System Reboot now, Are you sure?(Y/ N):



Firmware Update Procedures

Enlogic iPDUs and Inline Meters can be updated to support the most recent firmware by Enlogic in a variety of ways.

USB Method

1. Go to www.enlogic.com and download the most recent Firmware version, 'enlogic.fw'.
2. Select Firmware Upload and click Yes to confirm.

Note: *The OLED will show the Firmware update progress. It also shows the process of updating. When the update is complete, the PDU will automatically reboot.*

3. Go to **Setup** and select **Device** and **Firmware** to confirm that the Firmware uploaded successfully.



Web Interface Method

1. Go to www.enlogic.com and download the most recent Firmware version, enlogic.fw . Save this file into a folder location.
2. Go to System management page and select the Upload Firmware option.
3. Select the PDU you want to upload firmware and upload the enlogic.fw file.

The screenshot shows the enLOGIC web interface. The main page is titled 'System Management' and includes sections for 'System Information', 'Rack Location', and 'LED Edge Color'. A modal dialog box titled 'Upload Firmware' is open on the right side. The dialog contains a warning: 'You must keep your browser window open for the duration of the upload. PDU will reboot once the firmware is Upgraded.' Below the warning is a 'Choose PDU' dropdown menu with a list of PDU units from PDU 1 to PDU 16. PDU 1 is currently selected and highlighted in blue.

Note: PDU will reboot, and Firmware upgrade will complete.

4. To access the PDU using an FTPS program, FTPS must be enabled through the PDU Web Interface or through CLI or through SSH.
5. In the Web Interface, go to Network Settings -> FTPS.
6. Select the check box to **enable FTPS Access**.
7. Login to an FTP program with a role with administration privileges.
8. Transfer the firmware file enlogic.fw to /fw folder.
9. Connect to the PDU via SSH using a program such as HyperTerm or PUTTY.
10. Login using a role with administration privileges.
11. Execute the CLI command "sys upd all" to perform the FW upload operation.

After reboot message indication in console, push the "Y" from the prompt (Y/N) displays for the PDU reboot **Note:** For Master PDU / Standalone configuration, at the (Y/N) prompt will be appeared foever PDU reboot, type Y. When the upload is finished, the system will reboot automatically.



Questions and Answers (FAQs)

Q1. What are the differences between Advantage Series and Advantage Secure PDUs (or NMCs)?”

Answer: Advantage Secure is a newer offer that adds a cybersecurity feature called Secure Boot. This adds hardware support to provide a “root of trust” that increases protection against attempts to load non-authenticated firmware to the PDU. It also adds additional flash memory for future use.

Q2. Are there any changes to the firmware file's format from earlier iterations for the Enlogic Firmware?

Answer: Unlike previous compressed or zipped files [.tar/.zip], the firmware file for all new versions will be provided in the **enlogic.fw** format.

Q3. How can we upgrade current or new NMCs to the new firmware version 3.1.3?

Answer: Follow the steps mentioned before for the current in use or new NMCs:

- The firmware upgrades should be performed in the following order for **Advantage Series NMCs**:
 - Firmware version 2.0.6.7 .
 - Upgrade Bridge firmware 3.0.0.2 using the update folder in the USB, or enlogic.tar using the WEBUI & FTPS.
 - From, 3.0.0.2 [bridge firmware] to flash new firmware [3.1.3] use **enlogic.fw** using USB, WEBUI & FTPS.
- The firmware upgrades should be performed in the following order for **Advantage Secure NMCs**:
 - Firmware version 3.0.4 .
 - From, 3.0.4 to flash new firmware [3.1.3] use **enlogic.fw** using USB, WEBUI & FTPS.

Q4. Will the MIB files in the new Firmware support IPv6 addresses?

Answer: The new Firmware will support a new MIB file that contains IPv6 addresses.



Q5. When updating from a lower firmware version to a version 3.1.3 or later, are there any specific actions recommended?

Answer: It is recommended for users to execute the command "**dbg energyclr**", to erase all previously saved energy accumulation values from the PDU. Customer service can assist by providing a script that can accommodate a list of PDU addresses.

Q6. When updating from a lower firmware version to a version 3.1.3 or later, can the firmware then be downgraded to a previous version?

Answer: Due to underlying file system improvements made in version 3.1.3, downgrades to a previous firmware version are not supported.

Q7. Can older iPDUs support the new AdvantEdge Secure NMCs and Hot Swapping?

Answer: Older iPDU's NMCs cannot be hot swapped with the new AdvantEdge Secure NMCs.

Q8. After updating firmware to a new version, can I use a configuration file created from the previous firmware version?

Answer: After flashing the new Firmware, previously stored configuration files cannot be used.

Q9. What should a user do if they see an iPDU transitioning into an unknown state?

Answer: If this happens, the user can perform a soft RESET on the iPDU.

<p>NMC Reboot [RST]</p>	<p>Use a pin, press, and hold the recessed RESET key button for about 8 seconds, which will initiate the reset option without changing any configuration values. The OLED display will show the RST during this operation.</p>
-------------------------	--



Reset Key Button : Use this recessed Pin hole for the Reset functionality.

